
# Service Manual Air-to-Water Hydromodule + Tank

Indoor Unit WH-ADC0316M9E82 WH-ADC0316M9E8AN2 Outdoor Unit WH-WXG09ME8 WH-WXG12ME8 WH-WXG16ME8

> Destination Europe

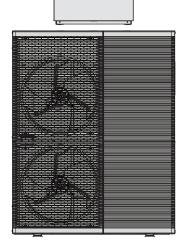

## 

This service information is designed for experienced repair technicians only and is not designed for use by the general public. It does not contain warnings or cautions to advise non-technical individuals of potential dangers in attempting to service a product. Products powered by electricity should be serviced or repaired only by experienced professional technicians. Any attempt to service or repair the products dealt with in this service information by anyone else could result in serious injury or death.

#### IMPORTANT SAFETY NOTICE

There are special components used in this equipment which are important for safety. These parts are marked by  $\Delta$  in the Schematic Diagrams, Circuit Board Diagrams, Exploded Views and Replacement Parts List. It is essential that these critical parts should be replaced with manufacturer's specified parts to prevent shock, fire or other hazards. Do not modify the original design without permission of manufacturer.

### PRECAUTION OF LOW TEMPERATURE

In order to avoid frostbite, be assured of no refrigerant leakage during the installation or repairing of refrigerant circuit.

R290 REFRIGERANT

This AIR-TO-WATER HEATPUMP contains and operates with refrigerant R290. THIS PRODUCT MUST ONLY BE INSTALLED OR SERVICED BY QUALIFIED PERSONNEL Refer to National, State, Territory and local legislation, regulations, codes, installation & operation manuals, before the installation, maintenance and/or service of this product.



© Panasonic Corporation 2024.

# TABLE OF CONTENTS

1.	Saf	ety Precautions	4
2.		caution For Using R290 Refrigerant	
3.	Spe	ecifications	12
	3.1 3.2 3.3 3.4	WH-ADC0316M9E82 WH-WXG09ME8 WH-ADC0316M9E82 WH-WXG12ME8 WH-ADC0316M9E82 WH-WXG16ME8 WH-ADC0316M9E8AN2 WH-WXG09ME8	.16 .20
	3.5	WH-ADC0316M9E8AN2 WH-WXG12ME8	.24  28
	3.6	WH-ADC0316M9E8AN2 WH-WXG16ME8	
4.	Fea	atures	.36
5.	Loc	cation of Controls and Components	.37
	5.1 5.2	Indoor Unit Outdoor Unit	
6.	Din	nensions	73
	6.1 6.2	Indoor Unit Outdoor Unit	
7.		frigeration and Water Cycle Diagram	
8.	Blo	ock Diagram	76
9.	Wir	ring Connection Diagram	
	9.1 9.2	Indoor Unit Outdoor Unit	
10	. Ele	ctronic Circuit Diagram	80
	10.1 10.2	Indoor Unit Outdoor Unit	
11	. Priı	nted Circuit Board	83
	11.1 11.2	Indoor Unit Outdoor Unit	
12	. Ins	tallation Instruction	88
	12.3 12.4	Appendix	00 31 32 49
13		tallation and Servicing Air-to-Water using 901	
	13.2 13.3 13.4	About R290 Refrigerant	64 in 66 ant 70
		eration and Control1	
	14.2	Basic Function1 Water Pump1 Extra Pump Function (Optional)1	84

14.4		
14.5	-	
14.6		
14.7		
	when Operating in Standalone)	. 191
14.8		
	Operating in Standalone)	. 192
14.9	Base Pan Heater Control (Optional)	. 193
14.1	10 Force Heater Mode	. 193
	11 Powerful Operation	
	12 Quiet Operation	
	13 Sterilization Mode	
14.1	14 DHW Circulation Pipe Sterilization Opera	tion .
14.1	15 Outdoor Ambient Thermo OFF Control	. 197
14.1	16 Alternative Outdoor Ambient Sensor Con	trol
		. 197
	17 Force DHW mode	
14.1	18SMART DHW mode	. 198
14.1	19Efficiency Tank Mode Operation	. 199
14.2	20 Anti Freeze Control	. 199
14.2	21 Solar Operation (Optional)	. 201
14.2	22 Boiler Bivalent Control	. 202
14.2	23 External Room Thermostat Control (Optio	onal)
14.2	24 Three Ways Valve Control	. 205
	25 Two Ways Valve Control	
	26 Anti-Stick Mode Operation	
	27 External OFF/ON Control	
14.2	28 External Compressor Switch (Optional PC	CB)
		. 208
14.2	29 Heat/Cool Switch (Optional PCB)	. 208
14.3	30 SG Ready Control (Optional PCB)	. 209
14.3	31 Demand Control (Optional PCB)	. 211
	32 Holiday Mode	
	33 Dry Concrete	
	34 Flow Sensor	
	rotection Control	
-		-
	1 Protection Control for All Operations	
15.2	2 Protection Control for Heating Operation.	
		. 215
15.3	3 Protection Control for Cooling Operation.	
		. 216
16. Se	ervicing Guide	. 217
	-	
16.1		
	2 Test Run	
16.3		
16.4	Pump Down Procedures	
16.4	+ Fullip Down Flocedules	. 210 210
		219
16.6		. 220
16.7	7 EEPROM Factory Default Data Setup Procedure	201
16.8		
17. M	aintenance Guide	. 224
17.1	1 Maintenance for Magnetic Water Filter Se	et

1	8. Tro	oubleshooting Guide	229
		Refrigeration Cycle System Relationship between the Condition of the to-Water Heatpump Indoor and Outdoor I and Pressure and Electric Current	e Air- Units
		Breakdown Self Diagnosis Function	
		Error Codes Table	
	18.5	Self-diagnosis Method	235
1	9. Dis	assembly and Assembly Instructions	283
		Indoor Unit Outdoor Unit	
2	0. Tec	chnical Data	291
	20.2	Operation Characteristics Heating Capacity Table Cooling Capacity Table	303
2	1. Exp	oloded View and Replacement Parts Lis	
	••••		306
		Indoor Unit Outdoor Unit	

•

## **1. Safety Precautions**

- Read the following "SAFETY PRECAUTIONS" carefully before installation of Air-To-Water Hydromodule + Tank (here after referred to as "Tank Unit").
- Electrical works and water installation works must be done by licensed electrician and licensed water system installer respectively. Be sure to use the correct rating and main circuit for the model to be installed.
- The caution items stated here must be followed because these important contents are related to safety. The meaning of each indication used is as below.

Incorrect installation due to ignorance or negligence of the instructions will cause harm or damage, and the seriousness is classified by the following indications.

• Please leave this installation manual with the unit after installation.

This indication shows the possibility of causing death or serious injury.
This indication shows the possibility of causing injury or damage to properties only.

The items to be followed are classified by the symbols:

$\bigcirc$	Symbol with white background denotes item that is PROHIBITED.
	Symbol with dark background denotes item that must be carried out.

- Carry out test run to confirm that no abnormality occurs after the installation. Then, explain to user the operation, care and maintenance as stated in instructions. Please remind the customer to keep the operating instructions for future reference.
- This appliance is not intended for accessibility by the general public.
- If there is any doubt about the installation procedure or operation, always contact the authorized dealer for advice and information.

1.	Do not use means to accelerate the defrosting process or to clean, other than those recommended by the manufacturer. Any unfit method or using incompatible material may cause product damage, burst and serious injury.	$\bigcirc$
2.	Do not install outdoor unit near handrail of veranda. When installing outdoor unit at veranda of high rise building, child may climb up to outdoor unit and cross over the handrail and causing accident.	$\bigcirc$
3.	Do not use unspecified cord, modified cord, joint cord or extension cord for power supply cord. Do not share the single outlet with other electrical appliances. Poor contact, poor insulation or over current will cause electrical shock or fire.	$\bigcirc$
4.	Do not tie up the power supply cord into a bundle by band. Abnormal temperature rise on power supply cord may happen.	$\bigcirc$
5.	Do not insert your fingers or other objects into the unit, high speed rotating fan may cause injury.	$\bigcirc$
6.	Do not sit or step on the unit, you may fall down accidentally.	$\bigcirc$
7.	Keep plastic bag (packaging material) away from small children, it may cling to nose and mouth and prevent breathing.	$\bigcirc$
8.	Do not purchase unauthorized electrical parts for installation, service, maintenance and etc They might cause electrical shock or fire.	$\bigcirc$
9.	Do not modify the wiring of outdoor unit for installation of other components (i.e. heater, etc). Overloaded wiring or wire connection points may cause electrical shock or fire.	$\bigcirc$
10	. Do not pierce or burn as the appliance is pressurized. Do not expose the appliance to heat, flame, sparks, or other sources of ignition. Else, it may explode and cause injury or death.	$\bigcirc$
11	. Do not add or replace refrigerant other than specified type. It may cause product damage, burst and injury etc.	$\bigcirc$
12	. Do not place containers with liquids on top of the Tank Unit. It may cause Tank Unit damage and/or fire could occurs if they leak or spill onto the Tank Unit.	$\bigcirc$
13	. Do not use joint cable for Tank Unit / Outdoor Unit connection cable. Use specified Tank Unit / Outdoor Unit connection cable, refer to	
	instruction 4 <b>CONNECT THE CABLE TO THE TANK UNIT</b> and connect tightly for Tank Unit / Outdoor Unit connection. Clamp the cable so that no external force will be acted on the terminal. If connection or fixing is not perfect, it will cause heat up or fire at the connection.	$\oslash$
14	. For electrical work, follow the national regulation, legislation and this installation instructions. An independent circuit and single outlet must be used. If electrical circuit capacity is not enough or defect found in the electrical work, it will cause electrical shock or fire.	0
15	For electrical work, follow local wiring standard, regulation and this installation instruction. An independent circuit and single outlet must be used. If electrical circuit capacity is not enough or defect found in electrical work, it will cause electrical shock or fire.	0
16	. For water circuit installation work, follow to relevant European and national regulations (including EN61770) and local plumbing and building regulation codes.	0


17. Engage authorized dealer or specialist for installation. If installation done by the user is incorrect, it will cause water leakage, electrical shock or fire.	0
18. Engage dealer or specialist for installation. If installation done by the user is defective, it will cause water leakage, electrical shock or fire.	0
<ul> <li>19. • The refrigerant cycle is completed inside the outdoor unit.</li> <li>• Refrigerant piping work is not required.</li> <li>• Pump down operation is not also required.</li> </ul>	0
20. Install at a strong and firm location which is able to withstand weight of the set. If the strength is not enough or installation is not properly done, the set will drop and cause injury.	0
21. This equipment is strongly recommended to be installed with Residual Current Device (RCD) on-site according to the respective national wiring rules or country-specific safety measures in terms of residual current.	0
22. For refrigeration system work, install according to this installation instructions strictly. If installation is defective, it will cause water leakage, electrical shock or fire.	0
23. Do not use joint cable for outdoor connection cable. Use specified outdoor connection cable, refer to instruction (6) CONNECT THE CABLE TO THE OUTDOOR UNIT and connect tightly for outdoor connection. Clamp the cable so that no external force will be acted on the terminal. If connection or fixing is not perfect, it will cause heat up or fire at the connection.	0
24. Wire routing must be properly arranged so that control board cover is fixed properly. If control board cover is not fixed perfectly, it will cause fire or electrical shock.	0
25. After completion of installation, confirm there is no leakage of refrigerant gas. It may lead to the risk of fire or explosion when the refrigerant contacts with fire.	0
26. Ventilate the room if there is refrigerant gas leakage during operation. Extinguish all fire sources if present. It may lead to the risk of fire or explosion when the refrigerant contacts with fire.	0
27. Use the attached accessories parts and specified parts for installation. Otherwise, it will cause the set to fall, water leakage, fire or electrical shock.	0
28. Only use the supplied or specified installation parts. Else, it may causes unit vibrate, fall, water leakage, electrical shock or fire.	0
29. If there is any doubt about the installation procedure or operation, always contact the authorized dealer for advice and information.	0
30. Select a location where in case of water leakage, the leakage will not cause damage to other properties.	0
31. When installing electrical equipment at wooden building of metal lath or wire lath, in accordance with electrical facility standard, no electrical contact between equipment and building is allowed. Insulator must be installed in between.	0
32. Any work carried out on the Tank Unit after removing any panels which is secured by screws, must be carried out under the supervision of authorized dealer and licensed installation contractor.	0
33. Any work carried out on the outdoor unit after removing any panels which is secured by screws, must be carried out under the supervision of authorized dealer and licensed installation contractor.	0
34. This system is multi supply appliance. All circuits must be disconnected before accessing the unit terminals.	0
35. For cold water supply has a backflow regulator, check valve or water meter with check valve, provisions for thermal expansion of water in the hot water system must be provided. Otherwise it will cause water leakage.	0
36. The piping installation work must be flushed before Tank Unit is connected to remove contaminants. Contaminants may damage the Tank Unit components.	0
37. This installation may be subjected to building regulation approval applicable to respective country that may require to notify the local authority before installation.	0
38. The Tank Unit must be shipped and stored in upright condition and dry environment. It may laid on its back when being moved into the building.	0
39. Work done to the Tank Unit after remove the front plate cover that secured by screws, must be carried out under the supervision of authorized dealer, licensed installation contractor, skilled person and instructed person.	0
40. Be aware that refrigerants may not contain an odour.	0
41. This equipment must be properly earthed. Earth line must not be connected to gas pipe, water pipe, earth of lightning rod and telephone. Otherwise, it may cause electrical shock in case of equipment breakdown or insulation breakdown.	Ø
42. This unit must be properly earthed. The electrical earth must not be connected to a gas pipe, water pipe, the earth of lightening rod or a telephone. Otherwise there is a danger of electrical shock in the event of an insulation breakdown or electrical earth fault in the outdoor unit.	Ø

1. Do not install the Tank Unit at place where leakage of flammable gas may occur. In case gas leaks and accumulates at surrounding of the unit, it may cause fire.	$\bigcirc$
2. Do not install the outdoor unit at place where leakage of flammable gas may occur. In case gas leaks and accumulates at surrounding of the unit, it may cause fire.	$\bigcirc$
3. Prevent liquid or vapor from entering sumps or sewers since vapor is heavier than air and may form suffocating atmospheres.	$\bigcirc$
4. Do not release refrigerant during repairing a refrigeration parts. Take care of the liquid refrigerant, it may cause frostbite.	$\bigcirc$
5. Do not install this appliance in a laundry room or other high humidity location. This condition will cause rust and damage to the unit.	$\bigcirc$
6. Make sure the insulation of power supply cord does not contact hot part (i.e. water piping) to prevent from insulation failure (melt).	$\bigcirc$
7. Do not touch the sharp aluminium fin, sharp parts may cause injury.	$\bigcirc$
8. Do not apply excessive force to water pipes that may damage the pipes. If water leakage occurs, it will cause flooding and damage to other properties.	$\bigcirc$
9. Do not transport the Tank Unit with water inside the unit. It may cause damage to the unit.	$\bigcirc$
10. Carry out drainage piping as mentioned in installation instructions. If drainage is not perfect, water may enter the room and damage the furniture.	0
11. Select an installation location which is easy for maintenance. Incorrect installation, service or repair of this Tank Unit may increase the risk of rupture and this may result in loss damage or injury and/or property.	0
<ul> <li>12. Power supply connection <ul> <li>Power supply point should be in easily accessible place for power disconnection in case of emergency.</li> <li>Comply with local national wiring standard, regulation, and this installation instruction.</li> <li>Strongly recommended to make permanent connection to a circuit breaker.</li> <li>Power supply: Use approved 20A 4-poles circuit breaker with a minimum contact gap of 3.0mm.</li> </ul></li></ul>	0
13. Ensure the correct polarity is maintained throughout all wiring. Otherwise, it will cause electrical shock or fire.	0
14. After installation, check the water leakage condition in connection area during test run. If leakage occurs, it will cause damage to other properties.	0
15. If the Tank Unit not operates for long time, the water inside the Tank Unit should be drained.	0
16. Installation work. It may need three or more people to carry out the installation work. The weight of Tank Unit might cause injury if carried by one person.	0
<ol> <li>Installation work.</li> <li>It may need two or more people to carry out the installation work. The weight of outdoor unit might cause injury if carried by one person.</li> </ol>	0
18. Keep any required ventilation openings clear of obstruction.	0
19. Water piping in the occupied space shall be installed in such a way to protect against accidental damage in operation and service.	0
20. Precautions shall be taken to avoid excessive vibration or pulsation to water piping.	0
21. Protect the water piping from accidental rupture due to moving furniture or reconstruction activities.	0
22. • Must ensure the installation of water pipe-work shall be kept to a minimum. Avoid use dented pipe and do not allow acute bending. • Must ensure that water pipe-work shall be protected from physical damage.	0

# 2. Precaution For Using R290 Refrigerant

• Pay careful attention to the following points:

1.	The mixing of different refrigerants within a system is prohibited.	0
2.	Operation, maintenance, repairing and refrigerant recovery should be carried out by trained and certified personnel in the use of flammable refrigerants and as recommended by the manufacturer. Any personnel conducting an operation, servicing or maintenance on a system or associated parts of the equipment should be trained and certified.	0
3.	Any part of refrigerating circuit (evaporators, air coolers, AHU, condensers or liquid receivers) or piping should not be located in the proximity of heat sources, open flames, operating gas appliance or an operating electric heater.	0
4.	The user/owner or their authorized representative shall regularly check the alarms, mechanical ventilation and detectors, at least once a year, where as required by national regulations, to ensure their correct functioning.	0
5.	A logbook shall be maintained. The results of these checks shall be recorded in the logbook.	0
6.	In case of ventilations in occupied spaces shall be checked to confirm no obstruction.	0
7.	Before a new refrigerating system is put into service, the person responsible for placing the system in operation should ensure that trained and certified operating personnel are instructed on the basis of the instruction manual about the construction, supervision, operation and maintenance of the refrigerating system, as well as the safety measures to be observed, and the properties and handling of the refrigerant used.	0
8.	<ul> <li>The general requirement of trained and certified personnel are indicated as below:</li> <li>a) Knowledge of legislation, regulations and standards relating to flammable refrigerants; and,</li> <li>b) Detailed knowledge of and skills in handling flammable refrigerants, personal protective equipment, refrigerant leakage prevention, handling of cylinders, charging, leak detection, recovery and disposal; and,</li> <li>c) Able to understand and to apply in practice the requirements in the national legislation, regulations and Standards; and,</li> <li>d) Continuously undergo regular and further training to maintain this expertise.</li> </ul>	0
9.	Ensure protection devices, refrigerating circuit and fittings are well protected against adverse environmental effects (such as the danger of water collecting and freezing in relief pipes or the accumulation of dirt and debris).	0

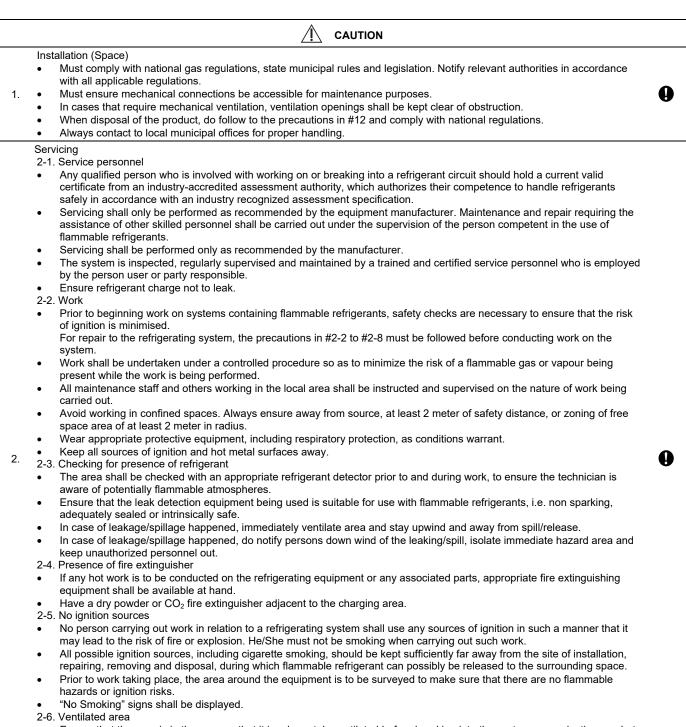

- Ensure that the area is in the open or that it is adequately ventilated before breaking into the system or conducting any hot work.
- A degree of ventilation shall continue during the period that the work is carried out.
- The ventilation should safely disperse any released refrigerant and preferably expel it externally into the atmosphere.

2	<ul> <li>At all times the manufacturer's maintenance and service guidelines shall be followed.</li> <li>If in doubt consult the manufacturer's technical department for assistance.</li> </ul>	
2.	<ul> <li>2-8. Checks to electrical devices</li> <li>Repair and maintenance to electrical components shall include initial safety checks and component inspection procedures.</li> <li>Initial safety checks shall include but not limit to:- <ul> <li>That capacitors are discharged: this shall be done in a safe manner to avoid possibility of sparking.</li> <li>That there are no live electrical components and wiring are exposed while charging, recovering or purging the system.</li> <li>That there is continuity of earth bonding.</li> </ul> </li> <li>At all times the manufacturer's maintenance and service guidelines shall be followed.</li> <li>If in doubt consult the manufacturer's technical department for assistance.</li> <li>If a fault exists that could compromise safety, then no electrical supply shall be connected to the circuit until it is satisfactorily dealt with.</li> </ul>	•
3.	<ul> <li>Repairs to sealed components</li> <li>During repairs to sealed components, all electrical supplies shall be disconnected from the equipment being worked upon prior to any removal of sealed covers, etc.</li> <li>If it is absolutely necessary to have an electrical supply to equipment during servicing, then a permanently operating form of leak detection shall be located at the most critical point to warn of a potentially hazardous situation.</li> <li>Particular attention shall be paid to the following to ensure that by working on electrical components, the casing is not altered in such a way that the level of protection is affected. This shall include damage to cables, excessive number of connections, terminals not made to original specification, damage to seals, incorrect fitting of glands, etc.</li> <li>Ensure that apparatus is mounted securely.</li> </ul>	9
4.	<ul> <li>Repair to intrinsically safe components</li> <li>Do not apply any permanent inductive or capacitance loads to the circuit without ensuring that this will not exceed the permissible voltage and current permitted for the equipment in use.</li> <li>Intrinsically safe components are the only types that can be worked on while live in the presence of a flammable atmosphere.</li> <li>The test apparatus shall be at the correct rating.</li> <li>Replace components only with parts specified by the manufacturer. Unspecified parts by manufacturer may result ignition of refrigerant in the atmosphere from a leak.</li> </ul>	0
( 5.	<ul> <li>Cabling</li> <li>Check that cabling will not be subject to wear, corrosion, excessive pressure, vibration, sharp edges or any other adverse environmental effects.</li> <li>The check shall also take into account the effects of aging or continual vibration from sources such as compressors or fans.</li> </ul>	0
6. •	<ul> <li>Detection of flammable refrigerants</li> <li>Under no circumstances shall potential sources of ignition be used in the searching or detection of refrigerant leaks.</li> <li>A halide torch (or any other detector using a naked flame) shall not be used.</li> </ul>	0

	The following leak detection methods are deemed acceptable for all refrigerant systems.
	<ul> <li>No leaks shall be detected when using detection equipment with a sensitivity of 5 grams per year of refrigerant or better under a pressure of at least 0,25 times the maximum allowable pressure (&gt;0.98MPa, max 3.90MPa). For example, a universal sniffer.</li> </ul>
	<ul> <li>Electronic leak detectors may be used to detect flammable refrigerants, but the sensitivity may not be adequate, or may need re-calibration.</li> </ul>
	<ul> <li>(Detection equipment shall be calibrated in a refrigerant-free area.)</li> <li>Ensure that the detector is not a potential source of ignition and is suitable for the refrigerant used.</li> </ul>
	<ul> <li>Leak detection equipment shall be set at a percentage of the LFL of the refrigerant and shall be calibrated to the refrigerant employed and the appropriate percentage of gas (25 % maximum) is confirmed.</li> </ul>
	• Leak detection fluids are also suitable for use with most refrigerants, for example, bubble method and fluorescent method agents. The use of detergents containing chlorine shall be avoided as the chlorine may react with the refrigerant and
	<ul><li>corrode the copper pipe-work.</li><li>If a leak is suspected, all ignition sources shall be removed/extinguished.</li></ul>
	<ul> <li>If a leakage of refrigerant is found which requires brazing, all of the refrigerant shall be recovered from the system.</li> <li>The precautions in #8 must be followed to remove the refrigerant.</li> </ul>
	Removal and evacuation
	<ul> <li>When breaking into the refrigerant circuit to make repairs – or for any other purpose – conventional procedures shall be used.</li> </ul>
	However, it is important that best practice is followed since flammability is a consideration. The following procedure shall be adhered to:
	<ul> <li>remove refrigerant -&gt; • purge the circuit with inert gas -&gt; • evacuate -&gt; • purge with inert gas -&gt;</li> <li>open the circuit by cutting.</li> <li>Brazing must not be used.</li> </ul>
5.	<ul> <li>The refrigerant charge shall be recovered into the correct recovery cylinders.</li> <li>The system shall be purged with OFN to render the appliance safe. (remark: OFN = oxygen free nitrogen, type of inert gas)</li> <li>This process may need to be repeated several times.</li> <li>Compressed air or oxygen shall not be used for this task.</li> </ul>
	<ul> <li>Purging shall be achieved by breaking the vacuum in the system with OFN and continuing to fill until the working pressure is achieved, then venting to atmosphere, and finally pulling down to a vacuum.</li> </ul>
	• This process shall be repeated until no refrigerant is within the system. (Until the concentration of purge gas is 0.25 LFL or less by the leak detector). *0.25LFL = 0.525Vol%
	<ul> <li>When the final OFN charge is used, the system shall be vented down to atmospheric pressure to enable work to take place.</li> </ul>
	<ul> <li>This operation is absolutely vital if brazing operations on the pipe work are to take place.</li> <li>Ensure that the outlet for the vacuum pump is not close to any potential ignition sources and there is ventilation available.</li> </ul>
	Charging procedures
	<ul> <li>In addition to conventional charging procedures, the following requirements shall be followed.</li> <li>Ensure that contamination of different refrigerants does not occur when using charging equipment.</li> </ul>
	<ul> <li>Hoses or lines shall be as short as possible to minimize the amount of refrigerant contained in them.</li> </ul>
	<ul> <li>Cylinders shall be kept in an appropriate position according to the instructions.</li> <li>Ensure that the refrigerating system is earthed prior to charging the system with refrigerant.</li> </ul>
).	<ul> <li>Ensure that the refrigerating system is earthed prior to charging the system with refrigerant.</li> <li>Label the system when charging is complete (if not already).</li> </ul>
	- Extreme care shall be taken not to over fill the refrigerating system.
	<ul> <li>Prior to recharging the system it shall be pressure tested with OFN (refer to #8).</li> <li>The system shall be leak tested on completion of charging but prior to commissioning.</li> </ul>
	A follow up leak test shall be carried out prior to leaving the site.
	<ul> <li>Electrostatic charge may accumulate and create a hazardous condition when charging and discharging the refrigerant. To avoid fire or explosion, dissipate static electricity during transfer by grounding and bonding containers and equipment before charging/discharging.</li> </ul>

De • • •	<ul> <li>commissioning Before carrying out this procedure, it is essential that the technician is completely familiar with the equipment and all its details. It is recommended good practice that all refrigerants are recovered safely. Re-use of recovered refrigerant is prohibited. It is essential that electrical power is available before the task is commenced. a) Become familiar with the equipment and its operation. b) Isolate system electrically. c) Before attempting the procedure ensure that: <ul> <li>• mechanical handling equipment is available, if required, for handling refrigerant cylinders;</li> <li>• all personal protective equipment and leak detectors are available and being used correctly;</li> <li>• the recovery process is supervised at all times by a competent person;</li> <li>• recovery equipment and cylinders conform to the appropriate standards.</li> </ul> </li> <li>d) Make sure that cylinder is situated on the scales before recovery takes place.</li> <li>e) Start the recovery machine and operate in accordance with instructions.</li> <li>f) Do not over fill cylinders. (No more than 80 % volume liquid charge).</li> <li>g) Do not exceed the maximum working pressure of the cylinder, even temporarily.</li> <li>h) When the cylinders have been filled correctly and the process completed, make sure that the cylinders and the equipment are removed from site promptly and all isolation valves on the equipment are closed off. Electrostatic charge may accumulate and create a hazardous condition when charging or discharging the refrigerant. To avoid fire or explosion, dissipate static electricity during transfer by grounding and bonding containers and equipment</li> </ul>
La 11.	before charging/discharging. belling Equipment shall be labelled stating that it has been de-commissioned and emptied of refrigerant. The label shall be dated and signed. Ensure that there are labels on the equipment stating the equipment contains flammable refrigerant.
12.	Conservery When removing refrigerant from a system, either for servicing or decommissioning, it is recommended good practice that all refrigerants are removed safely. When removing refrigerant into cylinders, ensure that only appropriate refrigerant recovery cylinders are employed. Ensure that the correct number of cylinders for holding the total system charge are available. All cylinders to be used are designated for the recovered refrigerant and labelled for that refrigerant (i.e. special cylinders for the recovery of refrigerant). Cylinders shall be complete with pressure relief valve and associated shut-off valves in good working order. Recovery cylinders are evacuated and, if possible, cooled before recovery occurs. The recovery equipment shall be in good working order with a set of instructions concerning the equipment that is at hand and shall be suitable for the recovery of flammable refrigerants. Make sure the recovery equipment is not a potential ignition source and is suitable for the refrigerant you are using. In addition, a set of calibrated weighing scales shall be available and in good working order. Hoses shall be complete with leak-free disconnect couplings and in good condition. Before using the recovery machine, check that it is in satisfactory working order, has been properly maintained and that any associated electrical components are sealed to prevent ignition in the event of a refrigerant release. Consult manufacturer if in doubt. The recovered refrigerant shall be returned to the refrigerant supplier in the correct recovery cylinder, and the relevant Waste Transfer Note arranged. Do not mix refrigerants in recovery units and especially not in cylinders. If compressors or compressor oils are to be removed, ensure that they have been evacuated to an acceptable level to make certain that flammable refrigerant does not remain within the lubricant. The evacuation process shall be carried out prior to returning the compressor to the suppliers. Only electric heating to the

# 3. Specifications

## 3.1 WH-ADC0316M9E82 WH-WXG09ME8

	lt	em	Unit		Outdoor Unit	
Performance Tes	st Conditio	n		EN 14511		
				EN 14825		
		Condition (Ambient/Water)	A35W7			
Cooling Capacity	,		kW		9.00	
			BTU/h		30700	
Cooling EER			W/W		3.61	
			Condition (Ambient/Water)	A7W35		A2W35
Heating Capacity	/		kW	9.00		9.00
			BTU/h	30700		30700
Heating COP			W/W	5.23		3.81
	DHW			Warmer	Average	Colder
Heating Erp	Applicat	ion	Climate	Wanner	Average	Colder
	COP / n	wh	(W/W) / %	3.30 / 132	3.00 / 123	2.20 / 88
	AEC		kWh	753	831	1141
			Condition (Ambient/Water)	A35W7	A7W35	A2W35
Noise Level			dB (A)	Cooling: -	Heating: -	Heating: -
			Power Level dB	Cooling: 60***	Heating: 58*** Heating: 52***	Heating: 58*** Heating: 52***
Air Flow		m³/min (ft³/min)	Cooling: 97.0 (3426) Heating: 83.0 (2931)			
Refrigeration Control Device				Expansion Valve		
Refrigeration Oil			cm <sup>3</sup>		PZ68S (1600)	
Refrigerant		1	kg (oz)	R290, 1.78 (62.8) (Pre-charged) (-) (Maximum)		
F-GAS		GWP		3		
		CO <sup>2</sup> eq (ton) (Precharge	d / Maximum)	0.006 / -		
		Height	mm (inch)	1520 (59-27/32)		
Dimension		Width	mm (inch)		1200 (47-1/4)	
-		Depth	mm (inch)	430 (16-59/64)		
Net Weight			kg (lbs)	163 (359)		
Pipe Diameter (Ir			mm	25		
Standard Length			m (ft)		5.0 (16.4)	
Maximum Pipe L	-		m (ft)		30.0 (98.4)	
I/D & O/D Height	Differenc		m (ft)		30.0 (98.4)	
Water Pipe Conn	ector	Indoor	inch		1-1/4	
		Outdoor			1-1/4	
<u> </u>		Туре			Notor Compressor (Inv	
Compressor		Motor Type		Synchr	onous Electric Motor (	o-poies)
		Rated Output	kW		3.10	
		Type			Propeller Fan	
		Material			PP	
Fan		Motor Type	1.3.67		DC (8-poles)	
		Input Power	kW		-	
		Output Power	W		120 × 2	
		Fan Speed	rpm		Cooling: 510 Heating: 400	

Item		Unit	Outdoor Unit			
	Fin material			Aluminium (Blue Coat	)	
Heat Exchanger	Fin Type		Corrugated Fin			
neat Exchanger	Row × Stage × FPI		2 × 58 × 19			
	Size (W × H × L)	mm	44	4 × 1473.2 × 868.2:902	2.7	
	Туре			Brazed Plate		
	No. of Plates			36		
Hot Water Coil	Size (W × H × L)	mm		76.2 × 524 × 117		
	Water Flow Rate	l/min (m³/h)		Cooling: 25.8 (1.5) Heating: 25.8 (1.5)		
		Ø		Three		
Power Source (Phase, '	Voltage, Cycle)	V		400		
		Hz		50		
Input Power		Condition (Ambient/Water)	A35W7	A7W35	A2W35	
-		kW	Cooling: 2.49	Heating: 1.72	Heating: 2.36	
Maximum Input Power I	For Heatpump System	kW		8.51		
Outdoor Power Supply	: Phase (Ø) / Max. Current (A)	/ Max. Input Power (W)		3Ø / 12.8 / 8.51k		
Indoor Power Supply : Phase (Ø) / Max. Current (A) / M		Max. Input Power (W)	3Ø / 13.1 / 9.00k			
Power Supply 3 : Phase (Ø) / Max. Current (A) / Max.		Input Power (W)		- / - / -		
Starting Current		А		3.8		
Running Current		Condition (Ambient/Water)	A35W7	A7W35	A2W35	
5		A	Cooling: 3.8	Heating: 2.6	Heating: 3.6	
Maximum Current For H	Heatpump System	A	12.8			
	al figure of compressor and	Condition (Ambient/Water)	A35W7	A7W35	A2W35	
outdoor fan motor.		%	Cooling: 95	Heating: 96	Heating: 95	
Power Cord	Number of core			-		
-	Length	m (ft)		-		
Thermostat			Electronic Control			
Protection Device				Electronic Control		
Pressure Relief Valve V	Vater Circuit	kPa	Oper	: 400, Close: 280 and	below	
	Outdoor Ambient	°C (min. / max.)	F	Cooling: 10 / 43 Heating (Tank): -28 / 4 leating (Circuit): -28 / 3	3 35	
Operation Range	Water Outlet	°C (min. / max.)	Cooling: 5 / 20 Heating (Tank): - / 65* <sup>3</sup> , Heating (Circuit): 20 / 55 (Below Ambient -25 °C) * <sup>4</sup> Heating (Circuit): 20 / 75 (Above Ambient -15 °C) * <sup>4</sup>		<sup>3</sup> , bient -25 °C) * <sup>4</sup>	
Internal Pressure Different	ential	kPa		Cooling: 22.0 Heating: 22.0		
	Motor Type		Brushless DC M	otor (Sensorless vecto	r control system)	
Pump	No. of Speed			Variable speed		
	Input Power	W		175		
	Туре		Vo	rtex (Piezoelectric sen	sor)	
Flow Sensor	Measuring range	l/min		5~60		

Item		Unit		Indoor Unit	
Performance Test Conditi			EN 14511 EN 14825		
Performance Test Conditi	on				
		Condition (Ambient/Water)	A35W7	A7W35	A2W35
Noise Level		dB (A)	Cooling: 22***	Heating: 22***	Heating: 22***
		Power Level dB	Cooling: 35***	Heating: 35***	Heating: 35***
	Depth	mm (inch)		602 (23-45/64)	
Dimension	Width	mm (inch)		599 (23-37/64)	
	Height	mm (inch)		1642 (64-41/64)	
Net Weight		kg (lbs)		89 (196)	
	Room	mm (inch)	31 (1-1/4)		
Water Pipe Diameter	Shower	mm (inch)	19 (3/4)		
Water Drain Hose Inner D	liameter	mm (inch)	12.00 (17/36)		
Pressure Release Valve		kPa	Open: 800, Close: 640 and below		
Protection Device		А	Earth Leakage Circuit Breaker (40)		
	Volume	I	12		
Expansion Vessel	MWP	bar		4	
Capacity of Integrated Ele	ectric Heater / OLP TEMP	kW / °C	9.00 / 85		
Tank Volume (Spec / Net	:)	L	200 / 185		
Max. Tank Water Set Ten	nperature	°C	65		
Tank Coil Surface		m²		1.8	
Maximum Working	Heat / Cool	Bar		4.0	
Pressure	Tank Circuit	Bar		10.0	
Operating Pressure	Tank Unit	Bar		3.5	
Operating Pressure	Expansion Relief Valve	Bar		8.0	
Expansion Vessel Pre-cha	arge Pressure (DHW Circuit)	Bar		3.5	
Pressure Reducing Valve	Set Pressure (DHW Circuit)	Bar		3.5	

	ltem	Unit	Indoor Unit
	Material		EN14511
Pressure Vessel	Volume	L	185
	Design Pressure	Bar	10
	Material		EN-1.4521
	Diameter	mm	22
Heat Exchanger	Thickness	mm	0.8
	Surface Area	m <sup>2</sup>	1.8
	Total Length	m	25
	Total Corrosion ion (Chloride + Sulphate + Nitric)	mg/L	< 150
	Conductivity @ Water Tank Water Temperature < 60°C	μS/cm	< 1250
DHW Tank	Conductivity @ Water Tank Water Temperature < 65°C	μS/cm	< 1200
	Saturation Index (LSI) @ 20°C		> -4.0 / < 0.4
	PH		6.5 - 8.5

- In case it is necessary to indicate the air flow volume in (I/s), the value in (m<sup>3</sup>/min.) shall be multiplied by 16.7 and rounded down the decimal point.
- If the EUROVENT Certified models can be operated under the "extra-low" temperature condition, -7°C DB and -8°C WB temperature with rated voltage 230V shall be used.
- Capacity is measured at outdoor temperature 7°C DB and 6°C WB with controlled water inlet 30°C and water outlet 35°C (EN 14511-2)
- Flowrate indicated are based on nominal capacity adjustment of leaving water temperature (LWT) 35°C and ΔT=5°C.
- EER and COP classification is at 230V only in occordance with EU directive 2003/32/EC.
- \*\*\* The sound pressure and sound power level is measured with distance 1.0m from the unit and height at 1.5m. (Test carry out for cooling at ambient 35°C DB and Water Out 7°C, heating at ambient 7°C DB / 6°C WB and water out 55°C)
- \*\*\*\* The sound power level is measured with accordance to EN12102 under conditions of the EN14825.
- \*\*\* The sound power level is measured with accordance to EN12102 under full load conditions. (Test carry out for cooling at ambient 35°C DB and Water Out 7°C, heating at ambient 7°C DB / 6°C WB and water out 55°C)
- \*<sup>3</sup> When outdoor ambient is under -15°C, only the backup heater operate above 55°C. (Outdoor unit don't have backup heater.)
- \*<sup>4</sup> Between outdoor ambient -15°C and -25°C, the water outlet temperature gradually decreases from 75°C to 55°C.

## 3.2 WH-ADC0316M9E82 WH-WXG12ME8

Item		Unit	Outdoor Unit			
Performance Te	est Conditio	n		EN 14511		
r enormance re		51			EN 14825	
		Condition (Ambient/Water)	A35W7			
Cooling Capacit	ty		kW		9.00	
			BTU/h		30700	
Cooling EER			W/W		3.61	
			Condition (Ambient/Water)	A7W35		A2W35
Heating Capacit	ty		kW	12.00		12.00
			BTU/h	40900		40900
Heating COP			W/W	5.06		3.54
	DHW			14/2000	A	Caldan
Leating Fra	Applicat	ion	Climate	Warmer	Average	Colder
Heating Erp	COP / n	wh	(W/W) / %	3.30 / 132	3.00 / 123	2.20 / 88
	AEC		kWh	753	831	1141
			Condition (Ambient/Water)	A35W7	A7W35	A2W35
Noise Level			dB (A)	Cooling: -	Heating: -	Heating: -
			Power Level dB	Cooling: 60***	Heating: 59*** Heating: 53***	Heating: 59*** Heating: 53***
Air Flow		m³/min (ft³/min)	Cooling: 97.0 (3426) Heating: 92.0 (3249)			
Refrigeration Control Device				Expansion Valve		
Refrigeration Oi	il		cm <sup>3</sup>	PZ68S (1600)		
Refrigerant		kg (oz)	R290, 1.78 (	(62.8) (Pre-charged) (-	) (Maximum)	
F-GAS		GWP			3	
F-GAS		CO <sup>2</sup> eq (ton) (Precharge	d / Maximum)	0.006 / -		
		Height	mm (inch)	1520 (59-27/32)		
Dimension		Width	mm (inch)	1200 (47-1/4)		
		Depth	mm (inch)		430 (16-59/64)	
Net Weight			kg (lbs)	163 (359)		
Pipe Diameter (	Inner)		mm	32		
Standard Lengt	h		m (ft)	5.0 (16.4)		
Maximum Pipe	Length		m (ft)		30.0 (98.4)	
I/D & O/D Heigh	nt Differenc	e	m (ft)		30.0 (98.4)	
		Indoor	inch		1-1/4	
Water Pipe Connector		Outdoor	inch		1-1/4	
vvater Pipe Con		Туре		Hermetic N	lotor Compressor (Inve	olute Scroll)
water Pipe Con		51		Synchronous Electric Motor (6-poles)		
		Motor Type		Synchr	onous Electric Motor (6	β-poles)
			kW	Synchr	onous Electric Motor (6 3.10	6-poles)
		Motor Type	kW	Synchr	`	δ-poles)
		Motor Type Rated Output	kW	Synchr	3.10	ô-poles)
Compressor		Motor Type Rated Output Type	kW	Synchr	3.10 Propeller Fan	ô-poles)
Compressor		Motor Type Rated Output Type Material	kW kW kW	Synchr	3.10 Propeller Fan PP	3-poles)
Compressor Fan		Motor Type Rated Output Type Material Motor Type		Synchr	3.10 Propeller Fan PP	ô-poles)

Item		Unit	Outdoor Unit		
	Fin material			Aluminium (Blue Coat	)
Hoot Exchanger	Fin Type			Corrugated Fin	
Heat Exchanger	Row × Stage × FPI		2 × 58 × 19		
	Size (W × H × L)	mm	44	4 × 1473.2 × 868.2:902	2.7
	Туре			Brazed Plate	
	No. of Plates			36	
Hot Water Coil	Size (W × H × L)	mm		76.2 × 524 × 117	
	Water Flow Rate	l/min (m³/h)		Cooling: 25.8 (1.5) Heating: 34.4 (2.1)	
		Ø		Three	
Power Source (Phase, '	Voltage, Cycle)	V		400	
		Hz		50	
Input Power		Condition (Ambient/Water)	A35W7	A7W35	A2W35
		kW	Cooling: 2.49	Heating: 2.37	Heating: 3.39
Maximum Input Power I	For Heatpump System	kW		9.84	
Outdoor Power Supply	: Phase (Ø) / Max. Current (A)	/ Max. Input Power (W)		3Ø / 14.8 / 9.84k	
Indoor Power Supply : Phase (Ø) / Max. Current (A) / M		Max. Input Power (W)	3Ø / 13.1 / 9.00k		
Power Supply 3 : Phase (Ø) / Max. Current (A) / Max.		Input Power (W)		- / - / -	
Starting Current		А		3.8	
Running Current		Condition (Ambient/Water)	A35W7	A7W35	A2W35
5		A	Cooling: 3.8	Heating: 3.6	Heating: 5.2
Maximum Current For H	leatpump System	А	14.8		
	al figure of compressor and	Condition (Ambient/Water)	A35W7	A7W35	A2W35
outdoor fan motor.		%	Cooling: 95	Heating: 96	Heating: 95
Power Cord	Number of core		-		
	Length	m (ft)		-	
Thermostat				Electronic Control	
Protection Device				Electronic Control	
Pressure Relief Valve V	Vater Circuit	kPa	Oper	: 400, Close: 280 and	below
	Outdoor Ambient	°C (min. / max.)	F	Cooling: 10 / 43 Heating (Tank): -28 / 4 leating (Circuit): -28 / 3	3 35
Operation Range	Water Outlet	°C (min. / max.)	Cooling: 5 / 20 Heating (Tank): - / 65* <sup>3</sup> , Heating (Circuit): 20 / 55 (Below Ambient -25 °C) * <sup>4</sup> Heating (Circuit): 20 / 75 (Above Ambient -15 °C) * <sup>4</sup>		<sup>3</sup> , bient -25 °C) * <sup>4</sup>
Internal Pressure Different	ential	kPa		Cooling: 22.0 Heating: 39.0	
	Motor Type		Brushless DC M	otor (Sensorless vecto	r control system)
Pump	No. of Speed			Variable Speed	
	Input Power	W		175	
	Туре		Vo	rtex (Piezoelectric sen	sor)
Flow Sensor	Measuring range	l/min		5~60	

Item		Unit		Indoor Unit	
Performance Test Conditi			EN 14511		
Performance Test Conditi	011			EN 14825	
		Condition (Ambient/Water)	A35W7	A7W35	A2W35
Noise Level		dB (A)	Cooling: 22***	Heating: 22***	Heating: 22***
		Power Level dB	Cooling: 35***	Heating: 35***	Heating: 35***
	Depth	mm (inch)		602 (23-45/64)	
Dimension	Width	mm (inch)		599 (23-37/64)	
	Height	mm (inch)		1642 (64-41/64)	
Net Weight		kg (lbs)		89 (196)	
	Room	mm (inch)	31 (1-1/4)		
Water Pipe Diameter	Shower	mm (inch)	19 (3/4)		
Water Drain Hose Inner D	Diameter	mm (inch)	12.00 (17/36)		
Pressure Release Valve		kPa	Open: 800, Close: 640 and below		
Protection Device		А	Earth Leakage Circuit Breaker (40)		
	Volume	I	12		
Expansion Vessel	MWP	bar		4	
Capacity of Integrated Ele	ectric Heater / OLP TEMP	kW / °C	9.00 / 85		
Tank Volume (Spec / Net	t)	L	200 / 185		
Max. Tank Water Set Ten	nperature	°C	65		
Tank Coil Surface		m²		1.8	
Maximum Working	Heat / Cool	Bar		4.0	
Pressure	Tank Circuit	Bar		10.0	
Operating Pressure	Tank Unit	Bar		3.5	
Operating Pressure	Expansion Relief Valve	Bar		8.0	
Expansion Vessel Pre-ch	arge Pressure (DHW Circuit)	Bar		3.5	
Pressure Reducing Valve	Set Pressure (DHW Circuit)	Bar		3.5	

	Item	Unit	Indoor Unit
	Material		EN14511
Pressure Vessel	Volume	L	185
	Design Pressure	Bar	10
	Material		EN-1.4521
	Diameter	mm	22
Heat Exchanger	Thickness	mm	0.8
	Surface Area	m <sup>2</sup>	1.8
	Total Length	m	25
	Total Corrosion ion (Chloride + Sulphate + Nitric)	mg/L	< 150
	Conductivity @ Water Tank Water Temperature < 60°C	μS/cm	< 1250
DHW Tank	Conductivity @ Water Tank Water Temperature < 65°C	μS/cm	< 1200
	Saturation Index (LSI) @ 20°C		> -4.0 / < 0.4
	PH		6.5 - 8.5

- In case it is necessary to indicate the air flow volume in (I/s), the value in (m<sup>3</sup>/min.) shall be multiplied by 16.7 and rounded down the decimal point.
- If the EUROVENT Certified models can be operated under the "extra-low" temperature condition, -7°C DB and -8°C WB temperature with rated voltage 230V shall be used.
- Capacity is measured at outdoor temperature 7°C DB and 6°C WB with controlled water inlet 30°C and water outlet 35°C (EN 14511-2)
- Flowrate indicated are based on nominal capacity adjustment of leaving water temperature (LWT) 35°C and ΔT=5°C.
- EER and COP classification is at 230V only in occordance with EU directive 2003/32/EC.
- \*\*\* The sound pressure and sound power level is measured with distance 1.0m from the unit and height at 1.5m. (Test carry out for cooling at ambient 35°C DB and Water Out 7°C, heating at ambient 7°C DB / 6°C WB and water out 55°C)
- \*\*\*\* The sound power level is measured with accordance to EN12102 under conditions of the EN14825.
- \*\*\* The sound power level is measured with accordance to EN12102 under full load conditions. (Test carry out for cooling at ambient 35°C DB and Water Out 7°C, heating at ambient 7°C DB / 6°C WB and water out 55°C)
- \*<sup>3</sup> When outdoor ambient is under -15°C, only the backup heater operate above 55°C. (Outdoor unit don't have backup heater.)
- \*<sup>4</sup> Between outdoor ambient -15°C and -25°C, the water outlet temperature gradually decreases from 75°C to 55°C.

## 3.3 WH-ADC0316M9E82 WH-WXG16ME8

	It	em	Unit	Outdoor Unit			
Performance Te	est Conditio	n		EN 14511			
T enormance Te	St Conditio	ות			EN 14825		
		Condition (Ambient/Water)	A35W7				
Cooling Capacit	y		kW		9.00		
			BTU/h		30700		
Cooling EER			W/W		3.61		
			Condition (Ambient/Water)	A7W35		A2W35	
Heating Capacit	ty		kW	16.00		16.00	
			BTU/h	54600		54600	
Heating COP			W/W	4.89		3.30	
	DHW			Marmar.	Average	Coldor	
Hoating Em	Applicat	ion	Climate	Warmer	Average	Colder	
Heating Erp	COP / n	wh	(W/W) / %	3.20 / 128	2.85 / 117	2.10 / 84	
	AEC		kWh	778	876	1196	
			Condition (Ambient/Water)	A35W7	A7W35	A2W35	
Noise Level			dB (A)	Cooling: -	Heating: -	Heating: -	
			Power Level dB	Cooling: 60***	Heating: 62*** Heating: 57***	Heating: 62*** Heating: 57***	
Air Flow		m <sup>3</sup> /min (ft <sup>3</sup> /min)	Cooling: 97.0 (3426) Heating: 108.0 (3814)				
Refrigeration Control Device				Expansion Valve			
Refrigeration Oi	I		cm <sup>3</sup>	PZ68S (1600)			
Refrigerant			kg (oz)	R290, 1.77 (62.4) (Pre-charged) (-) (Maximum)			
		GWP	·	3			
F-GAS		CO <sup>2</sup> eq (ton) (Precharged	/ Maximum)	0.006 / -			
		Height	mm (inch)	1520 (59-27/32)			
Dimension		Width	mm (inch)		1200 (47-1/4)		
		Depth	mm (inch)		430 (16-59/64)		
Net Weight			kg (lbs)	165 (364)			
Pipe Diameter (	Inner)		mm	32			
Standard Lengtl			m (ft)	5.0 (16.4)			
Maximum Pipe	Length		m (ft)		30.0 (98.4)		
I/D & O/D Heigh	nt Differenc	e	m (ft)		30.0 (98.4)		
		Indoor			1-1/4		
Water Pipe Con	nector	Outdoor	inch		1-1/4		
		Туре		Hermetic M	lotor Compressor (Inv	olute Scroll)	
Compressor		Motor Type			onous Electric Motor (		
		Rated Output	kW		3.10		
		Туре			Propeller Fan		
		Material			PP		
		Motor Type			DC (8-poles)		
Fan		Input Power	kW		-		
		Output Power	W		120 × 2		
					Cooling: 510		
		Fan Speed	rpm		Heating: 480		

Item		Unit	Outdoor Unit		
	Fin material			Aluminium (Blue Coat	)
Llaat Evebanger	Fin Type			Corrugated Fin	
Heat Exchanger	Row × Stage × FPI		2 × 58 × 19		
	Size (W × H × L)	mm	44	4 × 1473.2 × 868.2:902	2.7
	Туре			Brazed Plate	
	No. of Plates			44	
Hot Water Coil	Size (W × H × L)	mm		72.0 × 535 × 120.5	
	Water Flow Rate	l/min (m³/h)		Cooling: 25.8 (1.5) Heating: 45.9 (2.8)	
		Ø		Three	
Power Source (Phase, V	√oltage, Cycle)	V		400	
		Hz		50	
Input Power		Condition (Ambient/Water)	A35W7	A7W35	A2W35
-		kW	Cooling: 2.49	Heating: 3.27	Heating: 4.85
Maximum Input Power I	For Heatpump System	kW		12.80	
Outdoor Power Supply	: Phase (Ø) / Max. Current (A)	/ Max. Input Power (W)		3Ø / 19.0 / 12.8k	
Indoor Power Supply : Phase (Ø) / Max. Current (A) / M		Max. Input Power (W)	3Ø / 13.1 / 9.00k		
Power Supply 3 : Phase	e (Ø) / Max. Current (A) / Max.	Input Power (W)		- / - / -	
Starting Current		A		4.9	
Running Current		Condition (Ambient/Water)	A35W7	A7W35	A2W35
· · · · · · · · · · · · · · · · · · ·		А	Cooling: 3.8	Heating: 4.9	Heating: 7.3
Maximum Current For ⊦	leatpump System	А	19.0		
	al figure of compressor and	Condition (Ambient/Water)	A35W7	A7W35	A2W35
outdoor fan motor.		%	Cooling: 95	Heating: 97	Heating: 96
Power Cord	Number of core			-	
	Length	m (ft)		-	
Thermostat			Electronic Control		
Protection Device				Electronic Control	
Pressure Relief Valve V	Vater Circuit	kPa	Oper	: 400, Close: 280 and	below
	Outdoor Ambient	°C (min. / max.)	l F	Cooling: 10 / 43 Heating (Tank): -28 / 4 leating (Circuit): -28 / 3	3 35
Operation Range	Water Outlet	°C (min. / max.)	Cooling: 5 / 20 Heating (Tank): - / 65* <sup>3</sup> , Heating (Circuit): 20 / 55 (Below Ambient -25 °C) * <sup>4</sup> Heating (Circuit): 20 / 75 (Above Ambient -15 °C) * <sup>4</sup>		<sup>3</sup> , bient -25 °C) * <sup>4</sup>
Internal Pressure Differential		kPa		Cooling: 22.0 Heating: 63.0	
	Motor Type		Brushless DC M	otor (Sensorless vecto	r control system)
Pump	No. of Speed			Variable Speed	
	Input Power	W		175	
	Туре		Vo	rtex (Piezoelectric sen	sor)
Flow Sensor	Measuring range	l/min		5~60	

Item		Unit		Indoor Unit	
Performance Test Conditi			EN 14511 EN 14825		
Performance Test Conditi	on				
		Condition (Ambient/Water)	A35W7	A7W35	A2W35
Noise Level		dB (A)	Cooling: 22***	Heating: 22***	Heating: 22***
		Power Level dB	Cooling: 35***	Heating: 35***	Heating: 35***
	Depth	mm (inch)		602 (23-45/64)	
Dimension	Width	mm (inch)		599 (23-37/64)	
	Height	mm (inch)		1642 (64-41/64)	
Net Weight		kg (lbs)		89 (196)	
	Room	mm (inch)	31 (1-1/4)		
Water Pipe Diameter	Shower	mm (inch)	19 (3/4)		
Water Drain Hose Inner D	liameter	mm (inch)	12.00 (17/36)		
Pressure Release Valve		kPa	Open: 800, Close: 640 and below		
Protection Device		А	Earth Leakage Circuit Breaker (40)		
	Volume	I	12		
Expansion Vessel	MWP	bar		4	
Capacity of Integrated Ele	ectric Heater / OLP TEMP	kW / °C	9.00 / 85		
Tank Volume (Spec / Net	:)	L	200 / 185		
Max. Tank Water Set Ten	nperature	°C	65		
Tank Coil Surface		m²		1.8	
Maximum Working	Heat / Cool	Bar		4.0	
Pressure	Tank Circuit	Bar		10.0	
Operating Pressure	Tank Unit	Bar		3.5	
Operating Pressure	Expansion Relief Valve	Bar		8.0	
Expansion Vessel Pre-cha	arge Pressure (DHW Circuit)	Bar		3.5	
Pressure Reducing Valve	Set Pressure (DHW Circuit)	Bar		3.5	

	Item	Unit	Indoor Unit
	Material		EN14511
Pressure Vessel	Volume	L	185
	Design Pressure	Bar	10
	Material		EN-1.4521
	Diameter	mm	22
Heat Exchanger	Thickness	mm	0.8
	Surface Area	m <sup>2</sup>	1.8
	Total Length	m	25
	Total Corrosion ion (Chloride + Sulphate + Nitric)	mg/L	< 150
	Conductivity @ Water Tank Water Temperature < 60°C	μS/cm	< 1250
DHW Tank	Conductivity @ Water Tank Water Temperature < 65°C	μS/cm	< 1200
	Saturation Index (LSI) @ 20°C		> -4.0 / < 0.4
	PH		6.5 - 8.5

- In case it is necessary to indicate the air flow volume in (I/s), the value in (m<sup>3</sup>/min.) shall be multiplied by 16.7 and rounded down the decimal point.
- If the EUROVENT Certified models can be operated under the "extra-low" temperature condition, -7°C DB and -8°C WB temperature with rated voltage 230V shall be used.
- Capacity is measured at outdoor temperature 7°C DB and 6°C WB with controlled water inlet 30°C and water outlet 35°C (EN 14511-2)
- Flowrate indicated are based on nominal capacity adjustment of leaving water temperature (LWT) 35°C and ΔT=5°C.
- EER and COP classification is at 230V only in occordance with EU directive 2003/32/EC.
- \*\*\* The sound pressure and sound power level is measured with distance 1.0m from the unit and height at 1.5m. (Test carry out for cooling at ambient 35°C DB and Water Out 7°C, heating at ambient 7°C DB / 6°C WB and water out 55°C)
- \*\*\*\* The sound power level is measured with accordance to EN12102 under conditions of the EN14825.
- \*\*\* The sound power level is measured with accordance to EN12102 under full load conditions. (Test carry out for cooling at ambient 35°C DB and Water Out 7°C, heating at ambient 7°C DB / 6°C WB and water out 55°C)
- \*<sup>3</sup> When outdoor ambient is under -15°C, only the backup heater operate above 55°C. (Outdoor unit don't have backup heater.)
- \*<sup>4</sup> Between outdoor ambient -15°C and -25°C, the water outlet temperature gradually decreases from 75°C to 55°C.

## 3.4 WH-ADC0316M9E8AN2 WH-WXG09ME8

ltem Unit		Unit	Outdoor Unit			
Performance Te	est Conditi	on		EN 14511		
			EN 14825			
		Condition (Ambient/Water)	A35W7			
Cooling Capacit	ty		kW		9.00	
			BTU/h		30700	
Cooling EER			W/W		3.61	
			Condition (Ambient/Water)	A7W35		A2W35
Heating Capaci	ty		kW	9.00		9.00
			BTU/h	30700		30700
Heating COP			W/W	5.23		3.81
	DHW			\A(armar	Average	Coldor
Leating Ern	Applicat	tion	Climate	Warmer	Average	Colder
Heating Erp	COP / r	iwh	(W/W) / %	3.30 / 132	3.00 / 123	2.20 / 88
	AEC		kWh	753	831	1141
			Condition (Ambient/Water)	A35W7	A7W35	A2W35
Noise Level			dB (A)	Cooling: -	Heating: -	Heating: -
			Power Level dB	Cooling: 60***	Heating: 58*** Heating: 52***	Heating: 58*** Heating: 52***
Air Flow		m³/min (ft³/min)	Cooling: 97.0 (3426) Heating: 83.0 (2931)			
Refrigeration Co	ontrol Devi	се		Expansion Valve		
Refrigeration Oil		cm <sup>3</sup>	PZ68S (1600)			
Refrigerant			kg (oz)	R290, 1.78 (	62.8) (Pre-charged) (-	) (Maximum)
F-GAS		GWP		3		
		CO <sup>2</sup> eq (ton) (Precharge	d / Maximum)	0.006 / -		
		Height	mm (inch)	1520 (59-27/32)		
Dimension		Width	mm (inch)	1200 (47-1/4)		
		Depth	mm (inch)		430 (16-59/64)	
Net Weight			kg (lbs)	163 (359)		
Pipe Diameter (	Inner)		mm	25		
Standard Lengt	h		m (ft)		5.0 (16.4)	
Maximum Pipe	Length		m (ft)		30.0 (98.4)	
I/D & O/D Heigh	nt Differend	ce	m (ft)		30.0 (98.4)	
Water Pipe Con	nector	Indoor	inch		1-1/4	
mater i ipe Coll		Outdoor	IIIGH		1-1/4	
		Туре		Hermetic N	lotor Compressor (Invo	olute Scroll)
Compressor		Motor Type		Synchro	onous Electric Motor (6	6-poles)
		Rated Output	kW		3.10	
		Туре			Propeller Fan	
		Material			PP	
		Motor Type			DC (8-poles)	
Fan		Input Power	kW		-	
		Output Power	W		120 × 2	
		Fan Speed	rpm		Cooling: 510 Heating: 400	

Item		Unit	Outdoor Unit			
	Fin material			Aluminium (Blue Coat	)	
Heat Exchanger	Fin Type		Corrugated Fin			
neat Exchanger	Row × Stage × FPI		2 × 58 × 19			
	Size (W × H × L)	mm	44	4 × 1473.2 × 868.2:902	2.7	
	Туре			Brazed Plate		
Hot Water Coil	No. of Plates			36		
	Size (W × H × L)	mm		76.2 × 524 × 117		
	Water Flow Rate	l/min (m³/h)		Cooling: 25.8 (1.5) Heating: 25.8 (1.5)		
		Ø		Three		
Power Source (Phase, '	Voltage, Cycle)	V		400		
		Hz		50		
Input Power		Condition (Ambient/Water)	A35W7	A7W35	A2W35	
-		kW	Cooling: 2.49	Heating: 1.72	Heating: 2.36	
Maximum Input Power I	For Heatpump System	kW		8.51		
Outdoor Power Supply	: Phase (Ø) / Max. Current (A)	/ Max. Input Power (W)		3Ø / 12.8 / 8.51k		
Indoor Power Supply : Phase (Ø) / Max. Current (A) / M		Max. Input Power (W)	3Ø / 13.1 / 9.00k			
Power Supply 3 : Phase	e (Ø) / Max. Current (A) / Max.	Input Power (W)		-/-/-		
Starting Current		А		3.8		
Running Current		Condition (Ambient/Water)	A35W7	A7W35	A2W35	
5		A	Cooling: 3.8	Heating: 2.6	Heating: 3.6	
Maximum Current For H	Heatpump System	A	12.8			
	al figure of compressor and	Condition (Ambient/Water)	A35W7	A7W35	A2W35	
outdoor fan motor.		%	Cooling: 95	Heating: 96	Heating: 95	
Power Cord	Number of core			-		
-	Length	m (ft)		-		
Thermostat				Electronic Control		
Protection Device				Electronic Control		
Pressure Relief Valve V	Vater Circuit	kPa	Oper	: 400, Close: 280 and	below	
	Outdoor Ambient	°C (min. / max.)	F	Cooling: 10 / 43 Heating (Tank): -28 / 4 leating (Circuit): -28 / 3	3 35	
Operation Range	Water Outlet	°C (min. / max.)	Cooling: 5 / 20 Heating (Tank): - / 65* <sup>3</sup> , Heating (Circuit): 20 / 55 (Below Ambient -25 °C) * <sup>4</sup> Heating (Circuit): 20 / 75 (Above Ambient -15 °C) * <sup>4</sup>			
Internal Pressure Differential		kPa		Cooling: 22.0 Heating: 22.0		
	Motor Type		Brushless DC M	otor (Sensorless vecto	r control system)	
Pump	No. of Speed			Variable speed		
	Input Power	W		175		
	Туре		Vo	rtex (Piezoelectric sen	sor)	
Flow Sensor	Measuring range	l/min		5~60		

Item		Unit		Indoor Unit	
Performance Test Conditi			EN 14511		
Performance Test Conditi	on			EN 14825	
		Condition (Ambient/Water)	A35W7	A7W35	A2W35
Noise Level		dB (A)	Cooling: 22***	Heating: 22***	Heating: 22***
		Power Level dB	Cooling: 35***	Heating: 35***	Heating: 35***
	Depth	mm (inch)		602 (23-45/64)	
Dimension	Width	mm (inch)		599 (23-37/64)	
	Height	mm (inch)		1642 (64-41/64)	
Net Weight		kg (lbs)		89 (196)	
	Room	mm (inch)	31 (1-1/4)		
Water Pipe Diameter	Shower	mm (inch)	19 (3/4)		
Water Drain Hose Inner D	liameter	mm (inch)	12.00 (17/36)		
Pressure Release Valve		kPa	Open: 800, Close: 640 and below		
Protection Device		А	Earth Leakage Circuit Breaker (40)		
	Volume	I		12	
Expansion Vessel	MWP	bar		4	
Capacity of Integrated Ele	ectric Heater / OLP TEMP	kW / °C	9.00 / 85		
Tank Volume (Spec / Net	:)	L		200 / 185	
Max. Tank Water Set Ten	nperature	°C		65	
Tank Coil Surface		m²		1.8	
Maximum Working	Heat / Cool	Bar		4.0	
Pressure	Tank Circuit	Bar		10.0	
Operating Pressure	Tank Unit	Bar		3.5	
Operating Pressure	Expansion Relief Valve	Bar	8.0		
Expansion Vessel Pre-cha	arge Pressure (DHW Circuit)	Bar	3.5		
Pressure Reducing Valve	Set Pressure (DHW Circuit)	Bar	3.5		

Item		Unit	Indoor Unit
	Material		EN14511
Pressure Vessel	Volume	L	185
	Design Pressure	Bar	10
	Material		EN-1.4521
	Diameter	mm	22
Heat Exchanger	Thickness	mm	0.8
	Surface Area	m <sup>2</sup>	1.8
	Total Length	m	25
	Total Corrosion ion (Chloride + Sulphate + Nitric)	mg/L	< 150
	Conductivity @ Water Tank Water Temperature < 60°C	μS/cm	< 1250
DHW Tank	Conductivity @ Water Tank Water Temperature < 65°C	μS/cm	< 1200
	Saturation Index (LSI) @ 20°C		> -4.0 / < 0.4
	PH		6.5 - 8.5

- In case it is necessary to indicate the air flow volume in (I/s), the value in (m<sup>3</sup>/min.) shall be multiplied by 16.7 and rounded down the decimal point.
- If the EUROVENT Certified models can be operated under the "extra-low" temperature condition, -7°C DB and -8°C WB temperature with rated voltage 230V shall be used.
- Capacity is measured at outdoor temperature 7°C DB and 6°C WB with controlled water inlet 30°C and water outlet 35°C (EN 14511-2)
- Flowrate indicated are based on nominal capacity adjustment of leaving water temperature (LWT) 35°C and ΔT=5°C.
- EER and COP classification is at 230V only in occordance with EU directive 2003/32/EC.
- \*\*\* The sound pressure and sound power level is measured with distance 1.0m from the unit and height at 1.5m. (Test carry out for cooling at ambient 35°C DB and Water Out 7°C, heating at ambient 7°C DB / 6°C WB and water out 55°C)
- \*\*\*\* The sound power level is measured with accordance to EN12102 under conditions of the EN14825.
- \*\*\* The sound power level is measured with accordance to EN12102 under full load conditions. (Test carry out for cooling at ambient 35°C DB and Water Out 7°C, heating at ambient 7°C DB / 6°C WB and water out 55°C)
- \*<sup>3</sup> When outdoor ambient is under -15°C, only the backup heater operate above 55°C. (Outdoor unit don't have backup heater.)
- \*<sup>4</sup> Between outdoor ambient -15°C and -25°C, the water outlet temperature gradually decreases from 75°C to 55°C.

## 3.5 WH-ADC0316M9E8AN2 WH-WXG12ME8

Item		Unit	Outdoor Unit				
Performance Te	est Conditio	n		EN 14511			
· · · · · · · · · · · · · · · · · · ·				EN 14825			
		Condition (Ambient/Water)	A35W7				
Cooling Capaci	ty		kW		9.00		
			BTU/h		30700		
Cooling EER			W/W		3.61		
			Condition (Ambient/Water)	A7W35		A2W35	
Heating Capaci	ity		kW	12.00		12.00	
			BTU/h	40900		40900	
Heating COP			W/W	5.06		3.54	
	DHW			10/	A	Oshian	
Llooting Tom	Applicat	ion	Climate	Warmer	Average	Colder	
Heating Erp	COP / n	wh	(W/W) / %	3.30 / 132	3.00 / 123	2.20 / 88	
	AEC		kWh	753	831	1141	
			Condition (Ambient/Water)	A35W7	A7W35	A2W35	
Noise Level			dB (A)	Cooling: -	Heating: -	Heating: -	
			Power Level dB	Cooling: 60***	Heating: 59*** Heating: 53***	Heating: 59*** Heating: 53***	
Air Flow		m <sup>3</sup> /min (ft <sup>3</sup> /min)	Cooling: 97.0 (3426) Heating: 92.0 (3249)				
Refrigeration C	ontrol Devi	се			Expansion Valve		
Refrigeration O	il		cm <sup>3</sup>	PZ68S (1600)			
Refrigerant			kg (oz)	R290, 1.78 (62.8) (Pre-charged) (-) (Maximum)			
		GWP		3			
F-GAS		CO <sup>2</sup> eq (ton) (Precharged	/ Maximum)	0.006 / -			
		Height	mm (inch)	1520 (59-27/32)			
Dimension		Width	mm (inch)		1200 (47-1/4)		
		Depth	mm (inch)		430 (16-59/64)		
Net Weight		·	kg (lbs)	163 (359)			
Pipe Diameter (	(Inner)		mm	32			
Standard Lengt	th		m (ft)		5.0 (16.4)		
Maximum Pipe	Length		m (ft)		30.0 (98.4)		
I/D & O/D Heigl	ht Differend	e	m (ft)		30.0 (98.4)		
		Indoor	Sec 1-		1-1/4		
Water Pipe Cor	nnector	Outdoor	- inch		1-1/4		
		Туре		Hermetic M	lotor Compressor (Inv	olute Scroll)	
Compressor		Motor Type		Synchr	onous Electric Motor (	6-poles)	
		Rated Output	kW		3.10		
		Туре			Propeller Fan		
		Material			PP		
		Motor Type			DC (8-poles)		
Fan		Input Power	kW		-		
		Output Power	W		120 × 2		
				Cooling: 510			
		Fan Speed	rpm		Heating: 420		

Item		Unit	Outdoor Unit			
Fin material				Aluminium (Blue Coat	)	
Hoot Exchanger	Fin Type			Corrugated Fin		
Heat Exchanger	Row × Stage × FPI		2 × 58 × 19			
	Size (W × H × L)	mm	44	4 × 1473.2 × 868.2:902	2.7	
	Туре			Brazed Plate		
	No. of Plates			36		
Hot Water Coil	Size (W × H × L)	mm		76.2 × 524 × 117		
	Water Flow Rate	l/min (m³/h)		Cooling: 25.8 (1.5) Heating: 34.4 (2.1)		
		Ø		Three		
Power Source (Phase, '	Voltage, Cycle)	V		400		
		Hz		50		
Input Power		Condition (Ambient/Water)	A35W7	A7W35	A2W35	
		kW	Cooling: 2.49	Heating: 2.37	Heating: 3.39	
Maximum Input Power I	For Heatpump System	kW		9.84		
Outdoor Power Supply	: Phase (Ø) / Max. Current (A)	/ Max. Input Power (W)		3Ø / 14.8 / 9.84k		
Indoor Power Supply : Phase (Ø) / Max. Current (A) / M		Max. Input Power (W)	3Ø / 13.1 / 9.00k			
Power Supply 3 : Phase	e (Ø) / Max. Current (A) / Max.	Input Power (W)		- / - / -		
Starting Current		А		3.8		
Running Current		Condition (Ambient/Water)	A35W7	A7W35	A2W35	
5		A	Cooling: 3.8	Heating: 3.6	Heating: 5.2	
Maximum Current For H	leatpump System	А	14.8			
	al figure of compressor and	Condition (Ambient/Water)	A35W7	A7W35	A2W35	
outdoor fan motor.		%	Cooling: 95	Heating: 96	Heating: 95	
Power Cord	Number of core			-		
	Length	m (ft)		-		
Thermostat				Electronic Control		
Protection Device				Electronic Control		
Pressure Relief Valve V	Vater Circuit	kPa	Oper	: 400, Close: 280 and	below	
	Outdoor Ambient	°C (min. / max.)	F	Cooling: 10 / 43 Heating (Tank): -28 / 4 leating (Circuit): -28 / 3	3 35	
Operation Range	Water Outlet	°C (min. / max.)	Cooling: 5 / 20 Heating (Tank): - / 65* <sup>3</sup> , Heating (Circuit): 20 / 55 (Below Ambient -25 °C) * <sup>4</sup> Heating (Circuit): 20 / 75 (Above Ambient -15 °C) * <sup>4</sup>			
Internal Pressure Differential		kPa		Cooling: 22.0 Heating: 39.0		
	Motor Type		Brushless DC M	otor (Sensorless vecto	r control system)	
Pump	No. of Speed			Variable Speed		
	Input Power	W		175		
	Туре		Vo	rtex (Piezoelectric sen	sor)	
Flow Sensor	Measuring range	l/min		5~60		

Item		Unit		Indoor Unit	
Performance Test Conditi			EN 14511		
Performance Test Conditi	on			EN 14825	
		Condition (Ambient/Water)	A35W7	A7W35	A2W35
Noise Level		dB (A)	Cooling: 22***	Heating: 22***	Heating: 22***
		Power Level dB	Cooling: 35***	Heating: 35***	Heating: 35***
	Depth	mm (inch)		602 (23-45/64)	
Dimension	Width	mm (inch)		599 (23-37/64)	
	Height	mm (inch)		1642 (64-41/64)	
Net Weight		kg (lbs)		89 (196)	
	Room	mm (inch)	31 (1-1/4)		
Water Pipe Diameter	Shower	mm (inch)	19 (3/4)		
Water Drain Hose Inner D	liameter	mm (inch)	12.00 (17/36)		
Pressure Release Valve		kPa	Open: 800, Close: 640 and below		
Protection Device		А	Earth Leakage Circuit Breaker (40)		
	Volume	I		12	
Expansion Vessel	MWP	bar		4	
Capacity of Integrated Ele	ectric Heater / OLP TEMP	kW / °C	9.00 / 85		
Tank Volume (Spec / Net	:)	L		200 / 185	
Max. Tank Water Set Ten	nperature	°C		65	
Tank Coil Surface		m²		1.8	
Maximum Working	Heat / Cool	Bar		4.0	
Pressure	Tank Circuit	Bar		10.0	
Operating Pressure	Tank Unit	Bar		3.5	
Operating Pressure	Expansion Relief Valve	Bar	8.0		
Expansion Vessel Pre-cha	arge Pressure (DHW Circuit)	Bar	3.5		
Pressure Reducing Valve	Set Pressure (DHW Circuit)	Bar	3.5		

ltem		Unit	Indoor Unit
	Material		EN14511
Pressure Vessel	Volume	L	185
	Design Pressure	Bar	10
	Material		EN-1.4521
	Diameter	mm	22
Heat Exchanger	Thickness	mm	0.8
	Surface Area	m <sup>2</sup>	1.8
	Total Length	m	25
	Total Corrosion ion (Chloride + Sulphate + Nitric)	mg/L	< 150
	Conductivity @ Water Tank Water Temperature < 60°C	µS/cm	< 1250
DHW Tank	Conductivity @ Water Tank Water Temperature < 65°C	µS/cm	< 1200
	Saturation Index (LSI) @ 20°C		> -4.0 / < 0.4
	PH		6.5 - 8.5

- In case it is necessary to indicate the air flow volume in (I/s), the value in (m<sup>3</sup>/min.) shall be multiplied by 16.7 and rounded down the decimal point.
- If the EUROVENT Certified models can be operated under the "extra-low" temperature condition, -7°C DB and -8°C WB temperature with rated voltage 230V shall be used.
- Capacity is measured at outdoor temperature 7°C DB and 6°C WB with controlled water inlet 30°C and water outlet 35°C (EN 14511-2)
- Flowrate indicated are based on nominal capacity adjustment of leaving water temperature (LWT) 35°C and ΔT=5°C.
- EER and COP classification is at 230V only in occordance with EU directive 2003/32/EC.
- \*\*\* The sound pressure and sound power level is measured with distance 1.0m from the unit and height at 1.5m. (Test carry out for cooling at ambient 35°C DB and Water Out 7°C, heating at ambient 7°C DB / 6°C WB and water out 55°C)
- \*\*\*\* The sound power level is measured with accordance to EN12102 under conditions of the EN14825.
- \*\*\* The sound power level is measured with accordance to EN12102 under full load conditions. (Test carry out for cooling at ambient 35°C DB and Water Out 7°C, heating at ambient 7°C DB / 6°C WB and water out 55°C)
- \*<sup>3</sup> When outdoor ambient is under -15°C, only the backup heater operate above 55°C. (Outdoor unit don't have backup heater.)
- \*<sup>4</sup> Between outdoor ambient -15°C and -25°C, the water outlet temperature gradually decreases from 75°C to 55°C.

## 3.6 WH-ADC0316M9E8AN2 WH-WXG16ME8

Item U			Unit	Outdoor Unit			
Performance Te	est Conditi	n		EN 14511			
· · · · · · · · · · · · · · · · · · ·					EN 14825		
		Condition (Ambient/Water)	A35W7				
Cooling Capacit	ty		kW		9.00		
			BTU/h		30700		
Cooling EER			W/W		3.61		
			Condition (Ambient/Water)	A7W35		A2W35	
Heating Capacit	ty		kW	16.00		16.00	
			BTU/h	54600		54600	
Heating COP			W/W	4.89		3.30	
	DHW			Marmar	Average	Colder	
Hooting Ern	Applicat	tion	Climate	Warmer	Average	Colder	
Heating Erp	COP / r	wh	(W/W) / %	3.20 / 128	2.85 / 117	2.10 / 84	
	AEC		kWh	778	876	1196	
			Condition (Ambient/Water)	A35W7	A7W35	A2W35	
Noise Level			dB (A)	Cooling: -	Heating: -	Heating: -	
			Power Level dB	Cooling: 60***	Heating: 62*** Heating: 57***	Heating: 62*** Heating: 57***	
Air Flow			m³/min (ft³/min)	Cooling: 97.0 (3426) Heating: 108.0 (3814)			
Refrigeration Co	ontrol Devi	се			Expansion Valve		
Refrigeration Oi	il		cm <sup>3</sup>	PZ68S (1600)			
Refrigerant			kg (oz)	R290, 1.77 (	62.4) (Pre-charged) (-	) (Maximum)	
F-GAS		GWP		3			
1-040		CO <sup>2</sup> eq (ton) (Precharge	CO <sup>2</sup> eq (ton) (Precharged / Maximum)		0.006 / -		
		Height	mm (inch)	1520 (59-27/32)			
Dimension		Width	mm (inch)	1200 (47-1/4)			
		Depth	mm (inch)		430 (16-59/64)		
Net Weight			kg (lbs)	165 (364)			
Pipe Diameter (	Inner)		mm	32			
Standard Lengtl	h		m (ft)		5.0 (16.4)		
Maximum Pipe	Length		m (ft)		30.0 (98.4)		
I/D & O/D Heigh	nt Differend	ce	m (ft)		30.0 (98.4)		
Water Pipe Con	noctor	Indoor	inch		1-1/4		
Water Fipe Con	mector	Outdoor	IIICH		1-1/4		
		Туре		Hermetic M	lotor Compressor (Inv	olute Scroll)	
Compressor		Motor Type		Synchro	onous Electric Motor (	6-poles)	
		Rated Output	kW		3.10		
		Туре			Propeller Fan		
		Material			PP		
		Motor Type			DC (8-poles)		
Fan		Input Power	kW		-		
		Output Power	W		120 × 2		
		Fan Speed	rpm		Cooling: 510 Heating: 480		

Item		Unit	Outdoor Unit		
Fin material				Aluminium (Blue Coat	)
Hoot Exchanger	Fin Type			Corrugated Fin	
Heat Exchanger	Row × Stage × FPI		2 × 58 × 19		
	Size (W × H × L)	mm	44	4 × 1473.2 × 868.2:902	2.7
	Туре			Brazed Plate	
	No. of Plates			44	
Hot Water Coil	Size (W × H × L)	mm		72.0 × 535 × 120.5	
	Water Flow Rate	l/min (m³/h)		Cooling: 25.8 (1.5) Heating: 45.9 (2.8)	
		Ø		Three	
Power Source (Phase, '	Voltage, Cycle)	V		400	
		Hz		50	
Input Power		Condition (Ambient/Water)	A35W7	A7W35	A2W35
•		kW	Cooling: 2.49	Heating: 3.27	Heating: 4.85
Maximum Input Power I	For Heatpump System	kW		12.80	
Outdoor Power Supply	: Phase (Ø) / Max. Current (A)	/ Max. Input Power (W)		3Ø / 19.0 / 12.8k	
Indoor Power Supply : Phase (Ø) / Max. Current (A) / M		Max. Input Power (W)	3Ø / 13.1 / 9.00k		
Power Supply 3 : Phase	e (Ø) / Max. Current (A) / Max.	Input Power (W)	- / - / -		
Starting Current		A		4.9	
Running Current		Condition (Ambient/Water)	A35W7	A7W35	A2W35
		A	Cooling: 3.8	Heating: 4.9	Heating: 7.3
Maximum Current For H	leatpump System	A	19.0		
	al figure of compressor and	Condition (Ambient/Water)	A35W7	A7W35	A2W35
outdoor fan motor.		%	Cooling: 95	Heating: 97	Heating: 96
Power Cord	Number of core			-	
	Length	m (ft)		-	
Thermostat				Electronic Control	
Protection Device				Electronic Control	
Pressure Relief Valve V	Vater Circuit	kPa	Oper	: 400, Close: 280 and	below
	Outdoor Ambient	°C (min. / max.)	F	Cooling: 10 / 43 Heating (Tank): -28 / 4 leating (Circuit): -28 / 3	3 35
Operation Range	Water Outlet	°C (min. / max.)	Cooling: 5 / 20 Heating (Tank): - / 65* <sup>3</sup> , Heating (Circuit): 20 / 55 (Below Ambient -25 °C) * <sup>4</sup> Heating (Circuit): 20 / 75 (Above Ambient -15 °C) * <sup>4</sup>		
Internal Pressure Differential		kPa		Cooling: 22.0 Heating: 63.0	
	Motor Type		Brushless DC M	otor (Sensorless vecto	r control system)
Pump	No. of Speed			Variable Speed	
	Input Power	W		175	
	Туре		Vo	rtex (Piezoelectric sen	sor)
Flow Sensor	Measuring range	l/min		5~60	

Item		Unit		Indoor Unit	
Performance Test Conditi			EN 14511		
Performance Test Conditi	011			EN 14825	
		Condition (Ambient/Water)	A35W7	A7W35	A2W35
Noise Level		dB (A)	Cooling: 22***	Heating: 22***	Heating: 22***
		Power Level dB	Cooling: 35***	Heating: 35***	Heating: 35***
	Depth	mm (inch)		602 (23-45/64)	
Dimension	Width	mm (inch)		599 (23-37/64)	
	Height	mm (inch)		1642 (64-41/64)	
Net Weight		kg (lbs)		89 (196)	
	Room	mm (inch)	31 (1-1/4)		
Water Pipe Diameter	Shower	mm (inch)	19 (3/4)		
Water Drain Hose Inner D	Diameter	mm (inch)	12.00 (17/36)		
Pressure Release Valve		kPa	Open: 800, Close: 640 and below		
Protection Device		А	Earth Leakage Circuit Breaker (40)		
	Volume	I		12	
Expansion Vessel	MWP	bar		4	
Capacity of Integrated Ele	ectric Heater / OLP TEMP	kW / °C	9.00 / 85		
Tank Volume (Spec / Net	t)	L	200 / 185		
Max. Tank Water Set Ten	nperature	°C		65	
Tank Coil Surface		m²		1.8	
Maximum Working	Heat / Cool	Bar		4.0	
Pressure	Tank Circuit	Bar		10.0	
Operating Pressure	Tank Unit	Bar		3.5	
Operating Pressure	Expansion Relief Valve	Bar	8.0		
Expansion Vessel Pre-ch	arge Pressure (DHW Circuit)	Bar	3.5		
Pressure Reducing Valve	Set Pressure (DHW Circuit)	Bar	3.5		

	ltem	Unit	Indoor Unit
	Material		EN14511
Pressure Vessel	Volume	L	185
	Design Pressure	Bar	10
	Material		EN-1.4521
	Diameter	mm	22
Heat Exchanger	Thickness	mm	0.8
	Surface Area	m <sup>2</sup>	1.8
	Total Length	m	25
	Total Corrosion ion (Chloride + Sulphate + Nitric)	mg/L	< 150
	Conductivity @ Water Tank Water Temperature < 60°C	μS/cm	< 1250
DHW Tank	Conductivity @ Water Tank Water Temperature < 65°C	μS/cm	< 1200
	Saturation Index (LSI) @ 20°C		> -4.0 / < 0.4
	PH		6.5 - 8.5

- In case it is necessary to indicate the air flow volume in (I/s), the value in (m<sup>3</sup>/min.) shall be multiplied by 16.7 and rounded down the decimal point.
- If the EUROVENT Certified models can be operated under the "extra-low" temperature condition, -7°C DB and -8°C WB temperature with rated voltage 230V shall be used.
- Capacity is measured at outdoor temperature 7°C DB and 6°C WB with controlled water inlet 30°C and water outlet 35°C (EN 14511-2)
- Flowrate indicated are based on nominal capacity adjustment of leaving water temperature (LWT) 35°C and ΔT=5°C.
- EER and COP classification is at 230V only in occordance with EU directive 2003/32/EC.
- \*\*\* The sound pressure and sound power level is measured with distance 1.0m from the unit and height at 1.5m. (Test carry out for cooling at ambient 35°C DB and Water Out 7°C, heating at ambient 7°C DB / 6°C WB and water out 55°C)
- \*\*\*\* The sound power level is measured with accordance to EN12102 under conditions of the EN14825.
- \*\*\* The sound power level is measured with accordance to EN12102 under full load conditions. (Test carry out for cooling at ambient 35°C DB and Water Out 7°C, heating at ambient 7°C DB / 6°C WB and water out 55°C)
- \*<sup>3</sup> When outdoor ambient is under -15°C, only the backup heater operate above 55°C. (Outdoor unit don't have backup heater.)
- \*<sup>4</sup> Between outdoor ambient -15°C and -25°C, the water outlet temperature gradually decreases from 75°C to 55°C.

## 4. Features

- Inverter Technology
   o Energy saving
- High Efficiency
- Long Installation Piping
   Long piping up to 30 meter
- A-class energy efficiency pump
  - $\circ$   $\,$  Water pump speed can be set by selection at control panel
- Improved deice cycle

#### Protection Feature

- o Random auto restart after power failure for safety restart operation
- o Gas leakage protection
- Prevent compressor reverse cycle
- Inner protector to protect compressor

#### • Serviceability Feature

- Breakdown Self Diagnosis function
- System Status Check Buttons for servicing purpose
- o System Pumpdown Button for servicing purpose
- Front maintenance design for outdoor unit

# 5. Location of Controls and Components

# 5.1 Indoor Unit

## 5.1.1 Remote Controller buttons and display

(B)  $(\mathbf{C})$ (D)The LCD display as shown in this manual are for instructional purpose only, and may differ from the actual unit. **Buttons / Indicator** ■働限電凸尾網新置<u>0</u>:10:34am,Mon (H)(1) Quick Menu button 1.50 \*6 (E) **Back button** (A)40°c (2) Returns to the previous screen (3) LCD Display (3) °C 18°c °C (Actual - Dark background with white icons) G) Main Menu button (4)(2) For function setup (4) **ON/OFF** button (5) Starts/Stops operation **Operation indicator** (6) Illuminates during operation, blinks during (1)(h) (5) alarm. 6) When the backlight is off, press any button to turn it on. (Do not press button (5)) The time until the backlight turns off can be changed **Cross key buttons** in the Menu (Personal setup) Selects an item. Up Press centre Left Right  $\langle \rangle$ Down **Enter button** No glove Fixes the selected content. No pen

Dis	splay								
$\bigcirc$	Mode se	election							
	<b>√</b> Γ					<b>_</b>			
	*1, *2 AUT	° (A)	Depending or temperature, i HEAT or *1,*2 mode.     Auto Heat	the syst COOL o	em selects operation	*1, *2 COOL	88	• C • T	COOL operation is either turned DN or OFF. The outdoor unit provides cooling to the system.
	*1, *2 AUT + *3 TAN	· / • `	Depending or temperature, HEAT + TANK TANK operation     Auto Heat	the syst Cor * <sup>1, *2</sup> on mode	em selects <sup>2</sup> COOL + e.	<sup>*1, *2</sup> COOL + * <sup>3</sup> TANK		• to • T	The outdoor unit provides cooling to the system. The outdoor unit provides heating when boiling tank.
	HEAT	*	<ul> <li>HEAT operation</li> <li>ON or OFF.</li> <li>The outdoor under the system.</li> </ul>	init prov	vides heat to	*3TANK		С т tt	ANK operation is either turned DN or OFF. The outdoor unit provides heat to the water tank.
	HEAT + * <sup>3</sup> TAN	к 💥	<ul> <li>The outdoor u the water tank</li> <li>This mode ca when the water</li> </ul>	and the sel	e system. lected only		active	mode ①	n icons point to the currently Room operation / Tank operation.
								*.	Deice operation.
B	The stat Icon will	on icons us of operatior not display (ui łoliday operati	nder operation C	m i	een) whenev Weekly Time			0.1	weekly timer. Quiet operation status
		one:Room Th →Internal sens			Powerful op	eration statu	s		Demand Control or SG ready or SHP status
	+	Room Heater s	tatus	\$ <b>F</b>	Tank Heater	status			Solar status
		Bivalent status Boiler)							
$\bigcirc$	Tempera	ature of each	zone						
$\bigcirc$	Time an	d day							
E	Water Ta	ank temperat	ure (with electri	c anod	e operation	icon)			
F	Outdoo	r temperature							
G	Sensor	type/Set temp	erature type ic	ons					
	<b>~</b> ‡	Water Tempe →Compensa		10	Water Ten →Direct	nperature	:	2	Pool only
		Room Therm →External	ostat	솹	Room The →Internal			솹	Room Thermistor
(H)	Water p	ressure (bar)							
* <sup>2</sup> O	nly display		mode is unlocked (					nstallers	s or our authorised service partners.

### 5.1.2 Initialization

Before starting to install the various menu settings, please initiate the Remote Controller by selecting the language of operation and installing the date and time correctly.

When power is turned on for the first time, it becomes the setting screen automatically. It can also be set from personal setting of the menu.

#### Selecting the language

Wait while the display is initializing. When initializing screen ends, it turns to normal screen. When any button is pressed, language setting screen appears.

- (1) Scroll with  $\checkmark$  and  $\land$  to select the language.

### Setting the clock


- Select with ∨ or ∧ how to display the time, either 24h or am/pm format (for example, 15:00 or 3:00pm).


- (4) Once the time is set, time and day will appear on the display even if the Remote Controller is turned OFF.


#### Checking the front grilles

Final precaution step to check and confirm whether outdoor front grille is fixed before operating the unit for safety purpose. Select Yes if outdoor front grille is already fixed. Then it will proceed to main screen. Select No if outdoor front grille is not yet fixed. A caution message will pop up to remind on the installation.

\*The display will not appear once you set it.

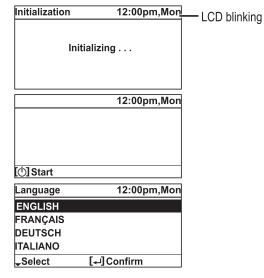

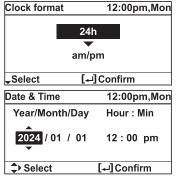

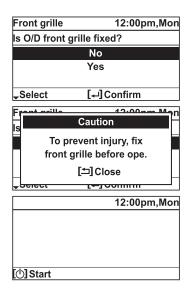

#### 5.1.3 **Quick Menu**

After the initial settings have been completed, you can select a quick menu from the following options and edit the setting.

<ul> <li>□1.50</li> <l< th=""><th>→Select []ON/OFF</th></l<></ul>	→Select []ON/OFF
$< \rightarrow >$	
· · ·	
<ol> <li>Press to display the quick menu.</li> </ol>	$ (2) Use \land \lor \lt > to select menu. $

③ Press 🚽 to turn on/off the select menu.

Quick Menu					
*1 Force DHW _ Powe	erful भी	lky/	Quiet	*2	Force Heater
Weekly Timer 🖧 Forc	e Defrost _	· <del>&lt;</del>	Error Reset		R/C Lock
<≎>Select [+-]ON/OFF		ne instru		at the bottor	etting according to m of the screen. .)

To return to the Main Screen,

Press or ⊃ .

	Only displayed when Tank connection is Yes.
*2 	It is not displayed when the outdoor unit is used alone. When the indoor unit has the heater, it is displayed even if set not to operate the
	heater.

## 5.1.4 How to use the Quick Menu

# Force DHW

Select this icon to turn the Tank DHW on or off.

Press 🚽 to confirm your selection.




#### Note:

- Force DHW is disabled when Force Heater is turned on.
- When Force DHW is turned off, operation & mode should change back to the previous memorized status.

→ Powerful

Select this icon to operate the heating system powerfully.

(The powerful operation starts approximately 1 minute after 🛁 is pressed.)

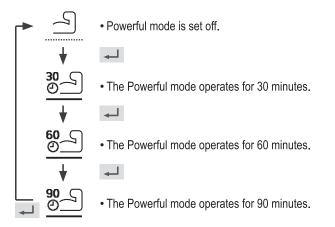

#### Note:


• Powerful is disabled when operation is turned OFF.

# √k₅/ Quiet


Select this icon to operate quietly.

Press 🚽 to confirm your selection.

(The quiet operation starts approximately 1 minute after  $\checkmark$  is pressed.)

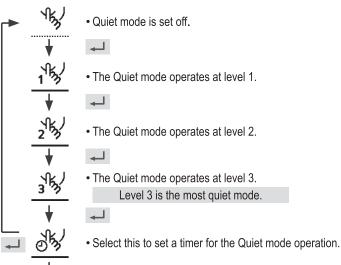

After 1 sec delay.

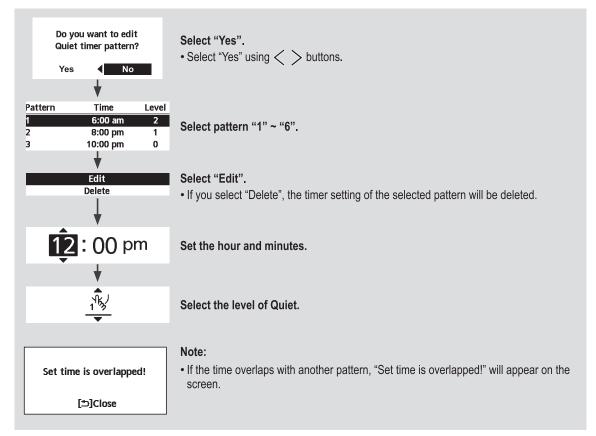


# 登 등 Force Heater

Select to force the Heater on.

Press 🚽 to confirm your selection.

(The Force Heater mode starts approximately 1 minute after  $\checkmark$  is pressed.)

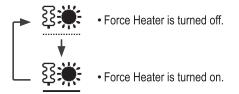

Note:

- Force Heater is disabled whenever operation is already on and "Disabled due to operation ON!" will be displayed.
- It is not displayed when the outdoor unit is used alone, and when the heater is set to OFF even if the indoor unit is connected.


Disabled due to operation ON!

[⊅]Close

# (Timer) Weekly Timer

Select this icon to delete (cancel) or change the pre-set Weekly Timer.


Press 🚽 to confirm your selection.

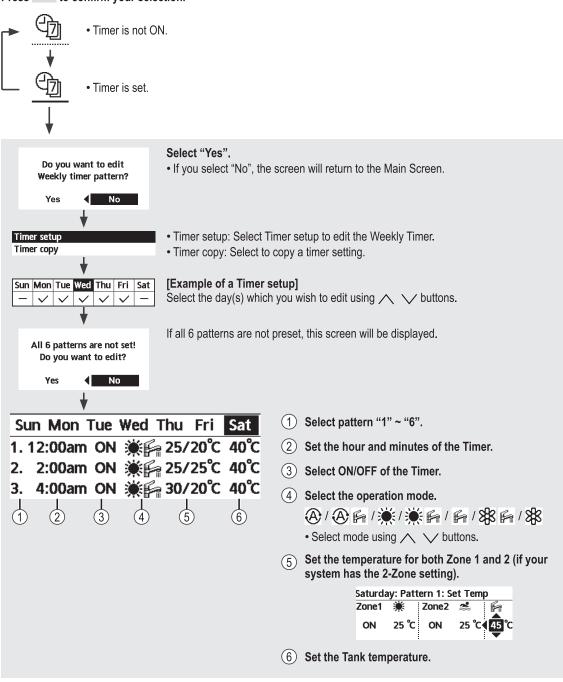

Note:

• Timer is disabled when Force Heater is turned on or Heat-Cool SW is enabled.

• If you have preset the Weekly Timer on 2 zones, you must repeat the same procedure with Zone 2.

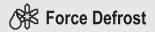

Select to defrost the frozen pipes.

Press do confirm your selection. (When the mode is accepted, below screen will be displayed.)

Request accepted!	
[⊅]Close	

# \* Error Reset

Select to restore the previous settings when error has occurred.

#### Press 🚽 to confirm your selection.

(When the mode has been accepted, below screen will be displayed.)

Request accepted!

[⇒]Close

• Make sure all units are turned off before selecting this mode which restores the whole system to the previous settings.

R/C Lock

Select to lock the Remote Controller.

Press 🚽 to confirm your selection.

(When the mode has been accepted, below screen will be displayed.)

Do you want to lock remote control? Yes 🕨 No

Select "Yes". (The Main Screen will be locked.) • If "No" is selected, the screen will return to the Main Screen.

#### To unlock the Remote Controller

Press any key.

(When the mode has been accepted, below screen will be displayed.)




Enter any 4 digits of number (if the number is correct, the screen will be unlocked).

#### To reset forgotten password (under operation OFF screen)

Press  $\bigcirc$  ,  $\smile$  and > continuously for 5 seconds.

(When the mode has been accepted, below screen will be displayed.)

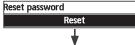

Select "Reset".

1.Password is reset to 0000 2.Remote control is unlocked

(The screen will be off after 3 seconds.)

## 5.1.5 Menus (For user)


Select menus and determine settings according to the system available in the household. All initial settings must be done by an authorised dealer or a specialist. It is recommended that all alterations of the initial settings are also done by an authorised dealer or a specialist.

- After initial installation, you may manually adjust the settings.
- The initial setting remains active until the user changes it.
- The Remote Controller can be used for multiple installations.
- Ensure the operation indicator is OFF before setting.
- The system may not work properly if set wrongly. Please consult an authorised dealer/specialist.

To display <Main Menu>:  $\equiv$ 

To select menu:  $\land \lor < >$ 

To confirm the selected content:

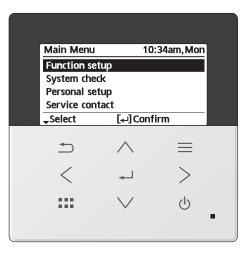

Menu	Default Setting	ault Setting Setting Options / Display		
1 Function setup				
1.1 > Weekly timer				
Once the weekly timer is set up, User can edit from Quick Menu. To set up to 6 patterns of operation on a daily basis.	Timer setup Select day of the week and set the patterns needed (Time / Operation ON/OFF / Mode)		Weekly timer10:34am, MoSun Mon Tue Wed Thu Fri Sat1. 8:00am ON9	
<ul> <li>Disabled if Heat-Cool SW is select "Yes" or if Force Heater</li> </ul>	Timer copy	<b>C</b> (1)	- 2.12:00pm ON 漸∰ 24/28°C 40°C 3. 1:00pm ON 潢 12/10°C →Day →Pattern [⊷]Edit	
is on.	Select day	of the week		
1.2 > Holiday timer	1	r.		
To save energy, a holiday period may be set to either turn	OFF		ON OFF	
OFF the system or lower the	> ON			
temperature during the period.	Holiday start and end. Date and time		Holiday: End 10:34am,Mon Year/Month/Day Hour : Min	
	OFF or lowere	ed temperature	2024 / 01 / 01 10 : 34 am	
<ul> <li>Weekly timer setting may be ten but it will be restored once the H</li> </ul>			Select [⊶]Confirm	
			Quiet 10:34am, Mon	
To operate quietly during the		tart Quiet :	Pattern Time Level	
preset period.	Date a	nd time	1 8:00 am 0	
6 patterns may be set. Level 0 means the mode is off.		quietness: ~ 3	2 5:00pm 1 3 11:00pm 3 →Select [+-]Edit	

Me	enu	Default Setting	Setting Options / Display
1.4	> Quiet priority		
	<ul> <li>To select priority during Quiet mode between Sound and Capacity.</li> <li>If Sound priority is selected, unit will operate in quiet condition only.</li> <li>If Capacity priority is selected, unit will operate in quiet condition but it will prioritize on providing required capacity at the same time.</li> </ul>	Sound	Sound Capacity
1.5	> *1 Room heater	1	
	To set the room heater ON or OFF.	OFF	ON OFF
1.6	> * <sup>2</sup> Tank heater	1	
	To set the tank heater ON or OFF.	OFF	ON OFF
1.7	> *2 Sterilization		
	To set the auto sterilization ON or OFF.	ON	ON OFF
			vent scalding with hot water, or overheating of shower. I of sterilization function field settings according to the local
1.8	> *3 DHW mode (Domestic Hot	Water)	
	To set the DHW mode to Standard or Smart. • Standard mode have faster DHW Tank heat up time. Meanwhile Smart mode take longer time to heat up DHW time with lower energy consumption.	Standard	Standard Smart
	<ul> <li>To set the tank sensor to Top or Center.</li> <li>Selection of the tank sensor to top slow down the start of boiling up the tank and reduce power consumption.</li> <li>Please change this selection to "Center" when the hot water becomes insufficient.</li> </ul>	Тор	Top Center

I *1 It is not displayed when the outdoor unit is used alone or depending on the settings.	1
<sup>*2</sup> Only displayed when Tank connection is Yes.	į
*3 Only displayed when connect Panasonic AIR-TO-WATER HYDROMODULE+TANK.	į
L	

Default Setting Setting Options / Display

2	System check			
2.1	> Energy monitor			
	Present or historical chart of energy consumption, generation or COP.	Present Select and retrieve Historical chart Select and retrieve	Total consumption (1y	ear)
	<ul> <li>Energy consumption (kWh) of he retrieved.</li> </ul>	selected from 1 day/1 week/1year. eating, * <sup>1, *2</sup> cooling, * <sup>5</sup> tank and total may be an estimated value based on AC 230 V and	wwh [1year 1 2 3 4 5 6 7 1: Jan, 2024: 0.0 ki ↔Month \$Mode	
2.2	> *3 System information			
	Shows all system information in each area.	Actual system information of 11 items: Inlet / Outlet / Zone 1 / Zone 2 / Tank / Buffer tank / Solar / Pool / COMP frequency / Pump flowrate / Water pressure *7 Select and retrieve	System information 1. Inlet 2. Outlet 3. Zone 1 4. Zone 2 Page	10:34am,Mor : 0°C : 0°C : 0°C : 0°C
2.3	> Error history			
2.0	<ul> <li>Refer to Troubleshooting for error codes.</li> <li>The most recent error code is displayed at the top.</li> </ul>	Select and retrieve	Error history 1 2 3 4 [+-] Clear history	10:34am, Mor
2.4	> Compressor			
	Shows the compressor performance.	Select and retrieve	Compressor 1. Current frequency 2. (OFF-ON) counter 3. Total ON time [_]Back	
2.5	> Heater			
	Total hours of ON time for * <sup>4</sup> Room heater/ * <sup>5</sup> Tank heater.	Select and retrieve	Heater Total ON time ऄॖऻऻ ऄॖऀॴॖ [⊅]Back	10:34am, Mor : Oh : Oh
(NOT	pump's internal calculation. If [Approx.] is NOT shown on I External Meters. Data stored on the Aquarea u	y Monitor display, data displayed on the remote c Energy Monitor display, data** displayed on the re nit can be mixed between internal calculation and onsumption or generation, please use as reference	ontroller is obtained thr emote controller is obta External Meters.	ined by
*2 Oi *3 Tr *4 It *5 Oi *6 If ca	nly displayed when COOL mode is unloc ne items displayed differ depending on th is not displayed when the outdoor unit is nly displayed when Tank connection is Y [Approx.] is shown on Energy Monitor di- lculation.	used alone.	d through heat pump's inte	rnal

menta		Beldan Oetting		Biopiay	
3 Persona	al setup				
	ote control No.				
number controlle end use • Main rer displaye	ay remote control of a particular remote er so that installer and r are well informed. mote controller is ad as RC-1. Second controller is displayed	Select and retrieve			10:34am,M C-1 ]Confirm
3.2 → Touch	n sound	I			
Turns the	operation sound.	3	OFF / 1 / 2 / 3 / 4	Touch sound Level	9:53am,M
				\$Select [	[₊-]Confirm
3.3 → LCD o	contrast		-	1	
Sets the s	screen contrast.			LCD contrast	10:34am, M
		3		Low	High
				Select [-	⊷]Confirm
3.4 > Backl	light		-		
Sets the observation backlight.	duration of screen	1 min		Backlight 15 secs 1 min	10:34am,M 5 mins 10 mins
				◆ Select [-	⊔]Confirm
3.5 > Backl	light intensity				
	en backlight	4		Backlight intensit	ty 10:34am,M Bright
				Select [-	⊷]Confirm
.6 > *1 Clo	ck format			_	-
	ype of clock display.	am/pm			10:34am,M 4h ▲
		ampin		am	/pm
_				<sup>^</sup> Select [	⊶]Confirm
B.7 > Date a				D-4- 0 7	40.04
Sets the p	present date and time.			Date & Time Year/Month/Day	10:34am,M y Hour : Min
		Year / Month / I	Day / Hour / Min	2024 / 01 / 01	-
				♣ Select	[₊-]Confirm

Menu	Default Setting	Default Setting Setting Options / D		
3.8 > Language				
Sets the display language for the top screen.	ITALIANO / ESP. SWEDISH / NORV CZECH / NEDERL SUOMI / MAGYAR HRVATSKI / LIETU БЪЛГАРСКИ / EI ROMÂNĂ / SHQII	ÇAIS / DEUTSCH / ÁÑOL / DANISH / VEGIAN / POLISH / LANDS / TÜRKÇE / X / SLOVENŠČINA / VIŲ / PORTUGUÊS / ESTI / LATVIEŠU / P / SLOVENČINA / AÏHCЬKA / EΛΛΗΝΙKA	Language 10:34am,M ENGLISH FRANÇAIS DEUTSCH ITALIANO ↓Select [₊-]Confirm	
3.9 > Unlock password				
4 digit password for all the settings.	0000		Unlock password	10:34am, Mon
			\$Select [+	]Confirm
		·		
4 Service contact				
4.1 > Contact 1 / Contact 2			Γ	
Preset contact number for installer.	Select ar	nd retrieve	Service setup Contact 1 Name : Bryan A () : 088123	
			<b>↓</b> Select	

5	Installer setup > System setu	up			
5.1	> *1 Optional PCB connectivity				
	To connect to the external PCB required for servicing.	No			es A
	• If the external PCB is connected (optional), the system will have following addition			al functions:	
	<ol> <li>Control over 2 zones (includ</li> <li>Solar function (the solar there</li> <li>DHW is not applicable for</li> <li>External compressor switch</li> <li>External error signal.</li> <li>SG ready control.</li> <li>Demand control.</li> <li>Heat-Cool SW</li> </ol>	rmal panels connected to WH-ADC *models.			k or the Buffer Tan
5.2	> Zone & Sensor				
	To select the sensors and to	Zone		Zone & Sensor	10:34am, Mor
	select either 1 zone or 2 zone	After selecting 1 or 2 :		Zone	
	system.	to the selection of roo			e system
		If the swimming pool i temperature must be		2 Zones system	
		$\triangle T$ temperature betw		-Select	[₊-]Confirm
		Sensor			
		* For room thermostat,	there is a further	Zone & Sensor	10:34am, Moi
		selection of external of	or internal.	Sensor	10.54411,140
		• If select internal, there			mperature
		selection is 1 zone sy	v available when Zone	Room thermostat	
		Select RC-1 if main re			hermistor
			ed for room temperature	<b>⊸</b> Select	[+-]Confirm
5.3		1	1		
	To reduce the heater power if			Heater capacity	10:34am,Mo
	unnecessary.* 3 kW / 6 kW / 9 kW			3	kW
	3 KW / 0 KW / 9 KW				
	* Options of kW vary depending				
	on the model.				[₊-]Confirm
5.4	> Anti freezing				
	To activate or deactivate the			Y	es
	water freeze prevention when	Yes			ło
	the system is OFF				
5.5	> * <sup>2</sup> Tank connection				
	To connect tank to the system.	No			es Io

*1 It is not displayed when the outdoor unit is used alone.	
*2 It is not displayed when connect Panasonic AIR-TO-WATER HYDROMODULE+TANK.	

Me	enu	Default Setting	Setting Options / I	Display	
5.6	> *1 DHW capacity				
	To select tank heating capacity to variable or standard. Variable capacity heat up tank with fast mode and keep the tank temperature with efficient mode. While standard capacity heat up tank with rated heating capacity.	Variable		Variable Standard	
5.7	> *2 Buffer tank connection	Г	1		
	To connect tank to the system and if selected YES, to set	No		Yes No	
	$\triangle T$ temperature.	> Yes			
		5 °C	Set $ riangle T$ for Buffer Tank	Buffer tank ΔT for Buffer tank Range: (0°C~10°C) Steps: ±1°C \$Select [-4]	10:34am,Mon
5.8	> *1 Tank heater		1		
	To select external or internal tank heater and if External is selected, set a timer for the heater to come on. * This option is available if Tank	External		Tank heater Exter Inter	,
	connection is selected (YES).			-Select [₊-	]Confirm
		> External	1		
		1:30		Tank heater Tank heater: ON tin Range: (0:20~3:00) Steps: ±0:05	
				\$Select [₊.	]Confirm
5.9	> Base pan heater	Γ	1		
	To select whether or not optional base pan heater is	No		Yes No	
	connected. * Type A - The base pan heater	> Yes	1		
	<ul> <li>Type 7 The base pair neuton activates only during deice operation.</li> <li>* Type B - The base pan heater activates when outdoor ambient temperature is 5 °C or lower.</li> </ul>	A	Set base pan heater type*.	Base pan heater ty A ▼ B ▼Select [←	
5.10	> *3 Alternative outdoor sensor	•			
	To select an alternative outdoor sensor.	No		Yes No	

\*1 Only displayed when Tank connection is Yes.
 \*2 It is not displayed when the outdoor unit is used alone and Panasonic AIR-TO-WATER HYDROMODULE+TANK 2Zone model.
 \*3 It is not displayed when the outdoor unit is used alone.

\_\_\_\_\_

To select to enable or disable bivalent connection.	No		Yes No
> Yes			
To select either auto control pattern or SG ready input control pattern or smart control pattern. * This selection only display to select when optional pcb connection set to Yes.	Auto		Auto SG ready Smart
To select a bivalent connection	> Yes > Auto		
to allow an additional heat source such as a boiler to heat- up the buffer tank and domestic hot water tank when heatpump capacity is insufficient at low outdoor temperature. The	-5 °C	Set outdoor temperature for turn ON Bivalent connection.	Bivalent connection 10:34am, M Turn ON: Outdoor temp Range: (-15°C~35°C) Steps: ±1°C
bivalent feature can be set-up	Yes > After selecting	the outdoor temperatu	
either in alternative mode	Control pattern		Bivalent connection 10:34am, N
(heatpump and boiler operate	•	el / Advanced parallel	Control pattern
alternately), or in parallel mode (both heatpump and boiler operate simultaneously), or in advance parallel mode	Select advanced para the tanks.	arallel for bivalent use of Alternative Advanced parallel Advanced paralle Select [+-]Confi	
eatpump operates and boiler rns on for buffer-tank and/or omestic hot water depending of the control pattern setting otions).	Control pattern > Alternative		
	OFF	Option to set external pump either ON or OFF during bivalent operation. Set to ON if system is simple bivalent connection.	Bivalent connection 10:34am,N External pump ON OFF Select [+] Confirm
	Control pattern > Adv	vanced parallel	
	Heat	Selection of the tank	Bivalent connection 10:34am, N
	"Heat" implies Buffer     implies Domestic Hot		Advanced parallel Heat DHW
		veneed neurlists lists	
	Control pattern > Ad	vanced parallel > Heat >	Bivalent connection 10:34am, N
	Buffer Tank is activate     "Yes".	ed only after selecting	Advanced parallel: Heat Yes No
			-select [₊-]Confirm
			Bivalent connection 10:34am, N
	-8 °C	Set the temperature threshold to start the	Heat start: Target temp. Range: (-10°C~0°C) Steps: ±1°C -8

Default Setting Setting Options / Display

	0:30	Delay timer to start the bivalent heat source (in hour and minutes).	Bivalent connection 10:34am, Mon Heat start: Delay time Range: (0:00~1:30) Steps: ±0:05
	-2 °C	Set the temperature threshold to stop the bivalent heat source.	Bivalent connection       10:34am, Mon         Heat stop: Target temp.         Range: (-10°C~0°C)         Steps: ±1°C         \$Select
	0:30	Delay timer to stop the bivalent heat source (in hour and minutes).	Bivalent connection 10:34am, Mon Heat stop: Delay time Range: (0:00~1:30) Steps: ±0:05
	Control pattern > Adv	/anced parallel > DHW >	Yes
	• DHW Tank is activate "Yes".		Bivalent connection 10:34am, Mon Advanced parallel: DHW Yes No
	0:30	Delay timer to start the bivalent heat source (in hour and minutes).	Bivalent connection 10:34am, Mon DHW: Delay time Range: (0:30~1:30) Steps: ±0:05
SG ready input control for	> Yes > SG ready	I	
SG ready input control for         bivalent system follow below         input condition.         SG signal       Operation pattern         Vcc-bit1       Vcc-bit2       Open       Heat Pump OFF, Boiler OFF         Open       Open       Heat Pump ON, Boiler OFF       Boiler OFF         Open       Short       Heat Pump OFF, Boiler ON       Boiler ON         Short       Short       Heat Pump ON, Boiler ON       Boiler ON	OFF	Option to set external pump either ON or OFF during bivalent operation. Set to ON if system is simple bivalent connection.	Bivalent connection 10:34am,Mon External pump ON OFF Select [+-]Confirm
To do settings related to	> Yes > Smart		
electricity and boiler so that unit is able to determine whether to operate heat pump or boiler at a particular period depends on operating cost of both heat sources. These settings are electricity price, boiler price, season, schedule etc.	OFF	Option to set external pump either ON or OFF during bivalent operation. Set to ON if system is simple bivalent connection.	Bivalent connection 10:34am,Mon External pump ON OFF Select [+-]Confirm

Menu	Default Setting Setting	) Options / D	isplay
	> Yes > Smart > After selecting	for the externa	al pump > Energy price
			Bivalent connection 10:34am,Mon Energy price Electricity Boiler
> Yes > Smart > After selection Electricity		for the extern	•
	0.0 * / kWh - There are total 10 different prices can be set for Electricity: Bivalent connect		Range: (0~999.9 */kWh) Steps: ±0.1*/kWh
	> Yes > Smart > After selecting	for the externation	al pump > Energy price > Boiler
	0.0 * / kWh B - Refer to method of Electricity price setting B above for setting of boiler price. F - After finish setting of boiler price, set the boiler efficiency (Range : 0 ~ 99%).		Bivalent connection       10:34am,Mon         Boiler price         Range: (0~999.9 */kWh)         Steps: ±0.1*/kWh         \$\$Select
	0% * Set the price according to value boiler or gas supply company.	provided by	Bivalent connection 10:34am,Mon Boiler efficiency Range: (0~99%) Steps: ±1%
			\$Select [₊-]Confirm

Remark : \* Currency setting depends on where you use this product.

Default Setting Setting Option
--------------------------------

> Yes > Smart > After selecting for the externa setting	I pump > Schedule	> Season
Season 1 : Dec (Refers to Winter	<b>Bivalent connection</b>	10:34am,Mon
season)	Schedule	
Season 2 : Mar (Refers to Spring	Season se	
season)	Schedule s	setting
Season 3 : Jun (Refers to Summer		
season)	-Select [⊶]	Confirm
Season 4 : Oct (Refers to Autumn season)	<b>B</b>	
<ul> <li>There are total 4 seasons to be set</li> </ul>	Bivalent connection	
<ul> <li>Set the starting month for each</li> </ul>	Season 1: Start mon	th
season. (Eg. when Season 1 is set to Dec and	Range: (Jan~Dec) Steps: ±1month	Dec
Season 2 is set to Mar, month of December to February will be treated as Season 1).	\$Select [₊-]	Confirm
> Yes > Smart > After selecting for the externa setting	I pump > Schedule	> Schedule
Start time (Pattern 1) : 3:00am	Bivalent connection	10:34am,Mon
Start time (Pattern 2) : 9:00am	Schedule setting	,
Start time (Pattern 3) : 4:00pm	Seaso	n 1
Start time (Pattern 4) : 9:00pm	Season 2	
- For each season, there are total 4 patterns	Season 3	
can be set.	-Select [₊-]	Confirm
	Season 1	10:34am,Mon
Price (Pattern 1/2/3/4) : 1	Start time	Price(*/kWh)
- Set the target start time and the appropriate	1. 3:00am	0.0
electricity price for each pattern.	2. 9:00am	0.0
	3. 4:00pm	0.0
	-Select [⊶]E	dit
	Bivelent connection	ո
- Select "1" to edit both start time and	S Selec	· _
electricity price. Select "2" to edit electricity	1: To edit time & p	
price only.	2: To edit price on	iy
price only.		2

Menu	Default Setting	Setting Options / D	/ Display		
	"Clock format". Range: (0		Season 1 Pattern 1: Sta Range: (0.00 Steps: ±1ho	~23.00)	
			<pre>\$Select</pre>	↓ [₊-]Confirm	
		different electricity inder "Energy price > lectricity price 10). In the upper right corner is set value of Electricity rice 10. to "0", the electricity is 0.0 * / kWh. It is for staller when 0.0 is the	Season 1 Pattern 1: Pri Range: (0~1 Steps: ±1		
5.12 >*1 External SW					
	No			Yes No	
5.13 > * <sup>2</sup> Solar connection	1	1			
The optional PCB connectivity must be selected YES to	No			Yes No	
<ul><li>enable the function.</li><li>If the optional PCB</li></ul>	> Yes				
<ul> <li>connectivity is not selected, the function will not appear on the display.</li> <li>DHW is not applicable for WH-ADC models.</li> </ul>	Buffer tank	Selection of the tank	Solar connect	tion 10:34am,Mo Buffer tank DHW tank []Confirm	
	> Yes > After selectin	g the tank			
	10 °C	Set ∆T ON temperature	Solar connect <u>AT Turn ON</u> Range: (6°C- Steps: ±1°C	15°C)	
	> Vec > After coloction	g the tank ≻ ∆T ON tem	\$Select	[₊-]Confirm	
	5 °C	Set $\triangle$ T OFF temperature	Solar connect ΔT Turn OFF Range: (2°C- Steps: ±1°C	· · · · · · · · · · · · · · · · · · ·	
			\$Select	[₊-]Confirm	

\*1 It is not displayed when the outdoor unit is used alone.

\*2 It is not displayed when the outdoor unit is used alone and Panasonic AIR-TO-WATER HYDROMODULE+TANK 2Zone model.

Menu	Default Setting	Setting Options / D	Display	
	> Yes > After selecti	ng the tank > $\triangle$ T ON temperature > $\triangle$ T OFF temperature		
	5 °C	Set Antifreeze temperature	Solar connection Anti freeze Range: (-20°C~1 Steps: ±1°C	10:34am, Mor
			<pre>\$Select</pre>	[₊-]Confirm
		ng the tank >	perature > ∆T O	FF temperature
	80 °C	Set Hi limit	Solar connection Hi limit Range: (70°C~9 Steps: ±5°C	·
			<pre>\$Select</pre>	[₊-]Confirm
5.14 > *1 External error si	ignal			
	No			Yes ▲ No
5.15 > *¹ Demand control				
	No			Yes ▲ No
5.16 → *1 SG ready				
	No			Yes ▲ No
	> Yes > After selecti	> Yes > After selecting Capacity		
	120 %	Capacity (1) & (2) of DHW (in %), Heat (in %) and Cool (in °C)	SG ready Capacity [1-0]: I Range: (50%~1 Steps: ±5%	
	> Yes > After selection	ng Power consumption >	> *HPU stop con	sumption
	*², *4 3.6kW	*HPU stop consumption	SG ready HPU stop consu Range: (0.5kW- Steps: ±0.1kW	-10.0kW)
				[₊-]Confirm
	> Yes > After selecti	ng *HPU stop consumpti	•	
	*³ 3.6kW	Consumption (1) & (2) of DHW (in kW), Heat (in kW) and Cool	SG ready Consumption [1 Range: (0.5kW- Steps: ±0.1kW	
		(in kW)	<pre>\$Select</pre>	[₊-]Confirm

Remark : \* HPU means Heat pump unit (Outdoor unit).

\*1 It is not displayed when the outdoor unit is used alone.
 \*2 Depending on the model, it may be less than 3.6kW.
 \*3 Depending on the model, it may be less than 3.6kW or more than 3.6kW.
 \*4 Even though the setting value is lower than 3.0kW, actual power consumption can be 3.0kW caused by back-up heater operation.

5.17	> *1 External compressor SW		
		No	Yes No
		> Yes	
			Ext. compressor SW 11:34am,Mon
			Heater
		Heat source	Heat source
			<sup>^</sup> Select [⊷]Confirm
5.18	> Circulation liquid		
	To select whether to circulate		Circulation liquid 10:34am, Mon
	water or glycol in the system.	Water	Water
		vvater	Glycol
			<b>↓</b> Select [+-]Confirm
5.19	> *1, *2 Heat-Cool SW	1	
		No	Yes No
5.20	> *1 Force heater	1	
	To turn on Force heater either	Manual	Force heater 10:34am,Mon
	manually (by default) or automatically.		Auto
			Manual
			^Select [₊-]Confirm
5.21	> Force defrost	T	
	If auto selection is set, outdoor unit will start defrost operation if long heating hour operate during low outdoor temperature.	Manual	Auto Manual
5.22	> *1 Defrost signal		
	To turn on defrost signal to stop fan coil during defrost operation. (If defrost signal set to yes, bivalent function will not available to use)	No	Yes No

\*1 It is not displayed when the outdoor unit is used alone. \*2 Only displayed when COOL mode is unlocked. (This mean when COOL mode is available)

Ме	nu	Default Setting	Setting Options / I	Display
5.23	> Pump flowrate			
	To set variable flow pump control or fix pump duty control.	ΔT		AT Max. Duty
5.24	> DHW Defrost	1	r	
	Allow system to run defrost by using hot water instead of room unit for better room comfort.	Yes		Yes
5.25	> Heating control		1	
	To select unit operation condition whether to achieve set temperature faster or to	Comfort		Comfort Efficiency
	save energy.	> Efficiency	- -	
	When "Efficiency" is selected, the time setting will transition to 1st, 2nd, and 3rd stage. Increasing the time will slowly increase the capacity.			Heating control10:34am,MoEfficiency: Stage 1Range: (0:00~1:00)Steps: ±0:05
		0:20		Select []Confirm
5.26	> External meter		1	
5.20	To set which external meter to be used depends on meter connection. There are generation meters and various types of electricity meters. For generation meters, there are two connection systems :- a) One generation meter system : Heat-cool meter only	Heat-cool meter : No * Tank meter : No Elec. meter HP : No Elec. meter 1 (PV) : No Elec. meter 2 (Building) Elec. meter 3 (Reserve * Only available if both Tank connection are s	) : No ) : No Heat-cool meter and	External meter       10:34am,Mo         Heat-Cool meter         Tank meter         Elec. meter HP         Elec. meter 1 (PV)         Select       []Confirm         External meter       10:34am,Mo         Elec. meter 1 (PV)         Select       []Confirm         Elec. meter HP       Elec. meter 1 (PV)         Elec. meter 2 (Building)       Elec. meter 3 (Reserve)         ^Select       []Confirm
	<ul> <li>b) Two generation meter system :</li> </ul>	> Heat-cool meter		
	Heat-cool meter and Tank meter	<ul> <li>Set Heat-cool meter to generation meter is co</li> <li>It is to measure energ pump unit during heat operation (one genera during heating, cooling (two generation meter</li> </ul>	onnected. y generation of heat ing and cooling only ation meter system) or g and DHW operation	Yes A No

Remark : Elec. means "Electricity" HP means "Heat pump"

Menu	Default Setting Setting Options / Display
	> Tank meter
	<ul> <li>Set Tank meter to Yes when this generation meter is connected.</li> <li>It is to measure energy generation of heat pump unit during DHW operation*.</li> <li>* Only available if both Heat-cool meter and Tank connection are set to Yes.</li> <li>Only set Tank meter to Yes when the connection is two generation meter system.</li> </ul>
	> Elec. meter HP
	<ul> <li>Set Elec. meter HP to Yes when this electricity meter is connected.</li> <li>It is to measure energy consumption of heat pump unit.</li> </ul>
	> Elec. meter 1 (PV)
	<ul> <li>Set Elec. meter 1 (PV) to Yes when this electricity meter is connected.</li> <li>It is to measure energy generation of solar system. This data will be displayed only on Cloud system.</li> </ul>
	> Elec. meter 2 (Building)
	<ul> <li>Set Elec. meter 2 (Building) to Yes when this electricity meter is connected.</li> <li>It is to measure energy consumption of the building. This data will be displayed only on Cloud system.</li> </ul>
	> Elec. meter 3 (Reserve)
	<ul> <li>Set Elec. meter 3 (Reserve) to Yes when this electricity meter is connected.</li> <li>It is to measure energy consumption. This data will be displayed only on Cloud system.</li> </ul>
27 > Electrical anode	
To enable or disable operation of electrical anode.	Yes (for -AN models) No (for non -AN models) Yes : display No : no display error : blinking

Remark : Elec. means "Electricity" HP means "Heat pump"

### 5.28 > \*1 Extra pump

5.26 × Extra pump	1	1		
Selects whether the extra pump is used in the circulation circuit	No	No Heat DHW		
for heating or in the circulation	> DHW			
circuit for DHW, or it is not used. If set to "No", the pump is not used.			DHW Pump ON tim	11:34pm,Mon e
If set to "Heat", the extra pump is used as a pump for the	8:00 am / 8:00	Set Pump ON time	8	<b>: 00</b> am
circulation circuit (for heating/			♣ Select	[₊-]Confirm
cooling). If set to "DHW", the extra pump circulates domestic hot water in the circuit for DHW to prevent the domestic hot water from			DHW Pump OFF tir	11:34pm,Mon ne
	8:00 pm / 20:00	Set Pump OFF time	8	<b>: 00</b> pm
getting cold.			⇒ Select	[₊-]Confirm
<ul> <li>If set to "Comfort", hot water is continuously circulated</li> </ul>			DHW	11:34pm,Mon
during DHW operation.		Select	Comfort	
<ul> <li>If set to "Efficiency", the extra pump turns ON and</li> </ul>	Efficiency	Comfort or Efficiency		Efficiency
OFF alternatively following			<sup>^</sup> Select	[₊-]Confirm
ON/OFF time setting.	> DHW > After selecting Efficiency			
	0:15	Set ON time	DHW ON time	11:34pm,Mon
			Range: (0:05 Steps: ±0:05	~1:00)
			<pre>\$Select</pre>	[₊-]Confirm
	0:15	Set OFF time	DHW	11:34pm,Mon
			OFF time	
			Range: (0:05 Steps: ±0:05	~1:00)
			<b>\$</b> Select	[₊-]Confirm
5.29 > External heater				
Set to "YES" after an external heater is installed. (This menu is only displayed for the Control Module model (indoor unit))	No			Yes No
5.30 > Static pressure				
If set to "No", the fans in the outdoor unit rotate at a normal speed. If set to "YES", the fans in the outdoor unit rotate at a higher speed than normal for response to high static pressure.	No			Yes No

,	
*1 It is not displayed when the outdoor unit is used alone.	

Menu	Default Setting	Setting Options / Display
5.31 > *1 Cooling capacity		
Selects the cooling capacity. If set to "Efficiency", the cooling operation is performed at rated capacity for efficient cooling. If set to "Comfort", the cooling operation is performed at maximum capacity.	Efficiency	Comfort Efficiency

·	7
*1 Only displayed when COOL mode is unlocked (This means when COOL mode is available).	!

Men		Default Setting	Setting Options / I	Jispiay-	
6 l	nstaller setup > Operation s	etup			
	To access to the four major unctions or modes.	4 main	modes	Operation setup Heat Cool	10:34am,M
		Heat / *1, *2 Cool /	* <sup>1,</sup> * <sup>2</sup> Auto / * <sup>3</sup> Tank	Auto Tank ↓Select [	⊷]Confirm
6.1	> Heat	I			
	Outdoor		ater temp. for heating ON / door temp. for heating OFF / △T for heating ON / Heater ON/OFF		10:34am, M heating ON for heating OFF DN [+-] Confirm
		> Water temp. for hea	ating ON		
		Compensation curve	Heating ON temperatures in compensation curve or direct input.	Di	10:34am, M temp. ation curve rect [+-] Confirm
		> Water temp. for heating ON > Compensation curve			
		X axis: -5 °C, 15 °C Y axis: 55 °C, 35 °C	Input the 4 temperature points (2 on horizontal X axis, 2 on vertical Y axis).	Heat ON: Water to 55°C 75 35°C 25 -20 [-5°C ↓>Select	
		Temperature range fo WH-WXG model: 25 ° Regardless of the abo the operating conditio If 2 zone system is se 2. "Zone 1" and "Zone 2"	°C ~ 75 °C ove setting, there is a lim n on page 3. lected, the 4 temperature " will not appear on the d	it to the water temp e points must also	be input for Zor
		> Water temp. for hea	ating ON > Direct		
		35 °C     Temperature for heating ON     Coperation setup     10:3       35 °C     Temperature for heating ON     Range: (25°C~75°C)			
				\$Select [	⊶]Confirm
		the operating conditio	°C ~ 75 °C ove setting, there is a lim n on page 3. lected, temperature set p	point must input for	Zone 2.

\*1 The system is locked to operate without COOL mode. It can be unlocked only by authorised installers or our authorised service partners. \*2 Only displayed when COOL mode is unlocked (This means when COOL mode is available).

\_\_\_\_\_

\*<sup>3</sup> Only displayed when Tank connection is Yes.

Menu
------

Default Setting	Set
-----------------	-----

	> Outdoor temp. for I	heating OFF		
	· · ·	heating OFF > Heat OFF	outdoor temp.	
	24 °C	Set outdoor temp to stop heating. Setting range is 6°C~35°C	Operation setup Heat OFF: Outdoor t Range: (6°C~35°C) Steps: ±1°C	10:34am, Mon emp. 24 °C
		6°C~35°C	\$Select [₊](	Confirm
	> Outdoor temp. for I	heating OFF > Heat ON o	outdoor temp.	
	23 °C	Set outdoor temp to start heating. Setting range is 5°C~X°C (X is heating OFF temp1)	Operation setup Heat ON: Outdoor ter Range: (5°C~23°C) Steps: ±1°C	10:34am,Mon np. 23 °C Confirm
	0:30 min	heating OFF > Heat ON I Set delay time from heating OFF to heating ON.	Operation setup Heat ON: Delay time Range: (0:30~24:00) Steps: ±0:30	10:34am,Mon
	> △T for heating ON	<u> </u>		
	5 °C	Set △T for heating ON. * This setting will not available to set when pump flowrate set to Max. duty.	Operation setup Heat ON: ΔT Range: (1°C~15°C) Steps: ±1°C \$Select [₊-]C	10:34am, Mon
	> *1 Heater ON/OFF	, ,		
	> Heater ON/OFF > C	Outdoor temp. for heater	ON	
	0 °C	Temperature for heater ON	Operation setup Heater ON: Outdoor Range: (-20°C~15°C) Steps: ±1°C	10:34am,Mon temp.
	> Heater ON/OFE > F	Delay time for heater ON	•	Confirm
	0:30 min	Delay time for heater on to turn on	Operation setup Heater ON: Delay tin Range: (0:10~1:00) Steps: ±0:10	10:34am,Mon ne
	> Heater ON/OFF > V	Vater temperature for he	•	
	-4 °C	Setting of water temperature to turn on from water set temperature.	Operation setup Heater ON: ∆T of tal Range: (-10°C~-2°C) Steps: ±1°C	10:34am,Mon rget Temp. 4°C Confirm
*1 It is not displayed when the outdoor unit is	used alone.			

Menu	Default Setting	Setting Options / D	)isplay		
	> Heater ON/OFF > V	Nater temperature for he	eater OFF		
	-2 °C	Setting of water temperature to turn off from water set temperature.	Operation setup Heater OFF: ΔT of f Range: (-8°C~0°C) Steps: ±1°C	10:34am, Mon target Temp.	
6.2 >* <sup>1, *2</sup> Cool			*2010CL [+]		
To set various water & ambient temperatures for cooling.	Water temperatures for cooling ON and △T for cooling ON.		Operation setup Cool Water temp. for co ΔT for cooling ON	10:34am, Mon oling ON	
			-select [₊-]	Confirm	
	> Water temp. for co	oling ON			
	Compensation curve	Cooling ON temperatures in compensation curve or direct input.	Operation setup Cool ON: Water ten Compensati Direc	on curve ct	
	5 14/- (			Confirm	
	Water temp. for cooling ON > Compensation curve     Cool ON: Water temp: Zone1				
	X axis: 20 °C, 30 °C Y axis: 15 °C, 10 °C	Input the 4 temperature points (2 on horizontal X axis, 2 on vertical Y axis)	<b>15°C</b> <sup>20</sup> <b>10°C</b> 5 15 <b>20°C</b>	30°C 30	
	2.	elected, the 4 temperature will not appear on the di			
	> Water temp. for co	· · ·		,	
	10 °C	Set temperature for Cooling ON	Operation setup Cool ON: Water ten Range: (5°C~20°C) Steps: ±1°C	10:34am, Mon np.: Zone2	
	• If 2 zone system is se	elected, temperature set p			
	• "Zone 1" and "Zone 2" will not appear on the display if only 1 zone system.				
	> $\triangle$ T for cooling ON				
	5 °C	Set △T for cooling ON * This setting will not available to set when pump flowrate set to	Operation setup Cool ON: ΔT Range: (1°C~15°C) Steps: ±1°C	10:34am, Mon	
		Max. duty.	\$Select [₊-]	Confirm	

\*1 The system is locked to operate without COOL mode. It can be unlocked only by authorised installers or our authorised service partners. \*2 Only displayed when COOL mode is unlocked (This means when COOL mode is available).

Menu	Default Setting	Setting Options / D	isplay	
6.3 > *1, *2 Auto				
Automatic switch from Heat to Cool or Cool to Heat.		s for switching from Heat Cool to Heat.	Operation setup Auto Outdoor temp. for	10:34am, Mon (Heat to Cool)
	Outdoor temp. for (Heat to Cool) / Outdoor temp. for (Cool to Heat)		Outdoor temp. for	
	> Outdoor temp. for	(Heat to Cool)		
	15 °C	Set outdoor temperature for switching from Heat to Cool.	Operation setup Auto: Outdoor tem Range: (11°C~25°C) Steps: ±1°C	
	> Outdoor temp. for	(Cool to Heat)	•	
	10 °C	Set outdoor temperature for switching from Cool to Heat,	Operation setup Auto: Outdoor tem Range: (5°C~14°C) Steps: ±1°C	10:34am, Mon p.(Cool to Heat)
			\$Select [+-]	Confirm
6.4 >* <sup>3</sup> Tank Setting functions for the tank.		nax) / Tank heat up time t temp. / Sterilization	Operation setup Tank Floor operation tim Tank heat up time Tank re-heat temp Select	(max)
	• The display will show	3 functions at a time.		
	> Floor operation tim	ie (max)		
	8:00	Maximum time for floor operation (in hours and minutes)	Operation setup Tank: Floor ope. Range: (0:30~10: Steps: ±0:30	. ,
			\$Select [₊⊣	]Confirm
	> Tank heat up time (	(max)		
		Maximum time for	Operation setup Tank: Heat up time	
	1:00	heating the tank (in hours and minutes)	Range: (0:05~4:00 Steps: ±0:05	1:00
		heating the tank (in hours and minutes)	Steps: ±0:05	
	1:00 > Tank re-heat temp. -8 °C	heating the tank (in hours and minutes)	Steps: ±0:05	1:00 Confirm 10:34am, Mon

\*1 The system is locked to operate without COOL mode. It can be unlocked only by authorised installers or our authorised service partners.
 \*2 Only displayed when COOL mode is unlocked (This means when COOL mode is available).
 \*3 Only displayed when Tank connection is Yes.

Menu


Default Setting	Setting Options / D	Display
> Sterilization		
Monday	Sterilization may be set for 1 or more days of the week. Sun / Mon / Tue / Wed / Thu / Fri / Sat	Operation setup     10:34am, Mon       Sterilization: Day       Sun     Mon       Tue     Wed       Thu     Fri       Sat       -     -       → Day     \$\vee\/\]       [+-]Confirm
> Sterilization: Time		
12:00	Time of the selected day(s) of the week to sterilize the tank 0:00 ~ 23:59	Operation setup 10:34am,Mon Sterilization: Time
> Sterilization: Boiling	g temp.	
65 °C	Set boiling temperatures for sterilize the tank.	Operation setup     10:34am,Mon       Sterilization: Boiling temp.       *1 Range: (55°C~65°C)       Steps: ±1°C       65°C
> Sterilization: Ope. time (max)		
0:10	Set sterilizing time (in hours and minutes)	Operation setup10:34am, MonSterilization: Ope. time (max)Range: (0:05~1:00)Steps: ±0:05
		\$Select [₊-]Confirm


7 Installer setup > Service set	ир	
7.1 > Pump maximum speed		
To set the maximum speed of the pump.	Setting the flow rate, max. duty and operation ON/OFF of the pump.	Service setup 10:34am,Mon Flow rate Max. Duty Operation
	Flow rate: XX.X L/min Max. Duty: 0x40 ~ 0xFE, Pump: ON/OFF/Air Purge	46.0 L/min OxCE OFF
7.2 → * <sup>2</sup> Zone2 pump speed	1	
To set the zone2 pump speed.	Flow rate: XX.X L/min Max. Duty: 0x46 ~ 0xC5, Pump: ON/OFF	Service setup     11:34pm,Mon       Flow rate     Max. Duty     Operation       0.0 L/min     0x50     OFF       → Select     [+] Confirm

¦ *1 When using external heater, 55°C ~ 75°C.	i
1 *2 Only displayed when Banasania AIR TO WATER HYDROMORI II E+TANK 27ana model	- i
*2 Only displayed when Panasonic AIR-TO-WATER HYDROMODULE+TANK 2Zone model.	İ

Menu	Default Setting	Setting Options / D	Display	
7.3 > Dry concrete				
To dry the concrete (floor, walls, etc.) during construction.	Edit to set the tempe	rature of dry concrete.	Service setup Dry concrete	10:34am,Mon ON
Do not use this menu for any other purposes and in period	ON / Edit		Edit	
other than during construction	> Edit		<b>⊸</b> Select	[₊-]Confirm
	Stages: 1 Temperature: 25 °C	Heating temperature for drying the concrete. Select the desired stages: 1 ~ 10,	Service setup Dry concrete: 1 Range: (25°C~! Steps: ±1°C	55°C) 25 °C
		range: 1 ~ 99	*Select	[₊-]Confirm
	ON Confirm the setting temperatures of dry concrete for each stage.		Service setup Dry concrete: S Stage Water set temp Actual water to [[]] OFF	: 1/10 . : 25°C
7.4 > Service contact	1			
To set up to 2 contact names and numbers for the User.	Service engineer's name and contact number. Contact 1 / Contact 2		Service setup 10:34am, Mod Service contact: Contact 1 Contact 2	
	> Contact 1 / Contact	t <b>2</b>	<b>↓</b> JEIGET	
	Contact name or number.		Service contact Contact 1 Name : Bry	t 10:34am, Mon an Adams
	Name / phone icon		© : 088 ↓Select	12345678 [₊-]Edit
	Input name and number		Contact-1 ABC/abc 0-9/Other ABCDEFGHIJKLMNOPQR Space STUVWXYZ abcdefghi jklmnopqrstuvwxyz Conf ₄→Select [₄-]Enter	
		: alphabet a ~ z. imber: 1 ~ 9	4	2 3 ( 5 6 ) 8 9 - BS 0 # Conf [+-]Enter


Installer setup > Remote con	trol setup		
<ul> <li>To select whether to use one remote controller or two remote controllers.</li> <li>Select Single when one remote controller is connected. Select Dual when two remote controllers are connected. Second remote controller can be used for zone 2 room temperature control.</li> </ul>	Single	Selection of one or two remote controllers.	Single Dual
		When Dual is selected, Main remote controller (RC-1) will	
		start to communicate with second remote controller (RC-2) and display "RC-1 & RC-2 sync. in progress". They are ready to be used after this pop up screen disappears.	RC-1 & RC-2 sync. in progress!
		When both remote controllers have	Communication with
		communication	RC-2 failed!
		failure, it will display "Communication with RC-2 failed".	[⊐]Close

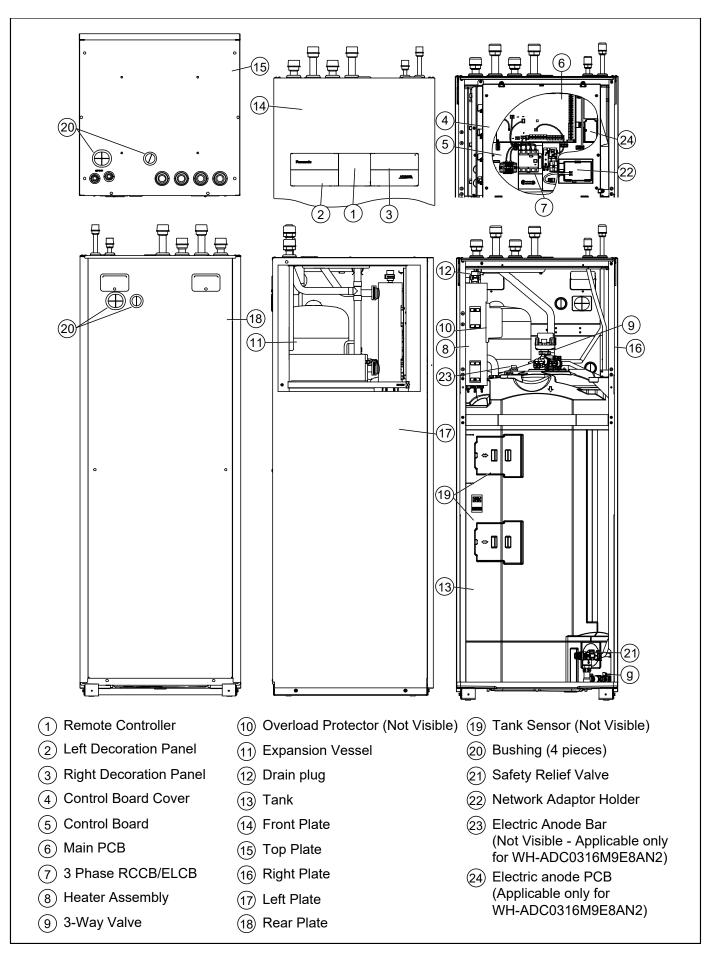

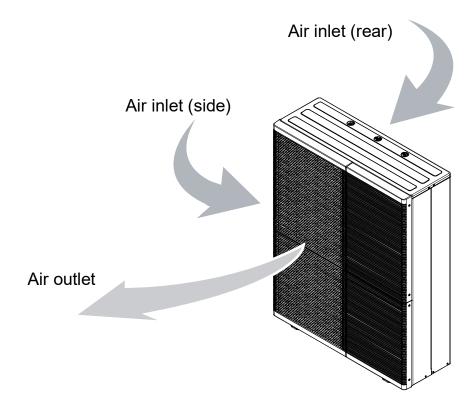


# 6. Dimensions


#### 6.1 Indoor Unit

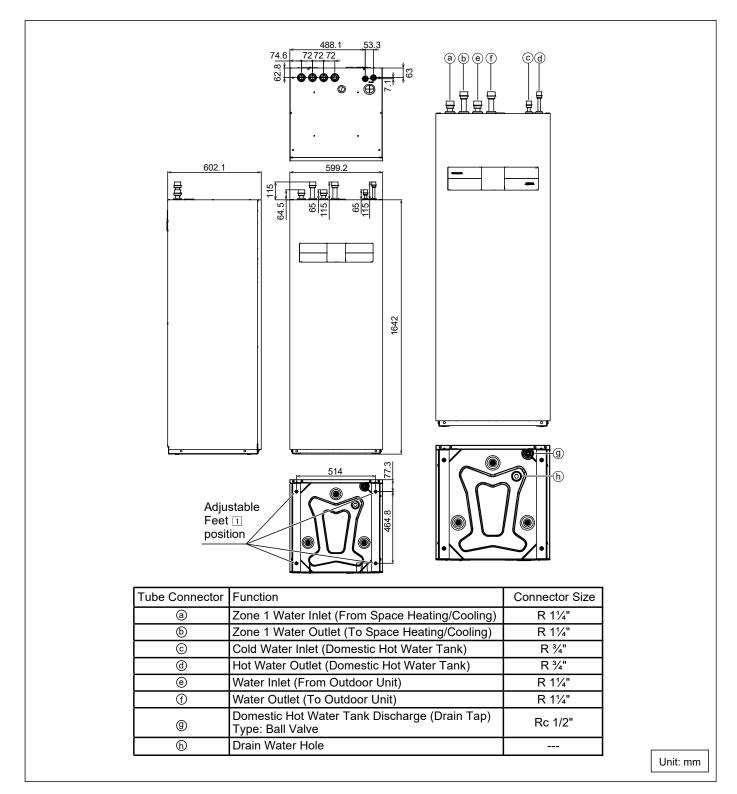

## 6.2 Outdoor Unit

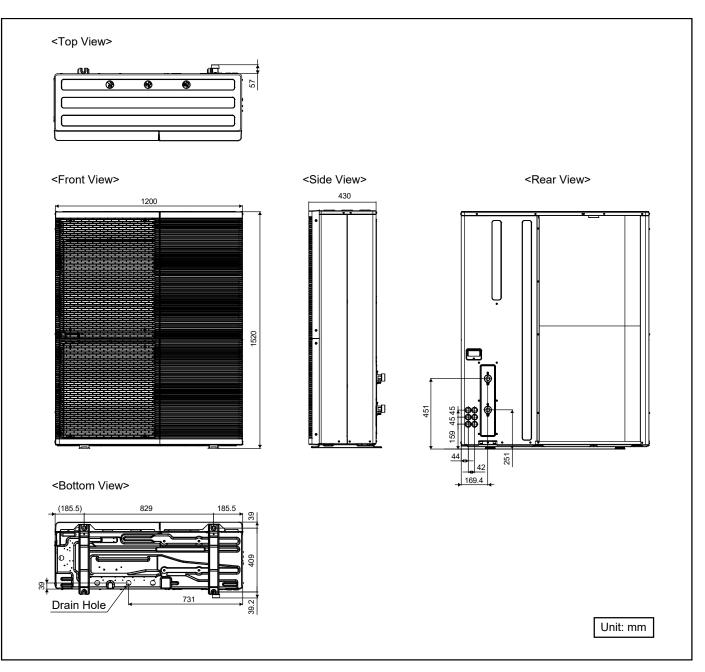

# 7. Refrigeration and Water Cycle Diagram

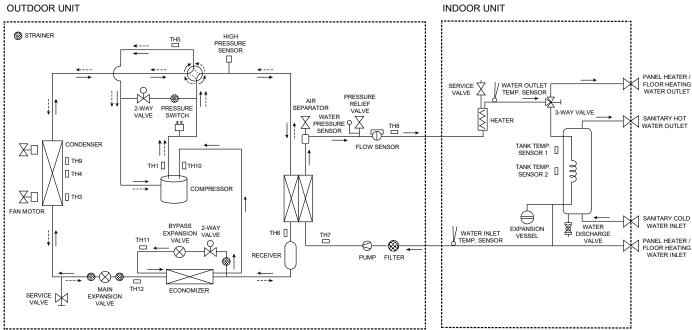


·····> REFRIGERANT CYCLE [COOLING]

TH1	Outdoor discharge sensor
TH2	-
TH3	Outdoor heat exchanger sensor
TH4	Outdoor ambient sensor
TH5	Evaporator outlet sensor
TH6	Refrigerant sensor
TH7	Water inlet 2 sensor
TH8	Water outlet sensor 2
TH9	Outdoor heat exchanger middle sensor
TH10	Bypass outlet sensor
TH11	Bypass inlet sensor
TH12	Economizer outlet sensor

75


# 8. Block Diagram

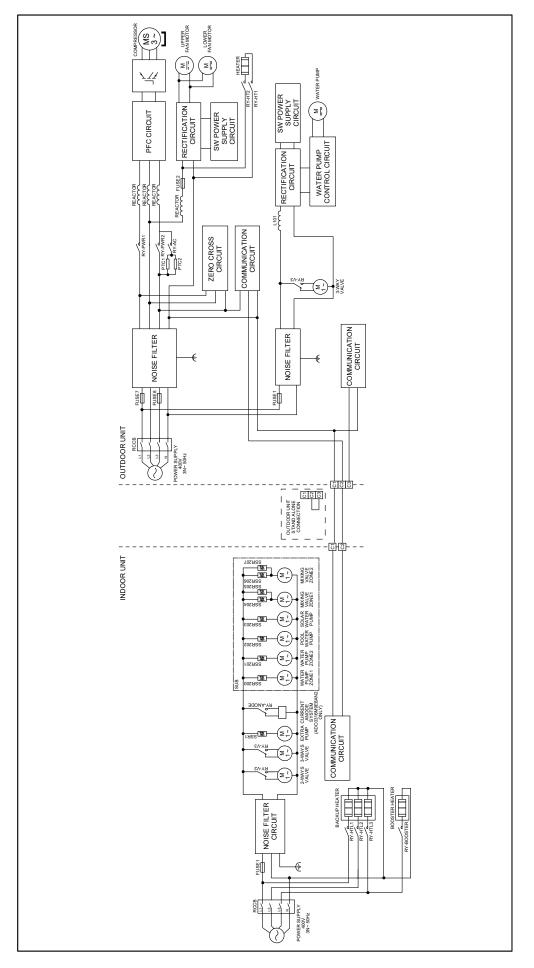


# 9. Wiring Connection Diagram


#### 9.1 Indoor Unit

#### 9.1.1 WH-ADC0316M9E82

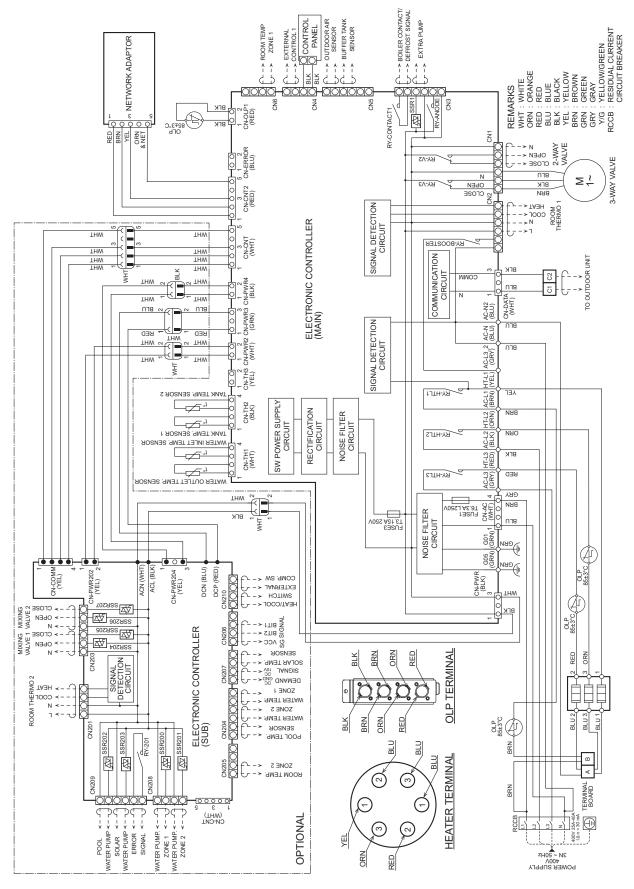

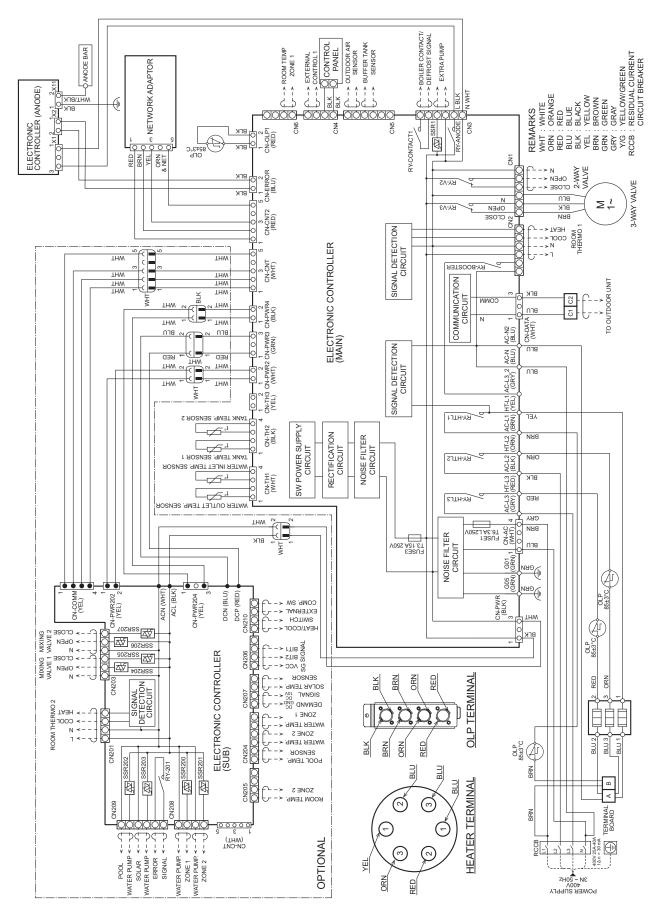

#### 9.2 Outdoor Unit

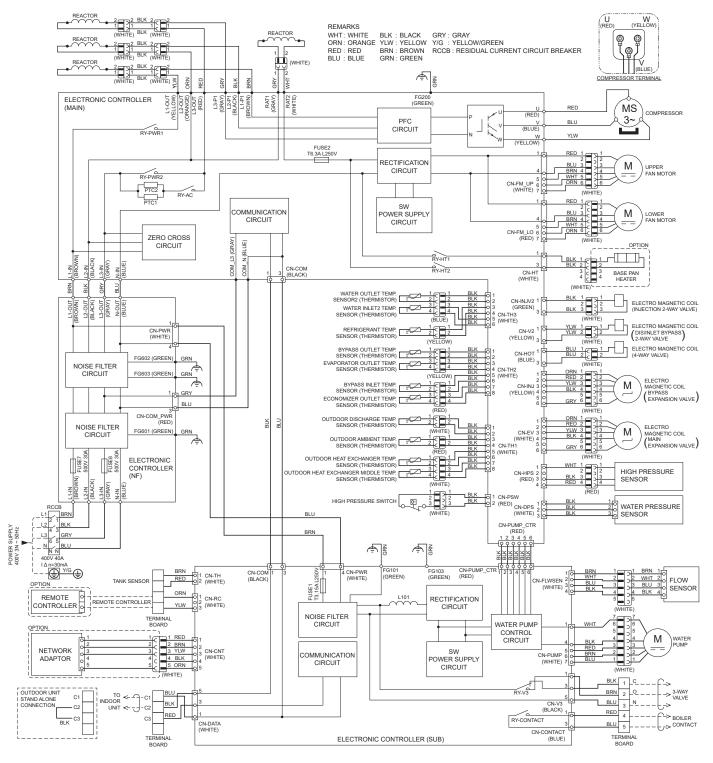

#### Resistance of Compressor Windings


MODEL	WH-WXG09ME8 / WH-WXG12ME8 / WH-WXG16ME8	
CONNECTION 7CD081ZA02		
U - V	0.261 Ω	
V - W	0.261 Ω	
U - W 0.261 Ω		

Note: Resistance at 20°C of ambient temperature.


## 10. Electronic Circuit Diagram


#### 10.1 Indoor Unit

#### 10.1.1 WH-ADC0316M9E82

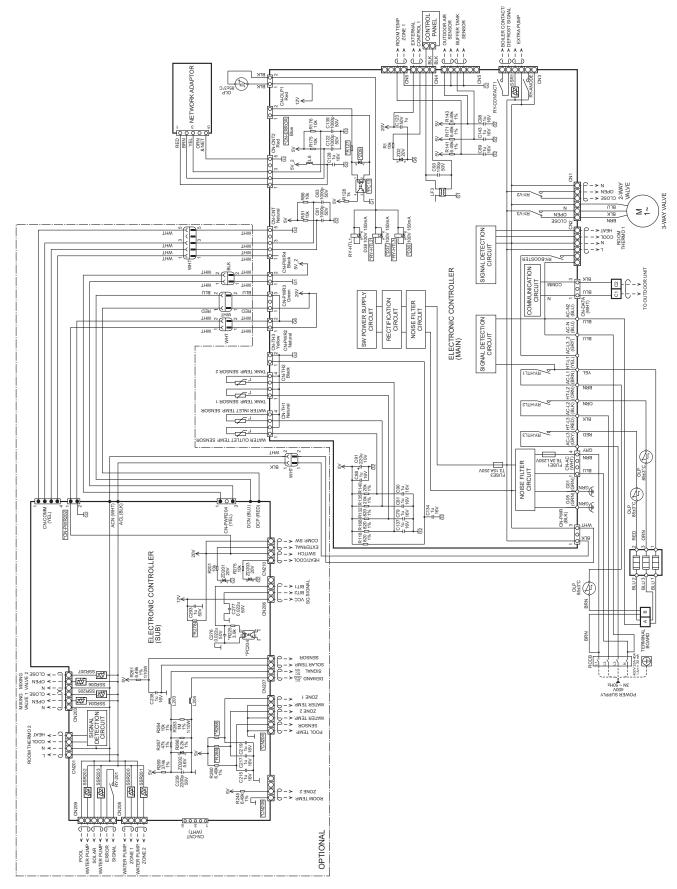

#### 10.1.2 WH-ADC0316M9E8AN2

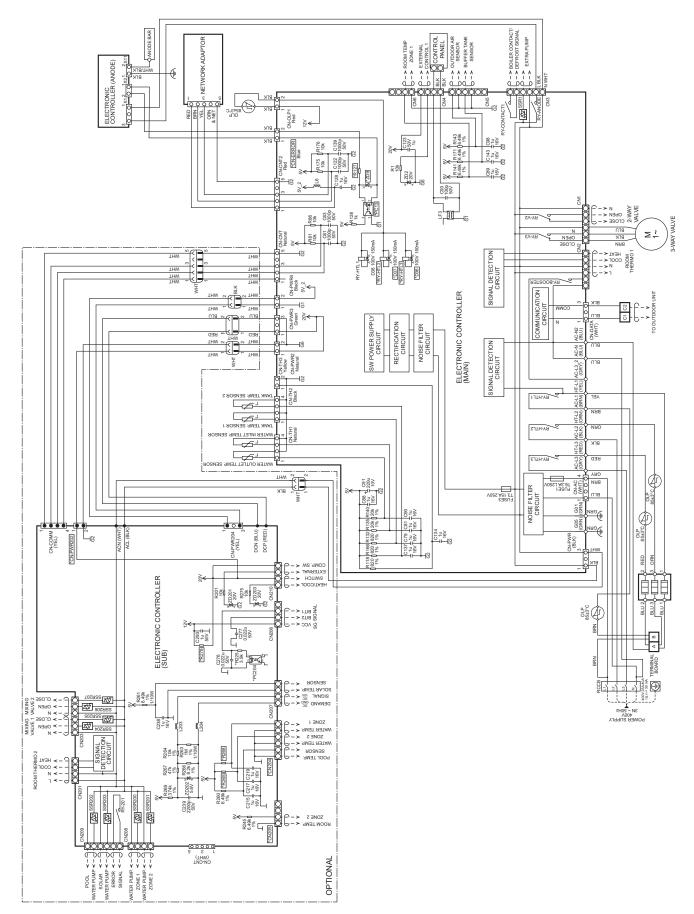


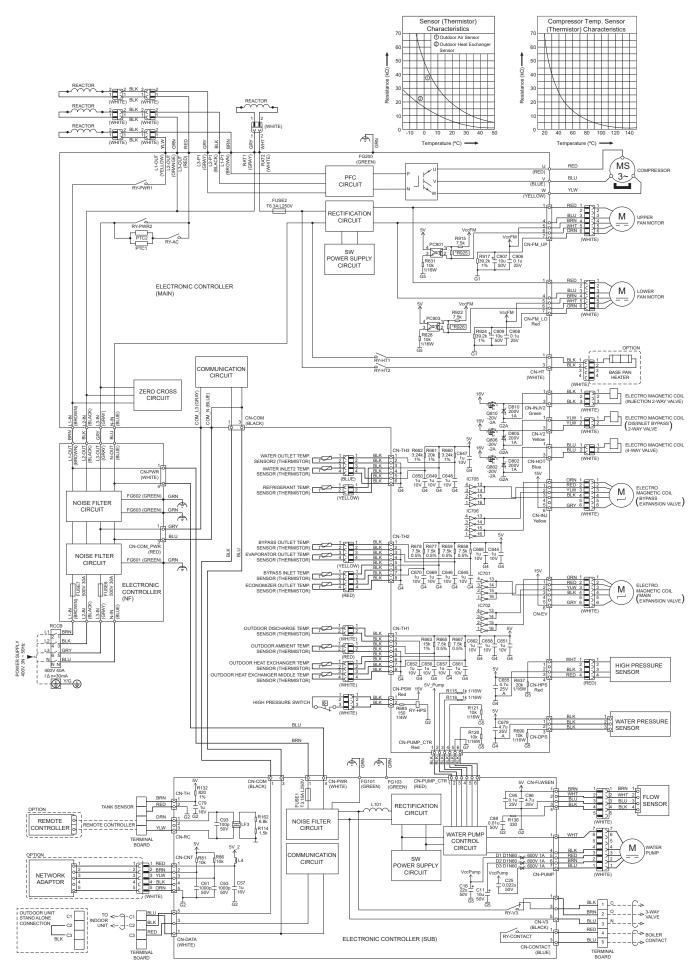


# 11. Printed Circuit Board

#### 11.1 Indoor Unit

#### 11.1.1 Main Printed Circuit Board

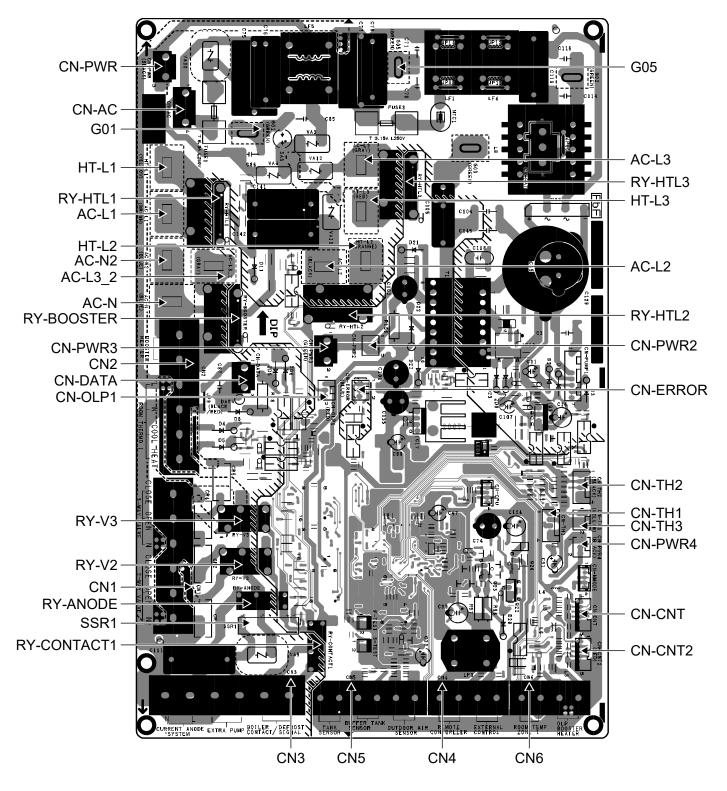


#### 11.1.2 Sub Printed Circuit Board (Optional)

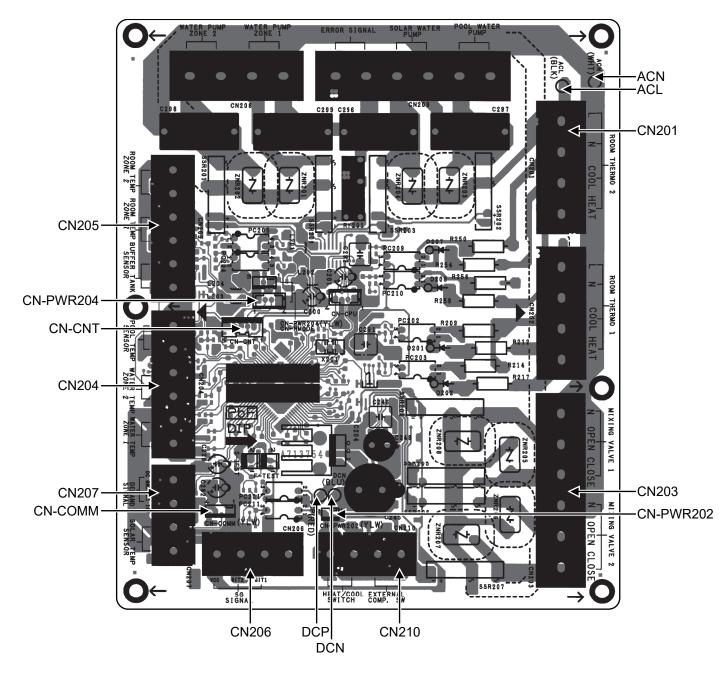


#### 11.2 Outdoor Unit


#### 11.2.1 Main Printed Circuit Board

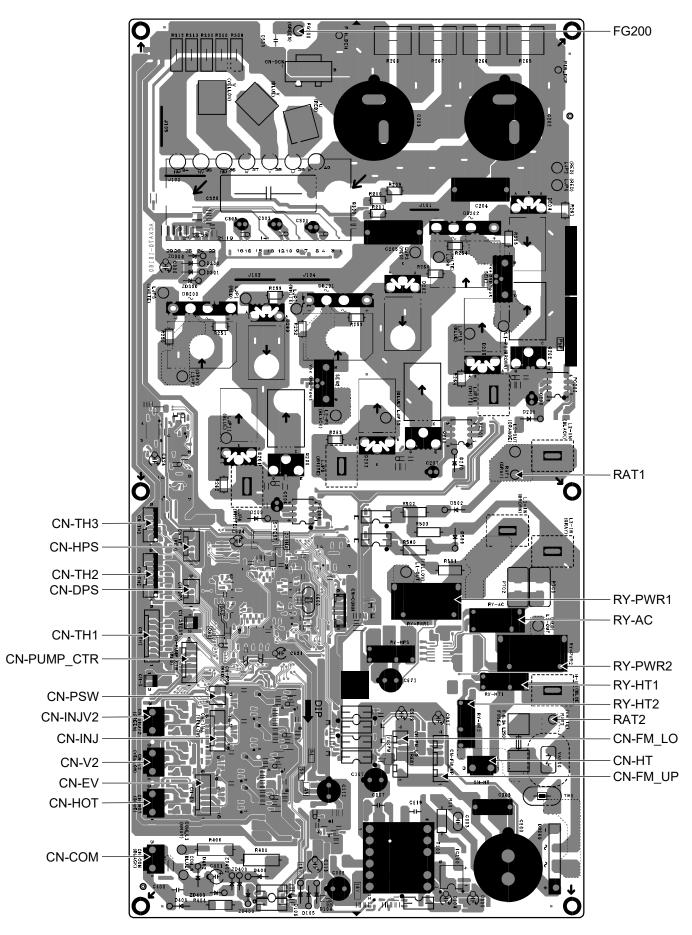

#### 11.2.2 Noise Filter Printed Circuit Board

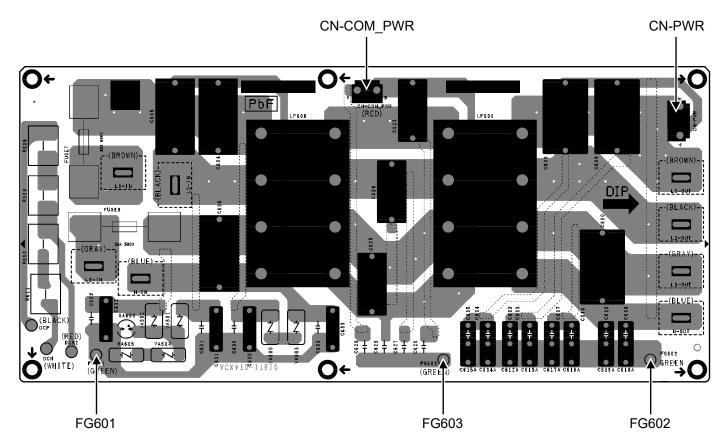

#### 11.2.3 Sub Printed Circuit Board

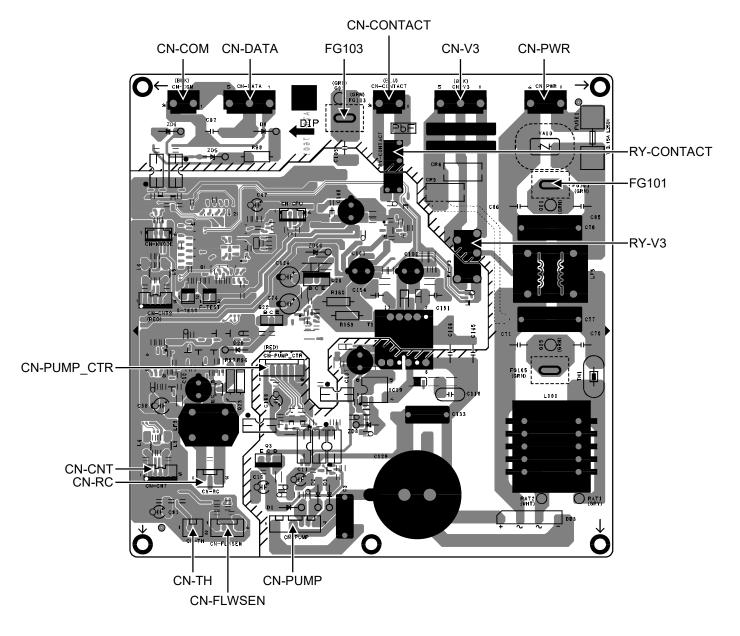

# 12. Installation Instruction

#### Attached accessories

No.	Accessory part	Qty.
1	Adjustable Feet	4
2	Drain Elbow	1
3	Packing for drain	1
4	Network Adaptor (CZ-TAW1*)	1

#### **Optional Accessories**

No.	Accessories part	Qty.
5	Remote Controller Case (PAW-A2W-COV-KL)	1
6	Extension Cable (CZ-TAW1-CBL)	1
7	Optional PCB (CZ-NS6P)	1
8	*1Remote Controller (CZ-RTW2)	1

<sup>\*1</sup> If you need the 2nd remote controller, buy 8 and set it up as the 2nd remote controller.

#### Field Supply Accessories (Optional)

No.	Part		Model	Specifications	Maker
. 2-way valve kit	Electromotoric Actuator	SFA21/18	AC230V, 12 VA	Siemens	
I	*Cooling model	2-port Valve	VVI 46/25		Siemens
	ii Room thermostat	Wired	PAW-A2W-RTWIRED	- AC230V	-
П		Wireless	PAW-A2W-RTWIRELESS		
iii	Mixing valve	-	13020800	AC230V, 5VA	ESBE
iv	Pump	-	Yonos PICO1.0 25/1-8	AC 230V, 0.6 A max	Wilo
v	Buffer tank sensor	-	PAW-A2W-TSBU	-	-
vi	Outdoor sensor	-	PAW-A2W-TSOD	-	-
vii	Zone water sensor	-	PAW-A2W-TSHC	-	-
viii	Zone room sensor	-	PAW-A2W-TSRT	-	-
ix	Solar sensor	-	PAW-A2W-TSSO	-	-

• It is recommended to purchase the field supply accessories listed in above table.

#### 12.1 Indoor Unit

#### 12.1.1 Select the Best Location


Obtain customer' approval before deciding on the installation location.

- Install the tank unit indoors in a weatherproof, frost-free location.
- Must be installed on a flat, solid hard surface.
- Ensure that there are no heat sources or vapours near the tank unit.
- Good air circulation in the room.
- Places where drainage is easy (e.g. utility rooms).
- Where the operating noise of the tank unit does not cause discomfort to the user.
- Where tank unit is located away from doorways.
- Location accessible for maintenance.
- Ensure to keep minimum distance of spaces as illustrated below from wall, ceiling, or other obstacles.
- Where leakage of flammable gases is unlikely to occur.
- Secure the tank unit to prevent it from falling over accidentally or during an earthquake.

Do not install the tank unit in such a way that it is placed in the following conditions.


- Unusual environmental conditions, installation in the presence of frost, unfavourable weather conditions
- Input voltage exceeding specified voltage

#### 12.1.1.1 Space Required for Installation

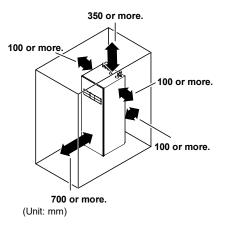

#### 12.1.1.2 Delivery and Handling

- When transporting the unit, take care not to damage it due to impact.
- Packaging can be removed only when you reach the installation site.
- Installation may require more than three people. The tank unit is heavy and may cause injury if carried alone.
- Tank units can be carried in either vertically or horizontally.
  - If the product is transported horizontally, ensure that the front of the packaging material (the side marked 'FRONT') is facing upwards.
  - If you wish to carry it in vertically, use the hand holes on the side and slide it to the desired location.
- If the tank unit is to be installed on an uneven surface, fix the Adjustable Feet 1.

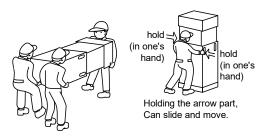


# 12.1.2 Install a Sleeve of Piping (Drill a Hole in the Wall)

- 1. Make a through hole. (Check pipe diameter and insulation thickness)
- 2. Insert the piping sleeve into the hole.
- 3. Fix the bushing to the sleeve.
- 4. Cut the sleeve until it extrudes about 15 mm from the wall.



5. Finish by sealing the sleeve with putty or caulking compound at the final stage.

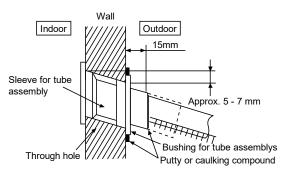

#### 12.1.3 Piping Installation


#### 12.1.3.1 Water Quality Requirement

Must use water that complies with European Drinking Water Directive (EU)2020/2184. The lifespan of the Tank Unit will be shorter if groundwater (include spring water and well water) is used.

The Tank Unit shall not be used with the tap water containing contaminants such as salt, acid, and other impurities which may corrode the tank and its component.


Use sanitized water that is free of Legionella and other bacteria and microorganisms. If the water contains Legionella bacteria, it may harm the health of the user.

#### 12.1.3.2 Typical Piping Installation

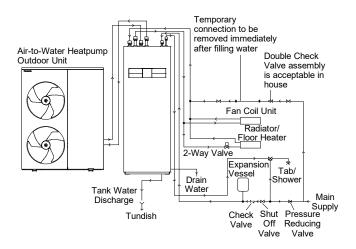

#### 12.1.3.3 Access to Internal Components

WARNING This section is intended for licensed electricians/water system installers. Work inside screw-fastened fronts must be carried out under the supervision of a qualified installer, installation technician or service shop.

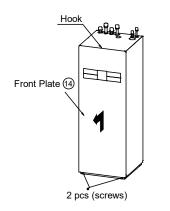

Open and close the front plate carefully. The front plate is heavy and may cause injury to fingers.

\*The remote control cable is connected to the front panel, so take care when removing the panel.


#### Opening and closing the Front Plate (14).

- 1 Remove the two mounting screws from the Front Plate 1.
- 2 Unhook the Front Plate (14) by sliding it upwards.
- 3 Reverse steps 1 2 above and close.

#### 12.1.3.4 Water Piping Installation

- The installation of this water circuit should be carried out by a licensed water circuit installer.
- Follow relevant European and national regulations (including EN61770) and local plumbing and building codes for the installation of water circuits.
- Ensure that components installed in the water circuit can withstand the water pressure during operation.
- Do not use worn tubes or detachable hoses.
- Applying excessive force to the pipework may damage it.
- Select a suitable sealer that can withstand the pressure and temperature of the system.
- Tighten the connection with two spanners. In addition, tighten the nuts to the specified torque using a torque spanner.
- When inserting through a wall, cover the end of the pipe to prevent dirt and dust.
- When installing using metal pipe other than brass, always insulate the pipe to prevent electrolytic corrosion.
- Do not connect galvanised pipes. That may cause electrolytic corrosion.
- Use the correct nut for the tank unit tube connections and flush all tubes with tap water before installation. See tube position diagram for details.

Tube Connector	Nut Size	Torque
a & b & e & f	RP 1¼"	117.6 N•m
© & @	RP 3⁄4"	58.8 N•m

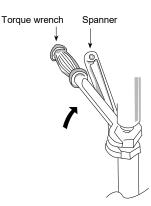

#### 

Do not over-tighten as this may cause water leakage.

- Make sure to insulate the water circuit pipes to prevent reduction of heating capacity.
- After installation, check the connections for leaks during test run.
- Incorrect tubing connections may cause the tank unit to fail.
- Protection from frost:
   If the tank unit is exposed to frost during power supply failure or pump malfunction, drain the system. Pooled water in the system can lead to freezing, which may damage the system. Ensure that the power supply is turned off before draining. Heater Assembly (8) may be damaged if heated without water. The outdoor unit needs to be drained inside, contact a service person.
- Corrosion resistance:
- Duplex stainless steels are corrosion resistant to water supply. No specific maintenance is required to maintain this resistance. Note, however, that tank unit is not guaranteed for use on private water supplies.
- It is recommended that a tray (supplied on site) is used to collect water from the tank unit in case a leak occurs.

Recommended pipework installation sequence: (e)  $\rightarrow$  (b)  $\rightarrow$  (f)  $\rightarrow$  (a)  $\rightarrow$  (c)  $\rightarrow$  (d)

#### (A) Space heating/cooling pipework

- The tank unit tube connector (a) must be connected to the outlet connector of Zone 1 panel/floor heater.
- The tank unit tube connector (b) must be connected to the inlet connector of Zone 1 panel/floor heater.
- Incorrect tubing connections may cause the tank unit to fail.
- For the rated flow rate of each outdoor unit, refer to the installation instructions for the outdoor unit.

\*Do not install automatic air purge valves on indoor water pipes. In the unlikely event that R290 refrigerant leaks into the water circuit, there is a risk of refrigerant leaking into the room.

#### (B) Circulating pipework


- Connect the tank unit tube connector <sup>(f)</sup> to the inlet socket on the outdoor unit.
- Connect the tank unit tube connector <sup>(e)</sup> to the outlet socket on the outdoor unit.
- If the connection is not made correctly, the system will stop with an error.
- Refer to the installation instructions for the outdoor unit for the inner diameter of the pipe.

#### (C) Domestic hot water tank pipework


- It is strongly recommended to install an expansion vessel (supplied on site) in the circuit of the domestic hot water tank. For the location of the expansion vessel, see "Typical piping installation".
  - Type and specification of expansion vessel:
    - Size : 10L.
    - Connection diameter: Less than 3/4".
    - Pre-charge pressure: 3.5 bar (0.35 MPa)
- Additional expansion vessel may be required if the pipe volume is increased, e.g. by using a secondary return circuit.
- Where water pressure is high or the water supply exceeds 5 bar, install a pressure reducing valve for the water supply. If the pressure higher than that, it may damage the tank unit.
- A pressure reducing valve (supplied on site) of the following specification must be installed on the line of the tank unit's tube connector <sup>(C)</sup>. For the location of this valve, see "Typical piping installation".
  - Type and specification of pressure reducing valve:
    - Connection diameter: 3/4" or 1/2".
    - Set pressure : 3.5 bar (0.35 MPa)
- The pressure downstream of the pressure reducing valve is below 3.5 bar (0.35 MPa).
- In order to supply water at a temperature suitable for showers and tap usage, the tank unit's tube connector <sup>(d)</sup> must be connected to main water supply. Failure to make this connection may result in burns.
- Incorrect tubing connections may cause the tank unit to fail.

#### (D) Installation of drain elbows and hoses

• Fix Drain Elbow 2 and Packing 3 to the bottom of Drain Water Hole <sup>(h)</sup>.

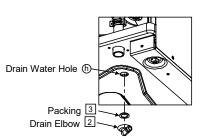

- Use a commercially available drain hose with an inner diameter 17 mm and fix it to the drain elbow 2.
- This hose must always be installed continuously downwards and used in a frost-free environment. Improper drainpipes may cause leaks and damage furniture.
- If the drain hose is long, use a metal support in the middle to ensure that the drain pipe does not wave.
- Guide the drain hose outdoors as shown in the diagram.

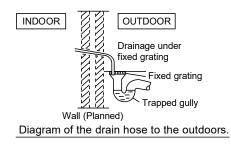

- Do not insert this hose into sewers or drains where ammonia or sulphur gases are generated.
- If necessary, use hose clamps to further tighten the hose at the drain hose connector to prevent leakage.
- The outlet of this hose must be located in an area where the outlet cannot become blocked, as water drops from this hose.
- If the drain hose is located indoors (where condensation may occur), use POLY-E FOAM with a minimum thickness of 6 mm to improve insulation.

- (E) Domestic hot water tank drains (drain taps) and safety relief valve pipework
- Built-in 8 bar (0.8 MPa) safety relief valve on domestic hot water tank.
- The tank drain and the safety relief valve discharge port share the same drain port.
- Use R½" male connector for this drain connection (tube connector <sup>(g)</sup>).
- Pipework must always be installed continuously downwards. The length should be no more than 2 m and no more than two elbows, so as not to cause condensation or freezing.
- Do not block the pipe from this drain fitting. It must be able to drain freely.
- The end of this pipework should be constructed so that the drain outlet is visible and not damaged. Keep away from electrical components.
- It is recommended that a tundish is fitted to this pipework. Mount the tundish in an easily visible location away from frost environment and electrical components.

#### 12.1.4 Connect the Cable to the Tank Unit

#### 


This section is intended for licensed electricians. Work inside the Control Board Cover ④ secured with screws must be carried out under the supervision of a qualified installation shop, installation technician or service shop.

# Care must be taken when opening the control board cover ④ and control board ⑤ for unit installation and servicing. It may cause injury.

#### 12.1.4.1 Fixing of Power Supply Cable and Connecting Cable


- 1. The isolating device must be connected to the power supply cable.
  - Isolation device (disconnecting means) must have a contact gap of at least 3.0 mm.
  - Connect approved polychloroprene sheathed power cable of type designation 60245 IEC 57 or heavier to the terminal board and connect the other end of the cable to an isolating device (disconnecting means).
     See table below for cable size requirements.

Cable Size	5 x min 1.5 mm <sup>2</sup>
Isolating Devices	20A
Recommended RCD	30mA, 4P, type A

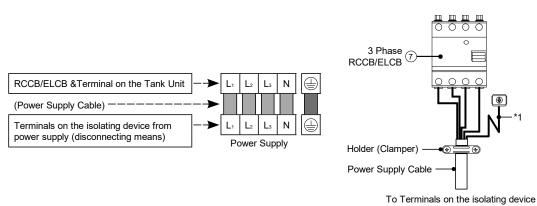


Terminal screw	Tightening torque cN•m {kgf•cm}	
M4	157~196 {16~20}	
M5	196~245 {20~25)	

- \*1 Earth wire should be longer than other cables for safety reasons
- The connecting cable between the tank unit and the outdoor unit should be double-insulated approved polychloroprene sheathed cord with type designation 60245 IEC 57 or heavier. See table below for cable size requirements.

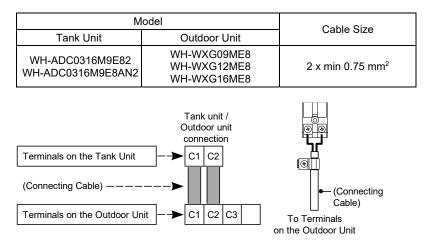

#### 12.1.4.2 Wire Stripping and Connecting Requirement

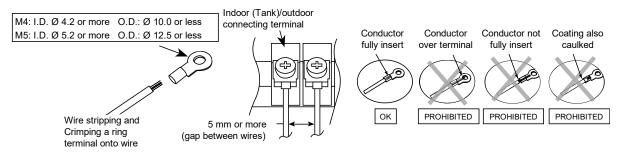

#### 12.1.4.3 Connection Requirement

- The equipment's Power Supply complies with IEC/EN 61000-3-2.
- The equipment's Power Supply complies with IEC/EN 61000-3-3 and can be connected to current supply network.


#### 12.1.5 Charging and Discharging the Water

• Make sure all the piping installations are properly done before carrying out the steps below.

#### 12.1.5.1 Charge the Water

#### For domestic hot water tank

1. Set the Domestic Hot Water Tank Discharge (Drain Tap) (9) to "CLOSE".

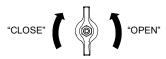


Domestic Hot Water Tank Discharge (Drain Tap)  $\circledast$ 

- 2. Set all taps/showers to "OPEN".
- 3. Starts filling water into the domestic hot water tank via the tube connector <sup>C</sup>. After 10-30 minutes, water should come out of the tap or shower. If the water does not run, contact your local authorized dealer.
- 4. Check and make sure no water leaking at the tube connecting points.
- Set the Domestic Hot Water Tank Discharge (Drain Tap) (9) to "OPEN" for 10 seconds to release air from this pipeline. Then set it to "CLOSE".
- Turn the Safety Relief Valve (2) knob counterclockwise slightly and hold for 10 seconds to release air from this pipeline. Then recover the knob to original position.
- 7. Ensure Step 5 & 6 is carried out each time after charging water to Domestic Hot Water Tank.
- Turn the Safety Relief Valve (2) knob counterclockwise to prevent back pressure to the valve.

#### For Space heating/cooling

- Start filling water into the space heating/cooling circuit through the tube connector <sup>(2)</sup> on the outdoor unit (with pressure more than 1 bar (0.1 MPa)).
- 2. If water is flowing through the drain pipe of the pressure safety valve, stop filling water. (Check the Outdoor Unit)
- 3. Turn on the tank unit.
- Remote control menu → Installer setup → Service setup → Pump maximum speed → Turn on the pump.
- 5. Ensure that the water pump is working.
- 6. Check and make sure no water leaking at the tube connecting points.

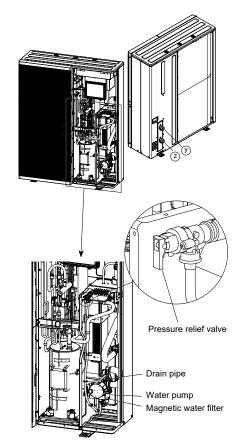

#### 12.1.5.2 Discharge the Water

#### For domestic hot water tank

- 1. Turn OFF the power supply.
- Set the Domestic Hot Water Tank Discharge (Drain Tap) (9) to "OPEN".
- 3. Open the tap/shower to allow air to enter.
- 4. Turn the Safety Relief Valve (2) knob counterclockwise slightly and hold it until all air is released from this pipeline. Then recover the knob to its original position after ensured the pipeline is emptied.
- 5. After discharge, set the Domestic Hot Water Tank Discharge (Drain Tap) (1) to "CLOSE".
  \* When discharging the water from the tank, also discharge the water from the outdoor unit. In particular, always discharge the water in the magnetic water filter.
  (may be damaged by freezing)

(may be damaged by freezing).

#### 12.1.6 Reconfirmation

#### 

Be sure to switch off all power supply before performing each of the below checks.


#### 12.1.6.1 Check Water Pressure

\* (0.50 bar = 0.05 MPa)

Water pressure should not be lower than 0.5 bar. (Check the water pressure by the remote controller.) If necessary, fill Space Heating/Cooling pipes with water

(through the tube connector  $(\mathbb{Z})$  on the outdoor unit).


Icon flashes if dropped below "0.50 bar"

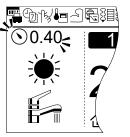


#### **Special Installation Patterns**

Special construction patterns mentioned here refer to the case where there is a substantial difference in elevation (e.g. more than 10 m) between the outdoor unit installation and the Panel/Floor heater (or indoor unit).

In this case, attention must be paid since incorrect water filling during installation may prevent the system from operating correctly and may cause water leak. (1) When outdoor unit is located below and Panel/Floor heater is 30 m above it

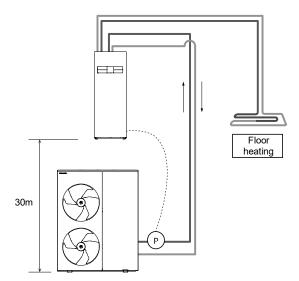

- Pressure checked by remote controller: 3.5~4 bar. (at an elevation difference of 30 m)
- When installing an extra pump, connect it to the water outlet of the outdoor unit. (If installed to the water inlet, the safety valve is activated and the water is drained)
- (2) When outdoor unit is located above and Panel/Floor heater is 30 m below it

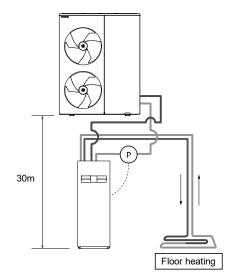


- Pressure checked by remote controller: 0.5~1.0 bar. (at an elevation difference of 30 m)
- When installing an extra pump, connect it to the water outlet from the tank unit to the outdoor unit.

Elevation difference between ou tank unit	Water pressure in outdoor unit	
	Up to 30 m	0.5~1.0bar
Outdoor unit above the tank unit.	Up to 20 m	1.0~2.0bar
	Up to 10 m	1.0~3.0bar
	Up to 10 m	1.5~4.0bar
Outdoor unit below the tank unit.	Up to 20 m	2.5~4.0bar
	Up to 30 m	3.5~4.0bar

#### 12.1.6.2 Check Pressure Relief Valve

\*Pressure safety valve is located on outdoor unit.

- 1. Pull the lever in the horizontal direction and confirm that the pressure relief valve works properly.
- 2. Release the lever when water comes out of the drain pipe of the pressure relief valve. (While the air continues to come out of the drain pipe, keep raising the lever to completely discharge the air.)
- 3. Confirm that the water from the drain pipe stops.
- 4. If water is leaking, pull the lever several times and return it to make sure the water stops.
- 5. If water keeps coming out of the drain, drain water. Turn off the system and contact your local authorized dealer.

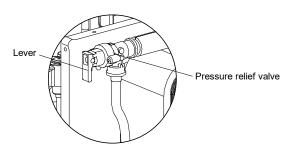

#### 12.1.6.3 Check Air Accumulation

- Open the air vent plugs on the heating panel, fan convector, etc., and remove the air accumulated in the equipment and piping.
- If the outdoor unit and indoor unit are installed on different floors, open the air vent plug on the water plug of the outdoor unit and the air vent plug on the heater bottle inside the indoor unit to remove the air(note that water will come out).

#### 12.1.6.4 Expansion (11) Vessel Pre Pressure Checking

#### For Space heating/cooling

- The tank unit is equipped with an expansion vessel with the capacity of 10 L and the initial pressure of 1 bar.
- The total volume of water in the system should not exceed 200 L.

(The volume in the pipe of the tank unit is approximately 5 L).

- If the total water volume exceeds 200 L, add an expansion vessel. (Supplied on site)
- The installed height difference of the water circuit of the system should not exceed 30 m. (Extra pump may be required).
   \*However, in case of 30 m, set the pressure in the circulation circuit to 0.5~1.0 bar. Higher than 1.0 bar may cause water leakage due to component breakage.

#### 12.1.6.5 Check RCCB/ELCB

Ensure the RCCB/ELCB is set to "ON" condition before checking RCCB/ELCB. Turn on the tank unit.

This test can only be performed when power is supplied to the tank unit.

When power is supplied to the tank unit, take care not to touch any part other than RCCB/ELCB test button. Else, electrical shock may happen. Before obtaining access to terminals, all supply circuits must be disconnected.

Press the TEST button on the RCCB/ELCB. The lever would turn down if it functions normal.

- If the RCCB/ELCB malfunctions, contact authorized dealer.
- Turn off the tank unit.
- If the RCCB/ELCB operates correctly, set the lever to 'ON' again after the test.

#### 12.1.7 Installation when Remote Controller is Used as a Room Thermostat


• The remote controller ① mounted to the tank unit can be moved to the room and used as a room thermostat.

#### 12.1.7.1 Installation Location

- Install at a height of 1 to 1.5 m above the floor (where the average room temperature can be detected).
- Install vertically against the wall.
- Avoid the following locations for installation.
  - 1. By the window, etc. where is exposed to direct sunlight or direct air
  - 2. In the shadow or backside of objects deviated from the room airflow
  - 3. Location where condensation occurs (Remote Controller is not moisture proof or drip proof)
  - 4. Location near heat source
  - 5. Uneven surface
- Keep distance of 1 m or more from the TV, radio and PC.

(Cause of fuzzy image or noise)

#### 12.1.7.2 Wiring the Remote Control

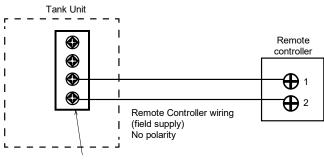


Terminal for Remote Controller wiring


- Remote Controller cable shall be (2 x min 0.3 mm<sup>2</sup>) of double insulation PVC-sheathed or rubber sheathed cable. Total cable length shall be 50 m or less.
- Take care not to connect cables to other terminals on the tank unit (e.g. power supply wiring terminals). Malfunction may occur.
- Do not bundle together with the power source wiring or store in the same metal tube. Operation error may occur.
- When using the 2nd. Remote Controller (option), connect it to the terminal of the tank unit by tightening it together.

# 12.1.7.3 Remove the Remote Controller from the Tank Unit


1. Remove both the left decoration panel ② and the right decoration panel ③ from the front panel ⑦ while pressing gently from behind.

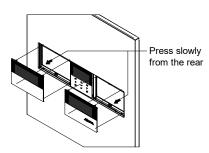


2. Remove the 4 screws and remove the holder together with the remote controller (1).

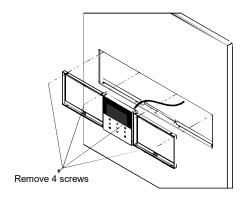

3. Remove the body from the base.

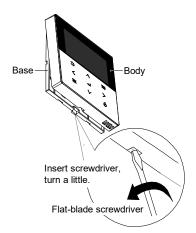


4. Remove the wiring between the remote controller
① and the tank unit terminal.

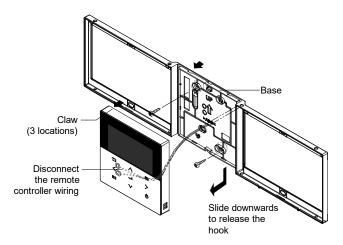

#### 12.1.7.4 Mounting the Remote Controller


#### For exposure type

Preparation: Drill 2 holes for screws with a screwdriver.

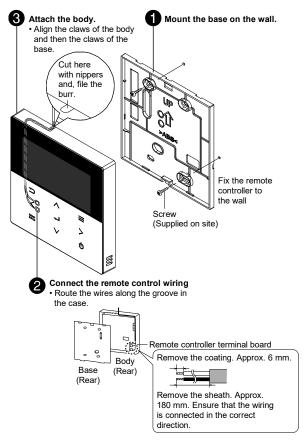


#### For embedded type

Preparation: Drill 2 holes for screws with a screwdriver.

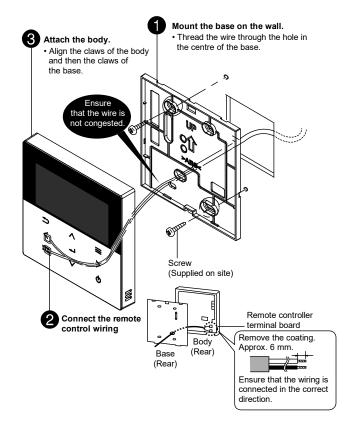

#### 12.1.7.5 Replace the Remote Controller Cover

- In order to plug the hole after the remote controller has been removed, fit a remote controller case 5 in place of the removed remote controller.
  - Refer Section "Remove the remote controller from the tank unit" for removing the remote controller.
  - 2. Remove the body from the base of the remote controller case 5.

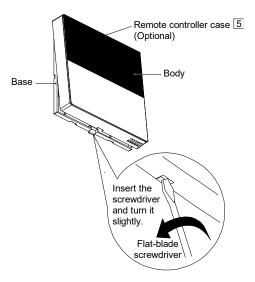

 Reverse steps 1-4 under "Remove the remote controller from the tank unit" to secure the remote controller case 5 to the tank unit.

#### 12.1.8 Test Run

- 1. Before test run, ensure that the following items are checked.
  - a) Pipework are properly done.
  - b) Electric cable connecting work are properly done.
  - c) Tank Unit is filled up with water and trapped air is released.
  - d) Please turn on the power supply after filling the tank until full.
- Switch ON the power supply of the Tank Unit. Set the Tank Unit RCCB/ELCB to "ON" condition. Then, please refer to the Operation Instruction for operation of Remote Controller 1.

#### Note:

During winter, turn on the power supply and standby the unit for at least 15 minutes before test run. Allow sufficient time to warm up refrigerant and prevent wrong error code judgement.

3. For normal operation, the water pressure reading should be in between 0.5 bar and 4 bar (0.05 MPa and 0.4 MPa). If necessary, adjust the speed of the water pump to bring it into the normal water pressure operating range. If adjusting the speed of the water pump does not solve the problem, contact a local authorized dealer.

 For the WH-ADC0316M9E8AN2, make sure that the 'electric anode icon' on the remote controller (1) is lit.



 After test run, clean the magnetic water filter set with reference to "Maintenance for magnetic water filter" in the Installation Manual of the AIR-TO-WATER HEATPUMP OUTDOOR UNIT. Reinstall it after the cleaning is finished.

#### 12.1.8.1 Check Water Flow of Water Circuit

Select Installer setup  $\rightarrow$  Service setup  $\rightarrow$  Pump maximum speed  $\rightarrow$  Air purge.

Confirm the maximum water flow during main pump operation not less than 25 l/min.

\* Water flow can be check in Service setup (Pump maximum speed)

[Heating operation at low water temperature with lower water flow may trigger "H75" during defrost process.]

\* If there is no water flow or H62 is displayed, stop pump operation and release the air (see "CHECK AIR ACCUMULATION").

#### 12.1.8.2 Reset Overload Protector 🔟

Overload protector (10) is a safety device to prevent water overheating. If the overload protector (10) is activated, reset it using the following procedure.

- 1. Remove the cover.
- 2. Reset the overload protector 10 by gently pressing the central button with the test pen.
- 3. Secure the cover in place as before.



#### 12.1.9 Maintenance

• To ensure the safety and optimum performance of the tank unit, seasonal inspections of the tank unit and functional checks of RCCB/ELCB, field wiring and pipe should be carried out on a regular basis. This maintenance and scheduled inspection should be carried out by authorized dealer.

# 12.1.9.1 Maintenance for Safety Relief Valve 21

• To ensure the pipe is not blocked and to remove lime deposit, it is strongly recommended to operate the valve by turn the knob counter clockwise and confirm free water flow through discharge pipe at regular intervals.


If the hot water supply is not used for more than 60 days, drain the stagnant water in the tank unit.

#### 12.1.9.2 Installation of Ventilation Unit on Top of Tank Unit (Optional)

 If the ventilation unit is installed above the tank unit, refer to the installation instructions for the ventilation unit.


#### 

Before installing the ventilation unit, fix the legs supplied with the ventilation unit to the half-punched holes in the tank unit top panel. Heavy ventilation units may fall and cause injury.

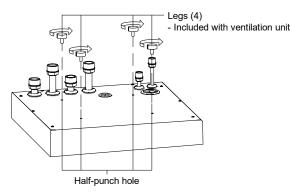

#### 12.1.9.3 How to Access the Expansion Vessel

Open the control board.

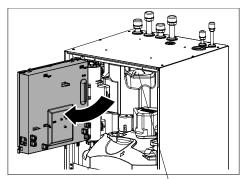

Expansion vessel is here

#### 12.2 Appendix

#### 12.2.1 Variation of System

This section introduces variation of various systems using Air-To-Water Heatpump and actual setting method. (Note): For this model, the Zone 1 external room thermistor and Zone 1 external room thermostat must always be connected to the main room board, irrespective of whether they are connected to a board (CZ-NS6P) sold separately.

Setting of remote controller

Zone & Sensor:

Optional PCB connectivity - No


Water temperature

Installer setup System setup

#### 12.2.1.1 Introduce Applications Related to Temperature Setting

#### 12.2.1.1.1 Temperature Setting Variation for Heating

1. Remote Controller

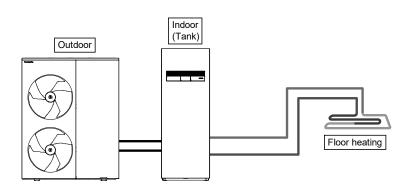


Connect floor heating and radiators directly to the tank unit. The remote controller is located on the tank unit. This is the basic form of the simplest system.

2. Room Thermostat

Outdoor	Indoor (Tank)	The tank unit controls the HP and circulation pumps by receiving control signals (ON/OFF) from the remote controller. There is a build-in thermistor in the remote controller.	Setting of remote controller Installer setup System setup Optional PCB connectivity - No Zone & Sensor: Room Thermostat Internal
		Floor heating	L

Connect floor heating and radiators directly to the tank unit.

Remove the remote controller from the tank unit and install it in the room where the floor heating is installed. This is an application that uses remote controller as Room Thermostat.

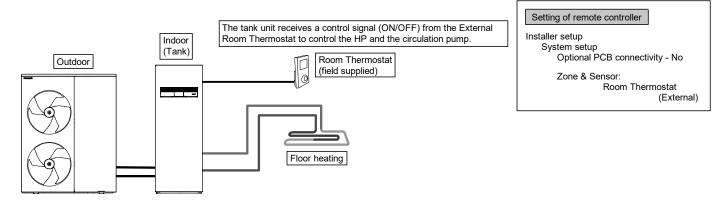


Connect floor heating and radiators directly to the tank unit.

The remote controller is located on the tank unit.

Install separate External Room Thermostat (field supply) in the room where floor heating is installed. This is an application that uses External Room Thermostat.

#### 4. Room Thermistor

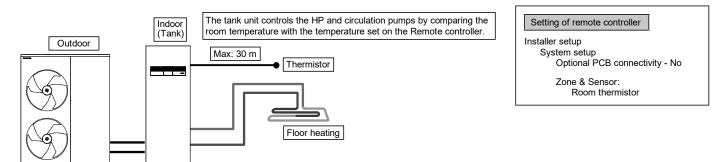

Connect floor heating or radiator directly to the tank unit.

The remote controller is located on the tank unit.


An external room thermistor (specified by Panasonic) is installed in the room where the floor heating is installed. This is an application that uses an external room thermistor.

There are two ways of setting the circulating water temperature. Direct: Sets the circulating water temperature directly (fixed value). Correction curve: sets the circulating water temperature according to the outside temperature.
In case of Room thermistor, the compensation curve is shifted according to the thermo ON/OFF situation.
(Example) If room temperature increasing speed is; If very slow → Shift the compensation curve upwards If very fast → Shift compensation curve downwards

101

#### 12.2.1.1.2 Examples of Installations

Floor heating 1 + Floor heating 2

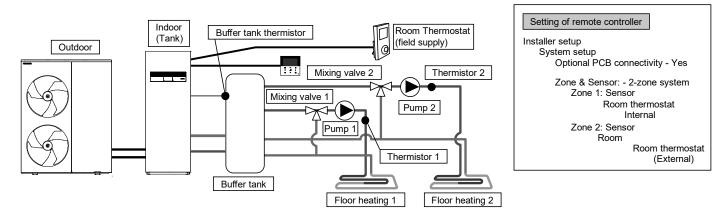

Connect Floor heating to the 2 circuits via buffer tank as shown in the figure.

Install mixing valves, pumps and thermistors (specified by Panasonic) on both circuits.

Remove the remote controller from the tank unit and attach it to either circuit to use as a Room Thermostat.

Install an external Room Thermostat (field-supply) on a another circuit.


Both circuits can set the circulating water temperature independently.

Install the buffer tank thermistor on the buffer tank.

The buffer tank connection settings and the  $\Delta T$  temperature settings for heating operation are required separately. This system requires an Optional PCB (CZ-NS6P).

Note: Buffer tank thermistor must be connected to main indoor PCB only.

#### Floor heating + Radiator

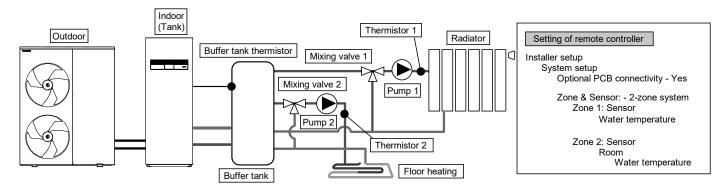

Connect Floor heating and radiators to the 2 circuits via buffer tank, as shown in the figure. Install pumps and thermistors (specified by Panasonic) on both circuits.

Install a mixing valve in the circuit with lower temperature among the 2 circuits. (Generally, where floor heating and radiator circuits are installed in 2 zones, install mixing valve in the floor heating circuit.)

The remote controller is located on the tank unit.


The temperature setting selects the circulating water temperature for both circuits. Both circuits can set the circulating water temperature independently.

Install the buffer tank thermistor on the buffer tank. The buffer tank connection settings and the  $\Delta T$  temperature settings for heating operation are required separately.

This system requires the Optional PCB (CZ-NS6P). Note that if there is no mixing valve on the secondary side, the circulating water temperature may be higher than the set temperature.

Note: Buffer tank thermistor must be connected to main indoor PCB only.

#### Floor heating + Swimming pool

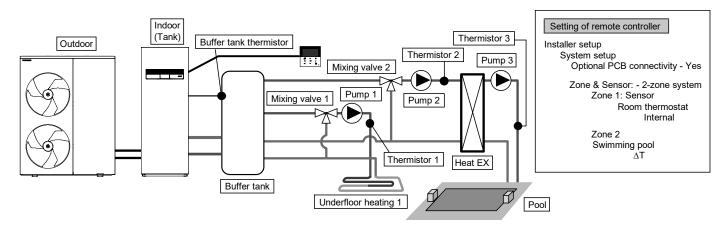

Connect floor heating and swimming pool to the 2 circuits via buffer tank, as shown in the figure. Install mixing valves, pumps and thermistors (specified by Panasonic) on both circuits. Additional pool heat exchanger, pool pumps and pool sensor are then installed in the pool circuit.

Remove the remote controller from the tank unit and install it in the room where the floor heating is installed. Floor heating and pool circulation water temperatures can be set separately.

Install buffer tank thermistor on the buffer tank.


The buffer tank connection settings and the  $\Delta T$  temperature settings for heating operation are required separately. This system requires the Optional PCB (CZ-NS6P).

\*Be sure to connect the pool to "Zone 2".

When connected to a swimming pool, operating in 'Cool' will stop the pool operation.

Note: Buffer tank thermistor must be connected to main indoor PCB only.

#### Swimming pool only

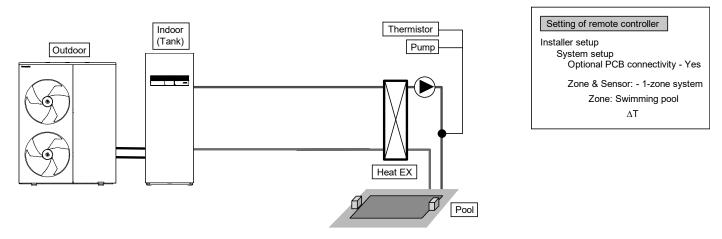

This is an application that connect to the swimming pool only.


Connect the pool heat exchanger directly to the tank unit without using buffer tank.

Install a pool pump and pool thermistor (specified by Panasonic) at the secondary side of the pool heat exchanger. The pool temperature can be set with a remote controller.

This system requires the Optional PCB (CZ-NS6P).

The cooling mode cannot be selected for this application. (Not displayed on the remote controller).

#### Simple 2 zone (Floor heating + Radiators)

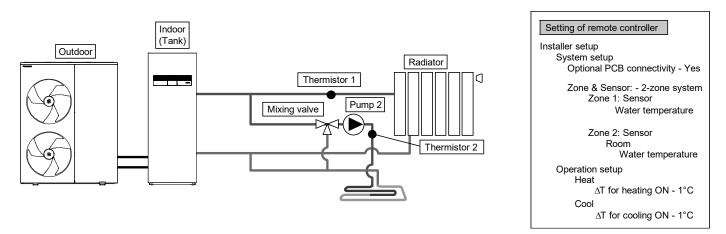

This is an example of simple 2 zone control without buffer tank.

The built-in pump in the tank unit acts as the pump for zone 1.

Install mixing valve, pump and thermistor (specified by Panasonic) at zone 2 circuit.

The temperature in Zone 1 is not adjustable, so always assign the hot side to Zone 1.

To display the temperature of zone 1 on the remote controller, zone 1 thermistor is required.

The circulating water temperature for both circuits can be set independently.

(However, the temperature of high temperature side and low temperature side cannot be reversed.)


This system requires the Optional PCB (CZ-NS6P).

#### (Note)

- Thermistor 1 has no direct influence on the operation. However, if thermistor 1 is not installed, an error will occur.
- Adjust the flow rate so that zone 1 and zone 2 are balanced. If not correctly adjusted, performance may be affected.

(If the pump flow rate in zone 2 is too high, "Actuator Check" from not flow to zone 1) The flow rate can be checked "Actuator Check" from maintenance menu.


#### **Buffer tank connection**

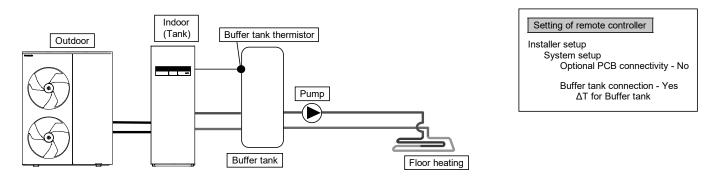

This is an application that connects the Buffer tank unit to the tank unit.

The temperature of the buffer tank is detected by a buffer tank thermistor (specified by Panasonic). If Optional PCB is not connected, external pump can be used for circulation in the floor heating circuit. Note: Buffer tank thermistor must be connected to main indoor PCB only.

#### Buffer tank + Solar

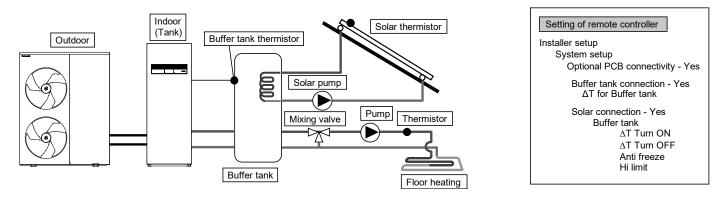

This is an application that connect the buffer tank unit to the tank unit and then to the solar water heater to heat the Buffer tank.

The temperature of the buffer tank is detected by a buffer tank thermistor (specified by Panasonic).

The temperature of the solar panel is detected by a solar thermistor (specified by Panasonic).


Buffer tanks are stand-alone tanks with built-in solar heat exchange coils.

During winter season, solar pump for circuit protection will be activated continuously. If does not want to activate the solar pump operation, please use glycol and set the anti-freezing operation start temperature to -20°C.

Heat accumulation operates automatically by comparing the temperature of tank thermistor and solar thermistor. This system requires the Optional PCB (CZ-NS6P).

Note: Buffer tank thermistor must be connected to main indoor PCB only.

#### **Boiler connection**

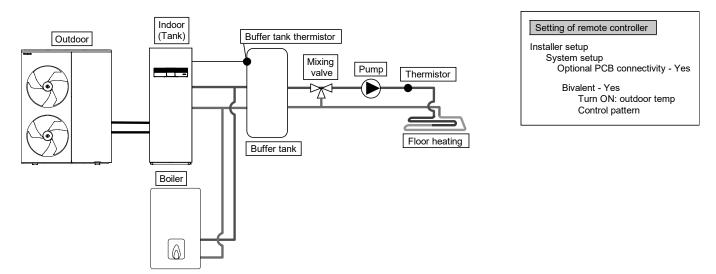

This is an application that connects the boiler to the tank unit, to compensate for insufficient capacity by operate boiler when outdoor temperature drops & heat pump capacity is insufficient.

Boiler is connected parallel with heat pump and used as heating circuit.

The boiler output can be controlled either by SG-ready input from a board (sold separately) or by automatic control via three mode selection patterns.

(Operation setting of boiler shall be responsible by installer.)

This system requires the Optional PCB (CZ-NS6P) for SG-ready input control.

Depending on the settings of the boiler, it is recommended to install buffer tank as temperature of circulating water may get higher. (In particular, if the advanced parallel setting is selected, it must be connected to a buffer tank.) Note: Buffer tank thermistor must be connected to main indoor PCB only.

# Marning Panasonic is NOT responsible for incorrect or unsafe situation of the boiler system. Make sure the boiler and its integration in the system complies with applicable legislation. Ensure that the return water temperature from the heating circuit to the tank unit does not exceed 70°C. Boiler is turned off by safety control when the water temperature of the heating circuit exceed 85°C.


#### 12.2.2 How to Fix the Cables

#### 12.2.2.1 Connection with External Device (Optional)


- All connections shall follow to the local national wiring standard. •
- It is strongly recommended to use manufacturer-recommended parts and accessories for installation.
- For connection to main PCB (6).
- 1. Two-way valve shall be spring and electronic type, refer to "Field Supply Accessories" table for details. Valve cable shall be (3 × min 1.5 mm<sup>2</sup>), of type designation 60245 IEC 57 or heavier, or similarly double insulation sheathed cable.
  - \*note: Two-way Valve shall be CE marking compliance component.
    - Maximum load for the valve is 12VA.
- Room thermostat cable must be (4 or 3 × min 0.5 mm<sup>2</sup>), of type designation 60245 IEC 57 or heavier cord, or 2. similarly double insulation sheathed cable.
- Extra pump cable shall be  $(2 \times \min 1.5 \text{ mm}^2)$ , of type designation 60245 IEC 57 or heavier. 3.
- Boiler contact cable shall be  $(2 \times \min 0.5 \text{ mm}^2)$ , of type designation 60245 IEC 57 or heavier. 4.
- 5. External control shall be connected to 1-pole switch with min 3.0 mm contact gap. Its cable must be (2 x min 0.5 mm<sup>2</sup>), double insulation layer of PVC-sheathed or rubber-sheathed cable. \*note: - Switch used shall be CE compliance component.

  - Maximum operating current shall be less than 3A<sub>rms</sub>.
- Room sensor zone 1 cable shall be (2 × min 0.3 mm<sup>2</sup>) double insulation layer of PVC-sheathed or rubber-6. sheathed.
- 7. Outdoor air sensor cable shall be (2 × min 0.3 mm<sup>2</sup>) double insulation layer of PVC-sheathed or rubber-sheathed.

Please wire referring to the diagram below. Wire according to the solid or dotted lines. (Solid line priority. Can be used in combination)

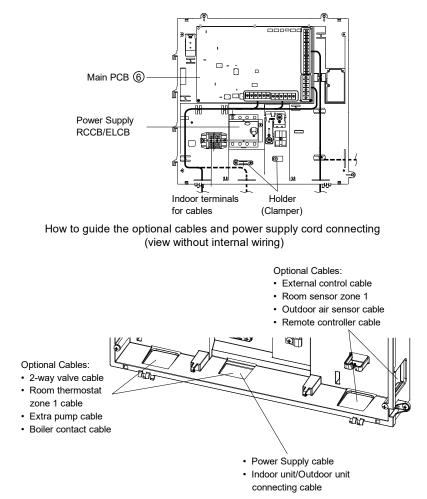


- For connection to Optional PCB 7.
- 1. By connecting Optional PCB, 2 Zone temperature control can be achieved. Please connect mixing valves, water pumps and thermistors in zone 1 and zone 2 to each terminals in Optional PCB.
- Temperature of each zone can be controlled independently by remote controller. 2. Pump zone 1 and zone 2 cable shall be (2 × min 1.5 mm<sup>2</sup>), of type designation 60245 IEC 57 or heavier.
- 3. Solar pump cable shall be  $(2 \times \min 1.5 \text{ mm}^2)$ , of type designation 60245 IEC 57 or heavier.
- 4. Pool pump cable shall be  $(2 \times \min 1.5 \text{ mm}^2)$ , of type designation 60245 IEC 57 or heavier.
- Room thermostat zone 1 and zone 2 cable shall be (4 × min 0.5 mm<sup>2</sup>), of type designation 60245 IEC 57 or heavier.
- 6. Mixing valve zone 1 and zone 2 cable shall be (3 × min 1.5 mm<sup>2</sup>), of type designation 60245 IEC 57 or heavier.
- 7. Room sensor zone 1 and zone 2 cable shall be (2 × min 0.3 mm<sup>2</sup>), double insulation layer (with insulation strength of minimum 30V) of PVC-sheathed or rubber-sheathed cable.
- 8. Buffer tank sensor, pool water sensor and solar sensor cable shall be (2 × min 0.3 mm<sup>2</sup>), double insulation layer (with insulation strength of minimum 30V) of PVC-sheathed or rubber-sheathed cable.
- 9. Water sensor zone 1 and zone 2 cable shall be (2 × min 0.3 mm<sup>2</sup>), double insulation layer of PVC-sheathed or rubber-sheathed cable.
- 10. Demand signal cable shall be (2 × min 0.3 mm<sup>2</sup>), double insulation layer of PVC-sheathed or rubber-sheathed cable.
- 11. SG signal cable shall be (3 × min 0.3 mm<sup>2</sup>), double insulation layer of PVC-sheathed or rubber-sheathed cable.
- 12. Heat/Cool switch cable shall be (2 × min 0.3 mm<sup>2</sup>), double insulation layer of PVC-sheathed or rubber-sheathed cable.
- 13. External compressor switch cable shall be (2 × min 0.3 mm<sup>2</sup>), double insulation layer of PVC-sheathed or rubbersheathed cable.

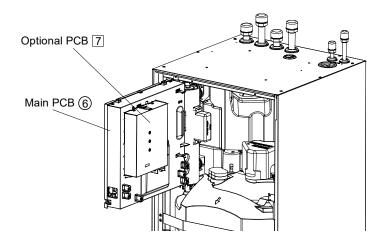

\* For installation on how to route lead wires between Optional PCB 7 and main PCB 6, please refer to the "Optional PCB (CZ-NS6P)" manual.

#### 12.2.2.2 Guide Optional Cables and Power Supply Cables to Bushings

Assembly.

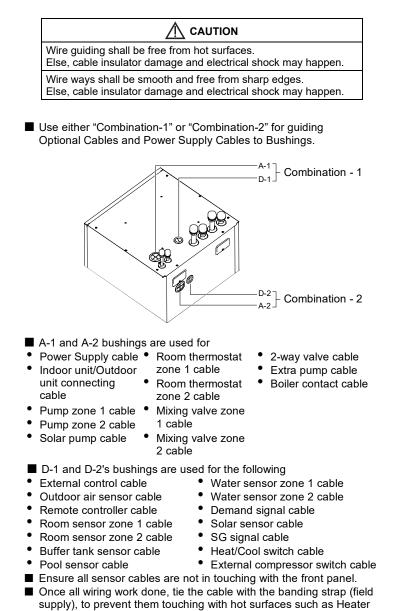


# 12.2.2.3 Connecting Cables Length

When connecting cables between the tank unit and external devices, the cable length must not exceed the maximum lengths given in the table.

External device	Maximum cable length (m)
2-way valve	50
Mixing valve	50
Room Thermostat	50
Extra pump	50
Solar pump	50
Pool pump	50
Zone pump	50
Boiler contact/Defrost signal	50
External control	50
Room sensor	30
Outdoor air sensor	30
Buffer tank sensor	30
Pool water sensor	30
Solar sensor	30
Water sensor	30
Demand signal	50
SG signal	50
Heat/Cool switch	50
External compressor switch	50

12.2.2.4 Connection of Main PCB

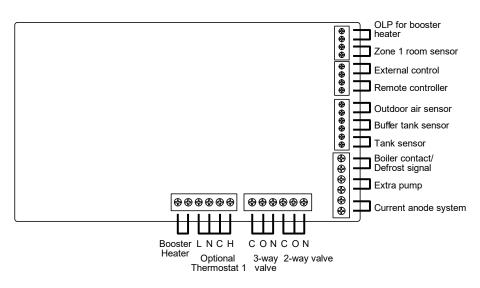

• Signal inputs


Optional Thermostat	L N =AC230V, Heat, Cool=Thermostat heat, Cool terminal
External control	Dry contact Open=not operate, Short=operate (system setup required) Operation can be switched on and off by an external switch
Remote controller	Already connected (use 2-core wire for relocation and extension. The total length of the cable shall be 50m or less.)

#### Outputs

3-way valve	AC230V N=Neutral Open, Close=direction (for switching the circuit when connecting a DHW tank)	AC230V, 12 VA
2-way valve	AC230V N=Neutral Open, Close (prevent water circuit pass in Cool mode)	AC230V, 12 VA
Extra pump	AC230V (for use when the pump capacity of the tank unit is insufficient).	AC230V, 0.6 A max.
Boiler contact/ Defrost signal	Dry contact (System setup required)	

Zone 1 room sensor	PAW-A2W-TSRT
Outdoor air sensor	PAW-A2W-TSOD (total cable length 30 m or less)

# 12.2.2.5 Connection of Optional PCB (CZ-NS6P)

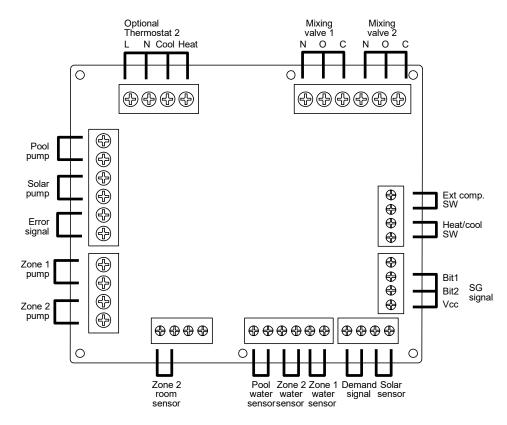

#### Signal inputs

٠	Thermi	istor	input	s

Optional Thermostat	L N=AC230V, Heat, Cool=Thermostat Heat/Cool terminals
SG signal	Dry contact Vcc-Bit1, Vcc-Bit2 Open/short (system setup required) Switching SW (connect to 2-contact controller).
Heat/Cool SW	Dry contacts Open=Heat, short=Cool (system setup required)
External comp. SW	Dry contact Open=Comp. OFF, short=Comp. ON (System setup required).
Demand signal	DC 0-10 V (System setup required) Connect to a controller with DC 0-10 V.

#### Outputs


Mixing valve	AC230V N=Neutral Open, Close = mixed direction Operating time: 30 s to 120 s	AC230V, 6 VA
Pool pump	AC230V	AC230V, 0.6 A max.
Solar pump	AC230V	AC230V, 0.6 A max.
Zone pump	AC230V	AC230V, 0.6 A max.

Zone room sensor	PAW-A2W-TSRT
Buffer tank sensor	PAW-A2W-TSBU
Pool water sensor	PAW-A2W-TSHC
Zone water sensor	PAW-A2W-TSHC
Solar sensor	PAW-A2W-TSSO

## 12.2.2.6 Recommended External Device Specification

- This section describes the external devices (optional) recommended by Panasonic. Always use the correct external devices when installing the system.
- For optional sensor
- Buffer tank sensor: PAW-A2W-TSBU Use for measurement of the buffer tank temperature.

Insert the sensor into the sensor pocket and affix it to the buffer tank surface.

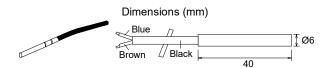


2. Zone water sensor: PAW-A2W-TSHC Use to detect water temperature of the control zone.

Attach to water pipework using stainless steel metal straps and contact paste (both are included).


93

70

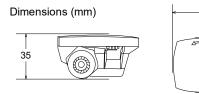


 Outdoor sensor: PAW-A2W-TSOD If the outdoor unit's installation location is exposed to direct sunlight, the outdoor air temperature sensor will not be able to correctly measure the


actual outdoor temperature. In this case, the outdoor temperature can be measured more accurately by fixing the optional outdoor temperature sensor in the appropriate location.

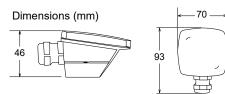

4. Room sensor: PAW-A2W-TSRT Install room temperature sensor in room where room temperature control is required.

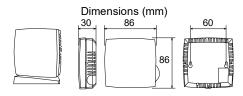

 Solar sensor: PAW-A2W-TSSO Use to measure the temperature of solar panel. Insert the sensor into the sensor pocket and paste it to the solar panel surface.

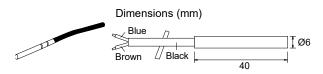

6. See the table below for sensor characteristics of the above sensors.

Temperature. (°C)	Resistance value (kΩ)
30	5.326
25	6.523
20	8.044
15	9.980
10	12.443
5	15.604
0	19.70
-5	25.05
-10	32.10
-15	41.45
-20	53.92
-25	70.53
-30	93.05
-35	124.24
-40	167.82

Temperature. (°C)	Resistance value (kΩ)
150	0.147
140	0.186
130	0.236
120	0.302
110	0.390
100	0.511
90	0.686
80	0.932
70	1.279
65	1.504
60	1.777
55	2.106
50	2.508
45	3.003
40	3.615
35	4.375

For optional pump

Power supply: AC230V/50 Hz, <500 W Recommended part: Yonos PICO 1.0 25/1-8: Made by Wilo




For optional mixing valve

Power supply: AC230V/50 Hz (Input open/Output close)

Operating time: 120 seconds.

Recommended part: 13020800: Made by ESBE

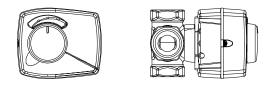


#### 


This section is for authorized and licensed electrician/water system installer only. Work behind the front plate secured by screws must only be carried out under supervision of qualified contractor, installation engineer or service person.

# 12.2.2.7 Network Adaptor 4 Installation


1. Insert a flat head screwdriver into the slot on the top of the adaptor and remove the cover.

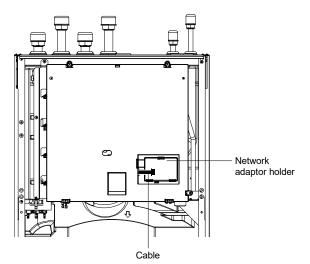

2. Connect cable coming out from the left side of the network adaptor holder to the connector inside the adaptor.

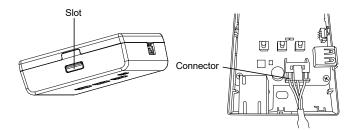

3. Pull the CN-CNT cable through the hole in the bottom of the adaptor and re-attach the front cover to the back cover.

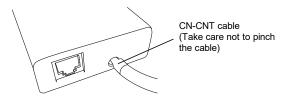


4. Fix the Network Adaptor 4 to Network Adaptor Holder.

Guide the cable as shown in the diagram so that external forces cannot act on the connector in the adaptor.

## 12.2.2.8 Connection of M-Bus or Modbus, Etc.

When connecting devices such as Panasonic A2W compatible M-Bus or Modbus, etc.


• It will be necessary to change the connection position of the CZ-TAW1\* on the PCB.

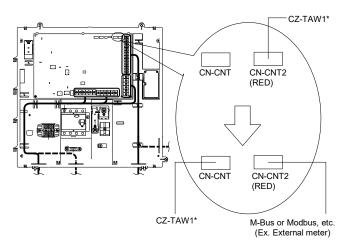

- (1) Replace the lead wire connector of CZ-TAW1\* connected to CN-CNT2 with CN-CNT.
- (2) Insert the M-Bus or Modbus, etc. lead wire connector into CN-CNT2.

When connecting Panasonic A2W Optional PCB to devices such as M-Bus or Modbus, etc.

 It will be necessary to change the connection position of the CZ-TAW1\* on the PCB.

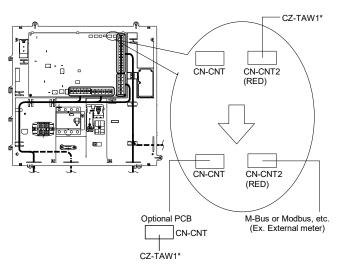


- Insert the Optional PCB lead wire connector into CN-CNT.
- (2) Replace the lead wire connector of CZ-TAW1\* connected to CN-CNT2 with CN-CNT on Optional PCB.
- (3) Insert the M-Bus or Modbus, etc. lead wire connector into CN-CNT2.


## 12.2.3 System Installation

## 12.2.3.1 Remote Controller Outline

The LCD display as shown in this manual are for instructional purpose only, and may differ from the actual unit.

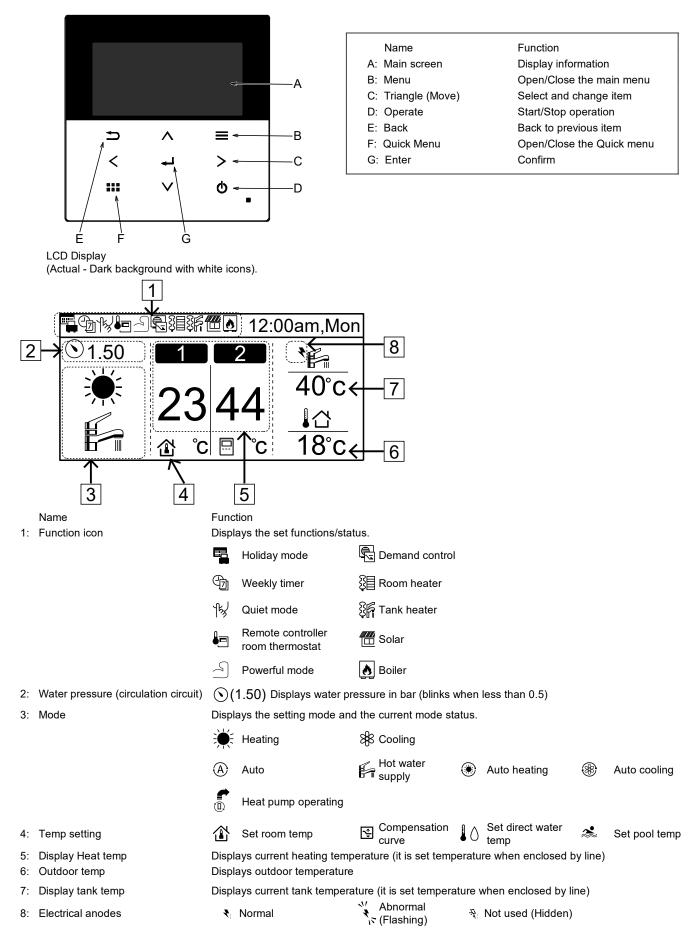



#### First time of power ON (Start of installation)

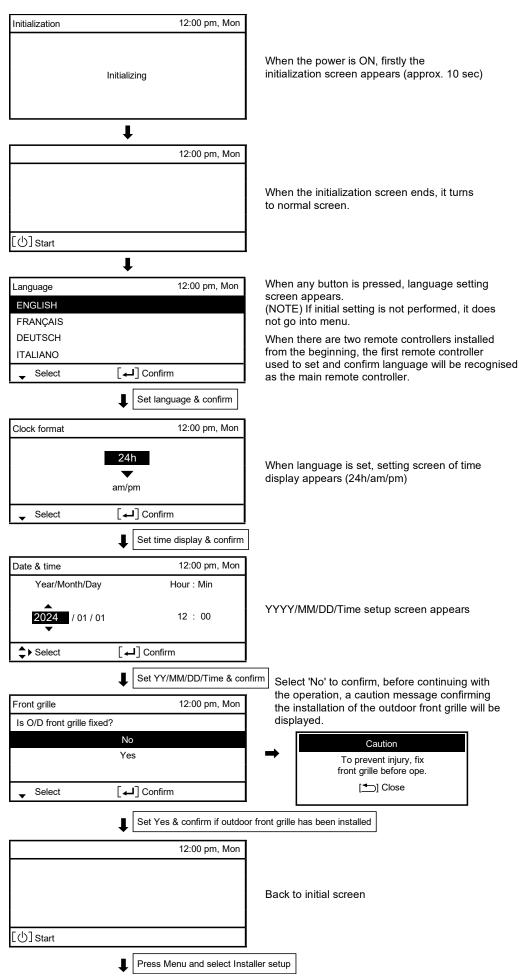


Main menu	12:00 pm, Mon
System check	
Personalisation	
Service contact	
Installer setup	
Select	[
	Confirm to go into Installer setu

## 12.2.3.2 Installer Setup

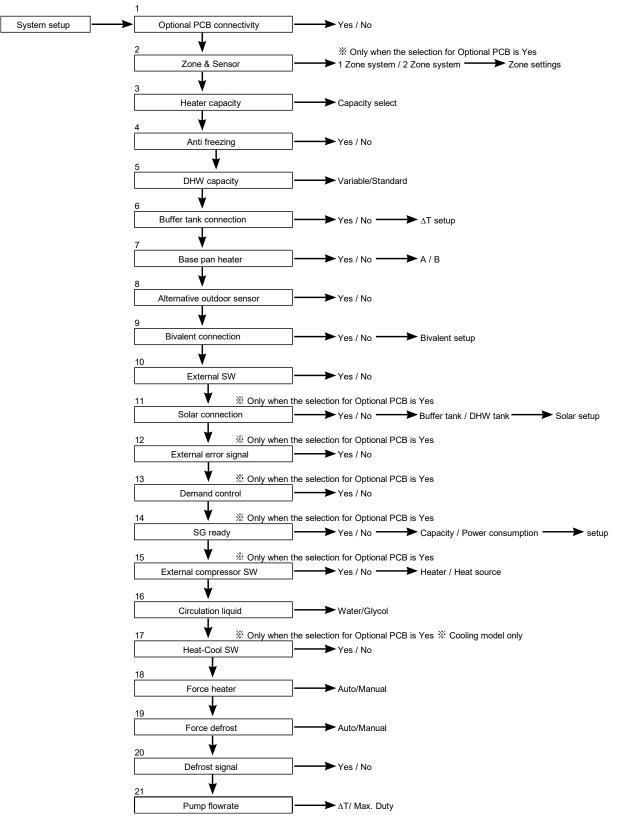

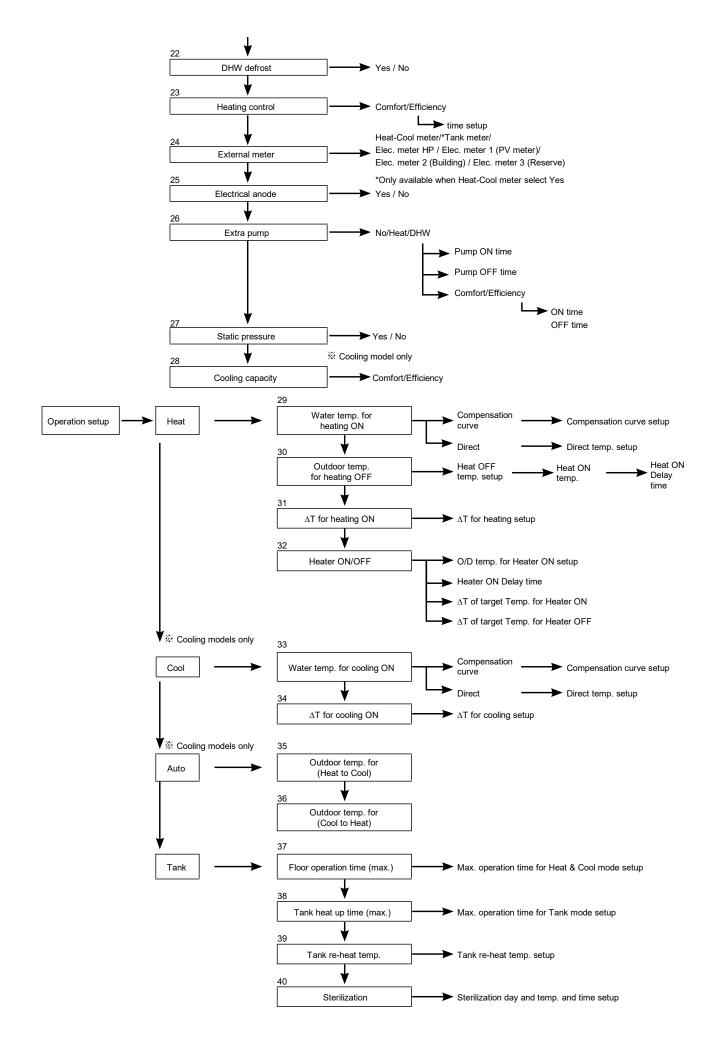

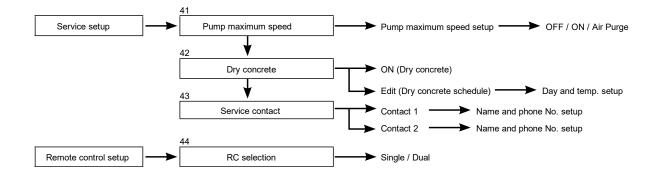

# 12.2.3.3 System Setup

1. Optional PCB connectivity         Initial setting: No	System setup	12:00 pm, Mon
	Optional PCB connectiv	ity
If function below is necessary, please purchase and install Optional PCB.	Zone & Sensor	
Please select Yes after installing Optional PCB.  • 2-zone control	Heater capacity	
Pool	Anti freezing	
• Solar	ŭ	L] Confirm
External error signal output		
Demand control		
<ul><li>SG ready</li><li>Stop heat source unit by external SW</li></ul>		
2. Zone & Sensor Initial setting: Room and Water temp.	System setup	12:00 pm, Mon
	Optional PCB connectiv	ity
If no Optional PCB connectivity Select sensor of room temperature control from the following 3 items	Zone & Sensor	
<ol> <li>Water temperature (circulation water temperature)</li> </ol>	Heater capacity	
Room thermostat (Internal or External)     A second secon	Anti freezing	
③ Room thermistor	Select [	┙] Confirm
When there is Optional PCB connectivity	•	
① Select either 1 zone control or 2 zone control.		
If it is 1 zone, select either room or pool, select sensor If it is 2 zone, after select sensor of zone 1, select either room or pool for zone		

(NOTE) In 2 zone system, pool function can be set at zone 2 only.

3. Heater capacity	Initial setting: Depend on model	System setup 12:00 pm, Mon
		Optional PCB connectivity
If there is built-in Heater, se	t the selectable heater capacity.	Zone & Sensor
(NOTE) There are models	which cannot select Heater capacity.	Heater capacity
		Anti freezing
		Select [+] Confirm

System setup 12:00 pm, Mon 4. Anti freezing Initial setting: Yes Optional PCB connectivity Operate anti-freezing of water circulation circuit. Zone & Sensor If select Yes, when the water temperature is reaching its freezing temperature, the Heater capacity circulation pump will start up. If the water temperature does not reach the pump stop temperature, back-up heater will be activated. Anti freezing **\*** Select [] Confirm (NOTE) If set No, when the water temperature is reaching its freezing temperature or below 0°C, the water circulation circuit may freeze and cause malfunction.

5. DHW capacity


Initial setting: Variable

Variable DHW capacity setting normally run with efficient boiling which is energy saving heating. But while hot water usage high and tank water temperature low, variable DHW mode will run with fast heat up which heat up the tank with high heating capacity.

If standard DHW capacity setting is selected, heat pump run with heating rated capacity at tank heat up operation.

System setup	12:00 pm, Mon				
Zone & Sensor					
Heater capacity					
Anti freezing					
DHW capacity					
Select	[←] Confirm				

6. Buffer Tank	connection	Initial setting: N	lo	System setup	12:00 pm, Mon
				Heater capacity	
Select whether it is connected to buffer tank for heating or not. If buffer tank is used, please set Yes.			Anti freezing		
			o increase primary side temp	Tall	
against seconda			o morease primary side temp	Buffer tank connection	
f the buffer tank	capacity is not	so large, please set la	arger value for $\Delta T$ .		[←] Confirm
7. Base pan h	eater In	itial setting: No		System setup	12:00 pm, Mon
				Tank connection	
Select whether E f set Yes, select		is installed or not.		Buffer tank connection	
				Tank heater	
A: Turn on Heate B: Turn on Heate		with defrost operatio	n only	Base pan heater	
	a nealing			Select	<b>→</b> ] Confirm
0. 4/4				System setur	12:00 pm, Mon
o. Alternative	outdoor senso	r Initial setting		System setup	-
Set Yes if outdoo	or sensor is inst	alled.		Buffer tank connection	
	tional outdoor s	ensor without reading	g the outdoor sensor of heat	Tank heater	
oump unit.				Base pan heater	
				Alternative outdoor ser	
				Select	[₊] Confirm
9. Bivalent co	nnection	Initial setting: No		System setup	12:00 pm, Mon
			•	Tank heater	
Set if heat pump Connect the star			terminal (main PCB).	Base pan heater	
Set Bivalent con	nection to YES.			Alternative outdoor ser	nsor
		according to remote c emote controller top s		Bivalent connection	
				Select	[←] Confirm
			n of control pattern to be sel	ect, (SG Ready / Auto)	
		set when optional PC		et numn ee helew condition	
,	· ·		trol ON/OFF of boiler and he	at pump as below condition	
	signal	Operation p	attern		
Vcc-bit1	Vcc-bit2				
Open Short	Open	Heat pump OFF, Bo			
	Open Short	Heat pump ON, Boi			
Open Short	Short	Heat pump OFF, Bo			
at the same tir		s sharing same termir	nal as [14. SG ready] connec	ction. Only one of these two se	etting can be set
		ing will reset to not se	ət.		
2) Auto					
			operation. Movement of eac below setting temperature)	ch modes are shown below.	
Ξ ,		• •	s setting temperature)		
			peration time of parallel operation	ation)	
				displayed below the boiler ico	ז.
			e as heat pump temperature mperature, zone temperature	e cannot be achieved if mixing	valve is not installed
				ng of boiler shall be responsibl	

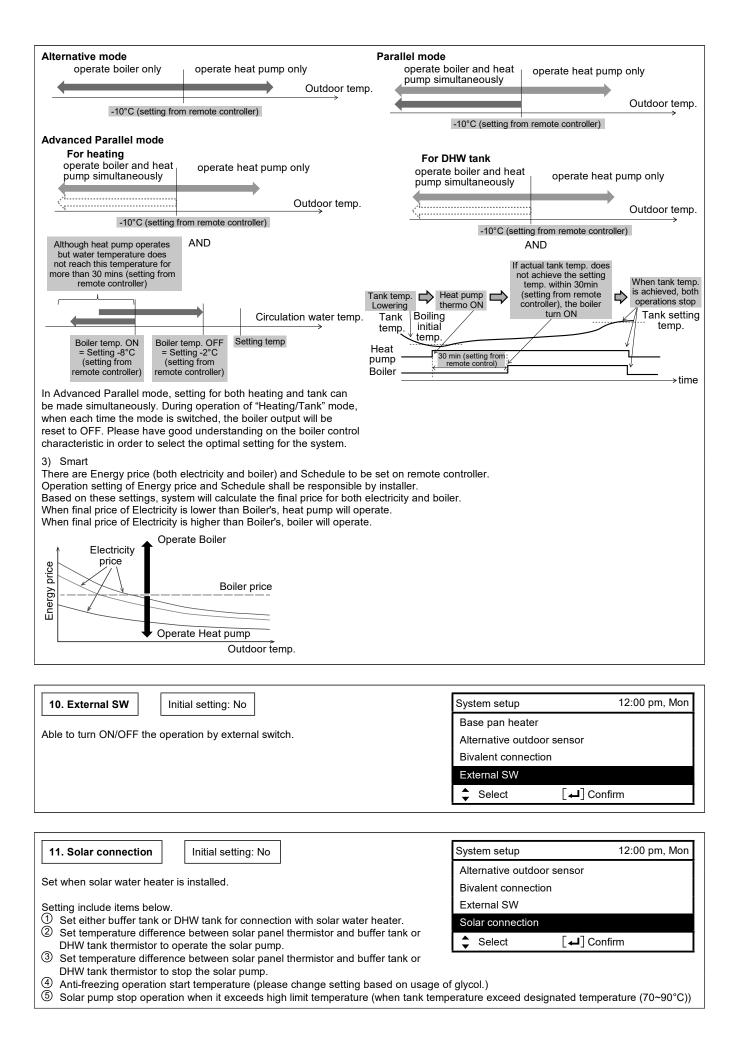

#### 12. External Error Signal

Initial setting: No

Set when external error display unit is installed. Turn on Dry Contact SW when error happened.

(NOTE) Does not display when there is no Optional PCB. When error occurs, error signal will be ON. After turn off "close" from the display, error signal will still remain ON.

13. Demand control

Initial setting: No

Set when there is demand control. Adjust terminal voltage within 1 ~ 10 V to change the operating current limit.

(NOTE) Does not display when there is no Optional PCB.

Select	[⊷] Confirm
System setup	12:00 pm, Mon
External SW	
Solar connection	
External error sign	al
Demand control	
Select	[ ←] Confirm

12:00 pm, Mon

Analog input	Rate			Analog input	Γ	F	Rate	
[V]	[%]			[V]			[%]	
0.0		▲ not activate			3.9 ~ 4.1			40
0.1 ~ 0.6	4	nota	activate		4.2		45	
0.7		10	not		4.3		45	
0.8		10	activate		4.4 ~ 4.6			45
0.9 ~ 1.1		-	10		4.7		50	
1.2		15	10		4.8		50	
1.3			-		4.9 ~ 5.1			<u>5</u> 0
1.4 ~ 1.6		,	15		5.2		55	
1.7		20	15		5.3		00	
1.8		-			5.4 ~ 5.6			55
1.9 ~ 2.1		20			5.7		60	
2.2		25	20		5.8		00	
2.3		-			5.9 ~ 6.1			<u>6</u> 0
2.4 ~ 2.6		25			6.2		65	
2.7					6.3		00	
2.8		30	25		6.4 ~ 6.6			65
2.9 ~ 3.1		30			6.7		70	
3.2		35	30		6.8		10	
3.3		55	50		6.9 ~ 7.1			70
3.4 ~ 3.6		35			7.2		75	
3.7		40	35	L	7.3		75	
3.8		40	- 55	▼				

Analog input	Rate				
[v]	[%]				
7.4 ~ 7.6	▲ 7	5			
7.7	80	75			
7.8	00	75			
7.9 ~ 8.1	8	0			
8.2	85	80			
8.3	05	80			
8.4 ~ 8.6	85				
8.7	90	85			
8.8	30	05			
8.9 ~ 9.1	9	0			
9.2	95	90			
9.3	95	90			
9.4 ~ 9.6	95				
9.7	100	95			
9.8	100	30			
9.9 ~	1	00	¥		

40

45

50

55

60

65

70

System setup

External SW

Solar connection

External error signal

**Bivalent** connection

\*A minimum operating current is applied on each model for protection purpose.

\*0.2 voltage hysteresis is provided.

\*The value of voltage after 2nd decimal point are cut off.

14. SG R	eady	Initial setting: No			System setup	12:00 pm, Mon
Switch operation of heat pump by open-short of 2 terminals. The following settings are possible. Capacity: limit by capacity. Power consumption: limit by power consumption.			Solar connection External error signal Demand control SG Ready			
SG s	ignal	Operation pattern			Select	[⊷] Confirm
Vcc-bit1	Vcc-bit2					
Open	Open	Normal				
Short	Open	Heat pump/heater OFF				
Open	Short	Capacity 1				
Short	Short	Capacity 2				
Capacity : - DHV - Hea - Coo Capacity : - DHV - Hea - Coo	Select Capacity         Capacity setting 1         - DHW capacity%.         - Heating capacity%.         - Cooling capacity%.         - DHW capacity%.         - DHW capacity%.         - DHW capacity%.         - Heating capacity%.         - Cooling capacity%.					
Select Power consumption HPU stop consumptionkW HPU stop consumption value is never exceeded If the value is exceeded, heating is provided by the heater only. Power consumption setting 1 - Power consumption of DHWkW - Heating power consumptionkW Power consumption setting 2 - Power consumption of DHWkW - Heating power consumptionkW - Cooling power consumptionkW - Cooling power consumptionkW						
(If SG ready is set to 'Yes', Bivalent control pattern is set to 'Auto' ). (Note): Does not display if there is no Optional PCB.						

15. External compressor SW Initial setting: No	System setup 12:00 pm, Mon
	External error signal
Set when external compressor SW is connected. SW is connected to external devices to control power consumption, Open Signal will	Demand control
stop compressor's operation. (Heating operation etc. are not cancelled).	SG Ready
(Note): Dece not display if there is no Ontional BCP	External compressor SW
(Note): Does not display if there is no Optional PCB.	Select [↓] Confirm
16. Circulation Liquid         Initial setting: Water	System setup 12:00 pm, Mon
Set circulation of heating water.	Demand control
·	SG Ready
There are 2 types of settings, water and glycol.	External compressor SW
(NOTE) Please set glycol when using anti-freeze liquid.	Circulation liquid
It may cause error if setting is wrong.	Select [4] Confirm
17. Heat-Cool SW         Initial setting: Disable	System setup 12:00 pm, Mon
	SG Ready
Able to switch (fix) heating & cooling by external switch.	External compressor SW
(Open) : Fix at Heating (Heating +DHW)	Circulation liquid
(Short) : Fix at Cooling (Cooling +DHW)	Heat-Cool SW
(NOTE) This setting is disabled for model without Cooling. (NOTE) Does not display if there is no Optional PCB.	Select [+] Confirm
Timer function cannot be used. Cannot use Auto mode.	
18. Force Heater         Initial setting: Manual	System setup 12:00 pm, Mon
	External compressor SW
Under manual mode, user can turn on force heater through quick menu.	Circulation liquid
If selection is 'auto', force heater mode will turn automatically if pop up error	Heat-Cool SW
happen during operation. Force heater will operate follow the latest mode selection, mode selection is	Force heater
disable under force heater operation.	Select [+] Confirm
Heater source will ON during force heater mode.	
19. Force Defrost Initial setting: Manual	System setup 12:00 pm, Mon
	Circulation liquid
Under manual code, user can turn on force defrost through quick menu.	Heat-Cool SW
If selection is 'auto', outdoor unit will run defrost operation once if heat pump have	Force heater
long hour of heating without any defrost operation before at low ambient condition.	Force defrost
(Even auto is selected, user still can turn on force defrost through quick menu)	
	Select [4] Confirm
20. Defrost signal Initial setting: No	System setup 12:00 pm, Mon
·	Heat-Cool SW
Defrost signal sharing same terminal as bivalent contact in main board. When	Force heater
defrost signal set to YES, bivalent connection reset to NO. Only one function can be set between defrost signal and bivalent.	Force defrost
, , , , , , , , , , , , , , , , , , ,	Defrost signal
When defrost signal set to YES, during defrost operation is running at outdoor	Select [4] Confirm
unit defrost signal contact turn ON. Defrost signal contact turn OFF after defrost operation end.	
(Purpose of this contact output is to stop indoor fan coil or water pump during defrost operation).	

<b>21. Pump flowrate</b> Initial setting: $\Delta T$	System setup	12:00 pm, Mon
If pump flowrate setting is $\Delta$ T, unit adjust pump duty to get different of water inlet and outlet base on setting on * $\Delta$ T for heating ON and * $\Delta$ T for cooling ON in operation setup menu during room side operation.	Force heater Force defrost Defrost signal	
If pump flowrate setting is set to Max. duty, unit will set the pump duty to the set duty at *Pump maximum speed in service setup menu during room side operation.	Pump flowrate	[←] Confirm
22. DHW defrost Initial setting: Yes	System setup Force defrost	12:00 pm, Mon

When DHW defrost set to YES, hot water of domestic hot water tank will be used during defrost cycle.

When DHW defrost set to NO, hot water of floor heating circuit will be used during defrost cycle.

Pump flowrate
DHW Defrost

Select [↓] Confirm

12:00 pm, Mon

Defrost signal

System setup

Compressor frequency control can be selected from two modes: Comfort and Efficiency.

Initial setting: Comfort

Select Comfort

23. Heating control

The compressor operates at the maximum frequency at the upper zone limit and reaches the set temperature faster.

Select Efficiency

The compressor is operated at partial load frequency in the initial phase to save energy.

The time setting will transition to 1st, 2nd, and 3rd stage. Increasing the time will slowly increase the capacity.

Defros	st signal	
Pump	flowrate	
DHW I	Defrost	
Heatin	ng control	
🗘 Se	elect [+] Confirm	
Select I Capaci	Efficiency.	
	1st stage 2nd stage 3rd s	Total time

24. External meter	Initial setting: [Heat-cool meter : No ]	System setup 12:00 pm, Mon
	[ Tank meter : No ] *only available when Heat-cool meter select Yes [ Elec. meter HP : No ]	Pump flowrate DHW Defrost
	[ Elec. meter 1 (PV meter) : No ] [ Elec. meter 2 (Building) : No ] [ Elec. meter 3 (Reserve) : No ]	Heating control External meter
		Select [4] Confirm

There are two systems for generation meter connection : one generation meter system

(Heat-cool meter) or two generation meter system (Heat-cool meter and Tank meter)

Both systems can provide all generation data of heating, cooling and DHW directly from external meter.

If Heat-cool meter is set to Yes, it will read from external meter for heat pump's energy generation data during heating, cooling and DHW operation <sup>11</sup>.

If Heat-cool meter is set to No, it will base on unit's calculation for heat pump's energy generation data during heating, cooling and DHW operation.

If Tank meter is set to Yes, it will read from external meter for heat pump's energy generation data during DHW operation 1.

If Elec. meter HP is set to Yes, it will read from external meter for heat pump's energy consumption data.

If Elec. meter HP is set to No, it will base on unit's calculation for heat pump's energy consumption data.

If Elec. meter 1 (PV meter) is set to Yes, it will read from external meter for energy generation data of solar system and display it on Cloud system.

If Elec. meter 2 (Building) is set to Yes, it will read from external meter for energy consumption data of the building and display it on Cloud system.


If Elec. meter 3 (Reserve) is set to Yes, it will read from external meter for energy consumption data obtained from reserved electricity meter and display it on Cloud system.

<sup>\*1</sup> Set Heat-cool meter to Yes and set Tank meter to No when 1 generation meter system is installed.

Set Heat-cool meter to Yes and set Tank meter to Yes when 2 generation meter system is installed.


Remark : Elec. meter HP refers to Electricity meter that measures Heat Pump unit's consumption.


Elec. meter 1 / 2 / 3 refers to Electricity meter no. 1 / no. 2 / no. 3

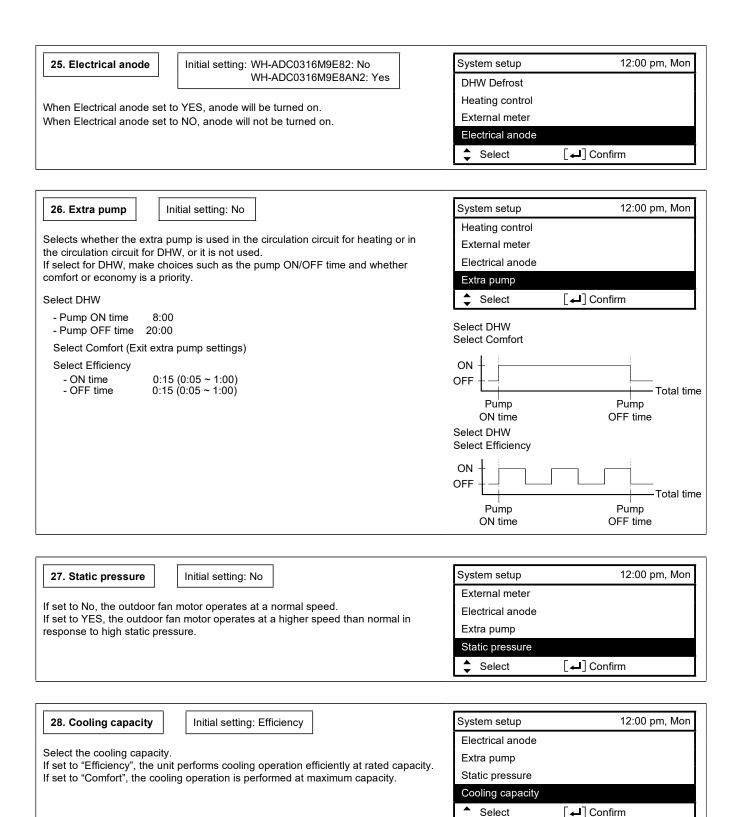


# 12.2.3.4 Operation Setup

#### Heat

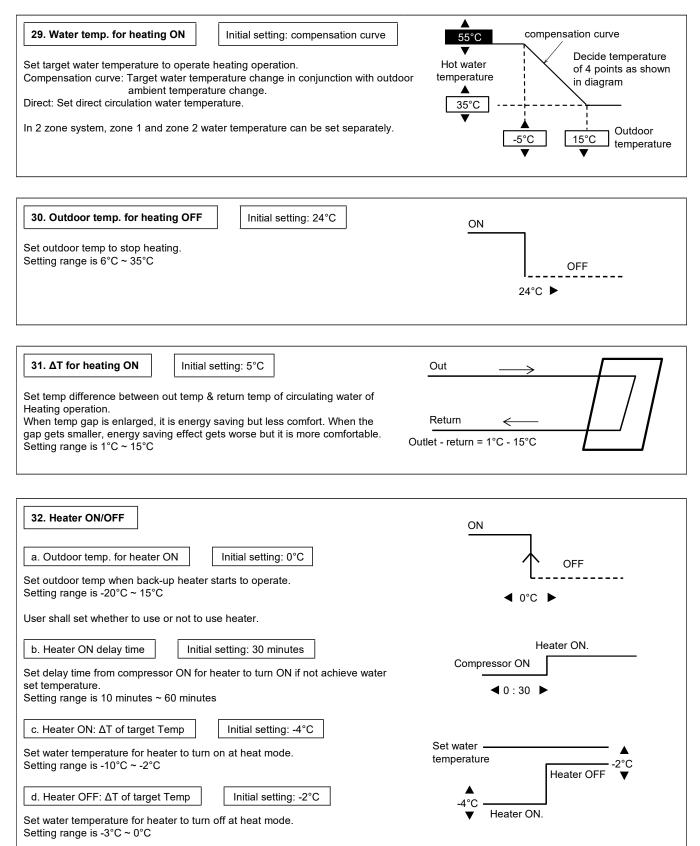

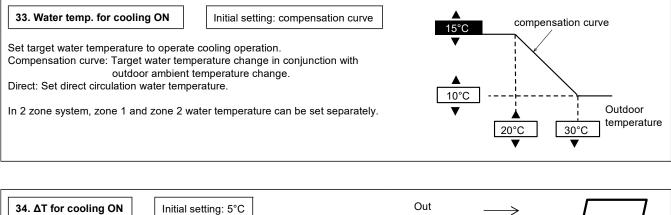

Set temp difference between out temp & return temp of circulating water of Cooling operation. When temp gap is enlarged, it is energy saving but less comfort. When the gap gets smaller, energy saving effect gets worse but it is more comfortable. Setting range is 1°C ~ 15°C

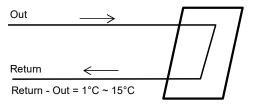

#### Auto

<b>35. Outdoor temp. for (Heat to Cool)</b> Initial setting: 15°C	Heat Outdoor temp. rising
Set outdoor temp that switches from heating to cooling by Auto setting. Setting range is 11°C ~ 25°C	Cool
Timing of judgement is every 1 hour	4 15°C ►

<b>36. Outdoor temp. for (Cool to Heat)</b> Initial setting: 10°C	Heat Outdoor temp. dropping
Set outdoor temp that switches from Cooling to Heating by Auto setting. Setting range is 5°C ~ 14°C	Cool
Timing of judgement is every 1 hour	4 10°C ►


#### Tank

Γ	
37. Floor operation time (max) Initial setting: 8h	
Set max operating hours of heating.	Heat
When max operation time is shortened, it can boil the tank more frequently.	30min ~ 10h
It is a function for Heating + Tank operation.	Tank
38. Tank heat up time (max) Initial setting: 60min	
Set max boiling hours of tank.	Heat
When max boiling hours are shortened, it immediately returns to Heating	
operation, but it may not fully boil the tank.	Tank
	$-\!\!-\!\!-\!\!-\!\!-\!\!-\!\!-\!\!-\!\!-\!\!-\!\!-$
	5min ~ 4h
<b>39. Tank re-heat temp.</b> Initial setting: -8°C	$\bigvee$
Set the temperature to re-boil the tank water.	
Setting range is -12°C ~ -2°C	$\bigwedge$
	-12°C ~ -2°C
40. Sterilisation Initial setting: 65°C 10 mins.	
Set timer to perform sterilization.	
<ol> <li>Set time to perform sterilization.</li> <li>Set operating day &amp; time. (Weekly timer format)</li> </ol>	
2 Sterilization temp (55~65°C)	
③ Operation time (Time to run sterilization when it reached setting temperature. 5 ~ 60 minutes)	
	$\leftarrow$

User shall set whether to use or not to use sterilization mode.

# 12.2.3.5 Service Setup

41. Pump maximum speed Initial setting: Varies according to model	Service setup		12:00 pm, Mon
	Flow rate	Max Duty	Operation
Normally setting is not necessary. Please adjust when needed to reduce the pump sound, etc. Besides that, the unit has Air Purge function.	45.6 L/min.	0xCE	Air Purge
When the Pump flow setting is Max. Duty, this duty setting is the duty of fixed pump that runs during operation.	▲ Select		

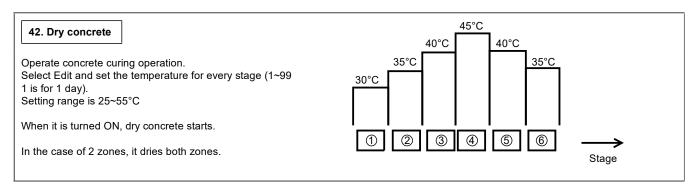

43. Service contact	Service setup 12:00 pm, Mor	Contact - 1: Brian Adams	
	Service contact:	ABC/ abc 0-9/ Other	
Able to set the name & telephone no. of contact person when there is	Contact 1	ABCDEFGHIJKLMNOPQR	
breakdown etc. or client has trouble.	Contact 2	STUVWXYZ abcdefghi	
(2 items)		j k l m n o p q r s t u v w x y z	
	Select [4] Confirm	→ Select         [←] Confirm	

# 12.2.3.6 Remote Control Setup

44. RC selection         Initial setting : Single	RC selection	12:00 pm, Mon
If there is only one remote controller, set to "Single". If two remote controllers are installed, set to "Dual".	Single	
For details on the Dual setting, refer to the instruction manual of the optional remote controller.	Select [←]Cor	ıfirm

# 12.3 Service and Maintenance


If forget Password and cannot operate remote controller

+ + > Press for 5 seconds. Password unlock screen appears, press Confirm and it shall reset. Password will become 0000. Please reset it again. (Note) This is displayed only when the remote controller is password-locked.

# 12.3.1 Maintenance Menu


н	ow to set up the Maintenance menu
Ma	aintenance menu 12:00 pm, Mon
Ac	tuator check
Te	st mode
Se	ensor setup
Re	eset password
<b>F</b>	, Select [⊶]Confirm
<b>-</b>	) + $\rightarrow$ + > Press for 5 seconds.
Iten	ns that can be set
1	Actuator check (Manual ON/OFF all functional parts) (NOTE) As there is no protection action, please be careful not to cause any error when operating each part (do not turn on pump when there is no water etc.)
2	Test mode (Test run) Normally it is not used.
3	Sensor setup (off set gap of detected temp of each sensor can be set within -3~3°C range) (NOTE) Please use only when sensor is deviated. It affects temperature control.
4	Reset password (password reset)

# 12.3.2 Custom Menu

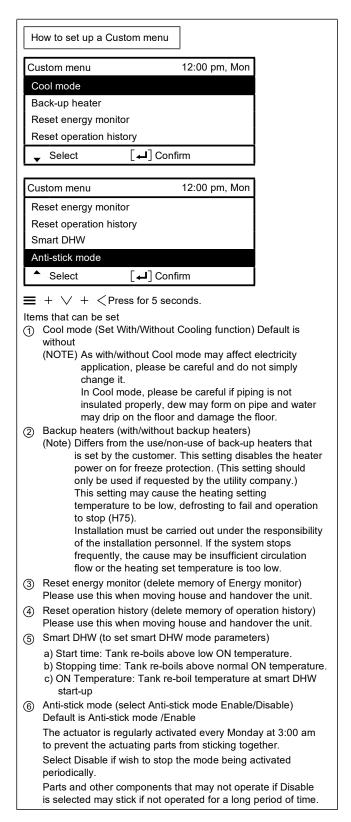

# 12.4 Outdoor Unit

#### Attached accessories

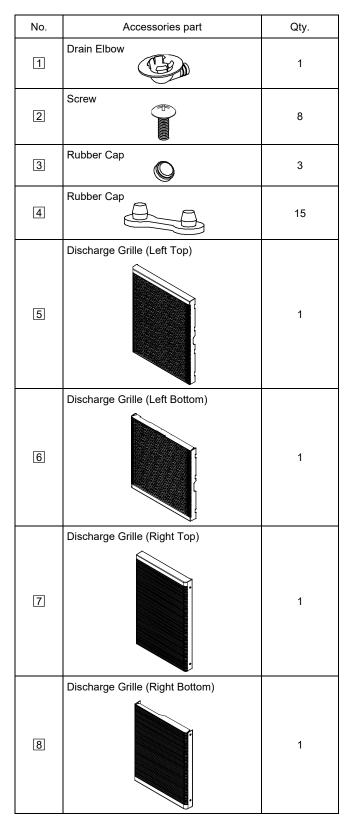

## **Optional Accessories**

No.	Accessories part	Qty.
9	Remote Controller set (CZ-RTW2TAW1C) *Include Remote Controller + Network adapter with 10m cable	1
10	Remote Controller (CZ-RTW2)	1
11	Base Pan Heater CZ-NE4P	1

- When you purchase an indoor unit, the remote controller and network adapter are included.
- When the outdoor unit is used alone, either 9 or 10 is always required.
- If you need the 2nd remote controller, purchase
   10 and set it up as the 2nd remote controller.
- When installing the outdoor units in cold climates, it is strongly recommended to install a base pan heater (optional). For installation details, refer to the installation manual of the base pan heater (optional).

#### Field Supply Accessories (Optional)

Part	3-way valve kit		
	Electromtoric Actuator 3-port Valve		
Model	SFA 21/18	VXI 46/25	
Specification	AC230V, 12VA -		
Supplier	Siemens		

## 12.4.1 Select the Best Location

- If an awning is placed over the unit to avoid direct sunlight or rain, be careful not to disturb the heat dissipation from the capacitor.
- Avoid installation where the ambient temperature may fall below -28°C.
- A protective zone is defined in the area close to the perimeter of the product. Refer to
   **2 PROTECTIVE ZONE** section.
- Do not place obstacles that could short-circuit the discharge air.
- The lifespan of Outdoor Unit may be shorter if it is installed near the sea, in areas with high sulphur content or high oil content (e.g. machine oil).
- For maximum length and elevation between outdoor unit and indoor unit, refer to "Cooling/Heating Pipework" in

**5** PIPING INSTALLATION

## 12.4.2 Protective Zone

This outdoor unit is filled with R290(Extremely flammable gas, safety A3 group per ISO 817). Note that this refrigerant has a higher density than air. In case of a refrigerant leak, the leaked refrigerant may accumulate near the ground.

Prevent accumulation of refrigerant in any way that is potentially dangerous, explosive or risk suffocation. Prevent refrigerant from entering the building through building openings. Prevent accumulation of refrigerant in the drain grooves.


A protective zone is defined around this outdoor unit. There must be no building openings, windows, doors, light shafts, cellar entrances, escape hatches, flat-roof windows or ventilation openings in the protective zone.

There must be no ignition sources, such as heat above 360°C, sparks, open flame, plug sockets, light switches, lamps, electrical switches or other permanent ignitions sources, in the protective zone.


The protective zone must not extend to adjacent buildings or public traffic areas (boundaries of neighbors, the public road, neighbor's private roads, subsidence area, depressions, pump shafts, sewers intakes, waste water shafts and so on.).

In the protective zone, you are not permitted to make any subsequent structural alterations which infringe the stated rules for the protective zone.


1) Protective zone for ground installation (or flat-roof installation) at the open areas

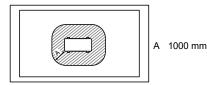


2) Protective zone for ground installation in front of a building wall

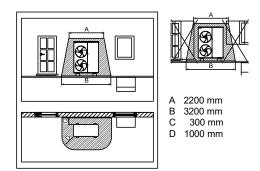

3) Protective zone for ground installation in a building corner

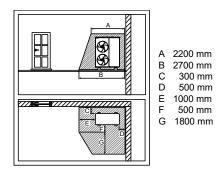


4) Protective zone for wall installation in front of a building wall

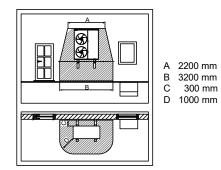

The protective zone under the product extends to the floor.


5) Protective zone for wall installation in a building corner

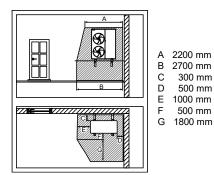


The protective zone under the product extends to the floor.

## 12.4.3 Install Outdoor Unit

# 12.4.3.1 Dimension Diagram

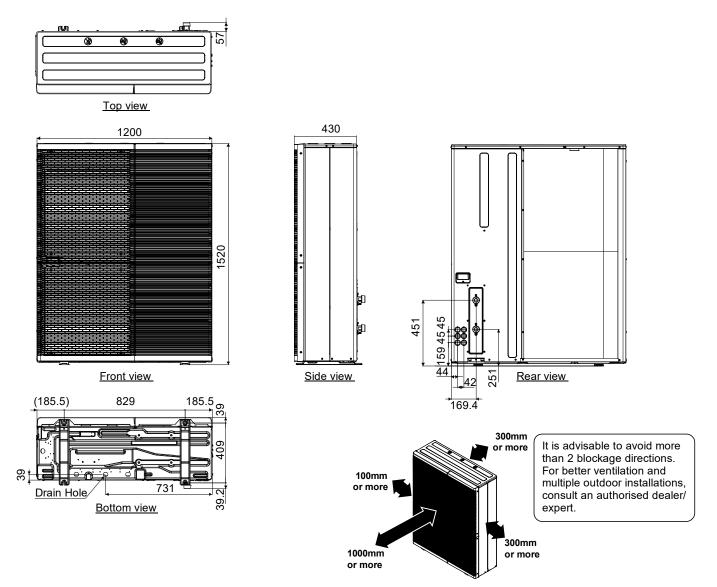


## 12.4.3.2 Main Components Diagram

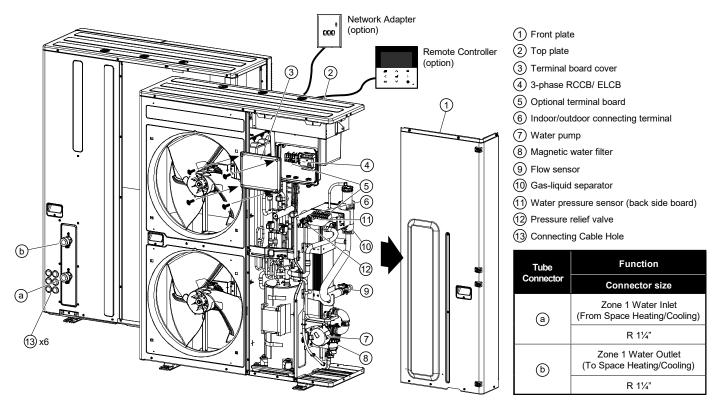


## 12.4.3.3 Install the Outdoor Unit

- After selecting the best location, start installation according to the Installation Diagram.
  - 1. When installing at roof, please consider strong wind and earthquake. Please fasten the installation stand firmly with bolt or nails.
  - For mounting on concrete or solid surfaces, fix the unit using M10 or W 3/8 bolts and nuts. Make sure that the unit is installed vertically against the horizontal plane. (Install the unit using anchor bolt as shown right.)

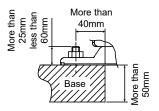

# 12.4.3.4 Disposal of Outdoor Unit Drain Water

- When the Drain elbow 1 is used, please ensure to:
  - The unit must be mounted on a stand at least 50 mm high.
  - Seal the ø32 mm holes with Rubber caps 3. (Refer to the diagram below and install from the outside)
  - If drain water leaks, attach rubber caps 4 when necessary. (Refer to the diagram below and install from the outside)
  - When disposing drain water from the outdoor unit, use a tray (field supply) if necessary.
- If the unit is used in an area where temperature falls below 0°C for 2 or 3 consecutive days, it is recommended not to use the Drain elbow 1 Rubber caps 3 and Rubber caps 4 since drain water will freeze up and obstruct fan rotation.

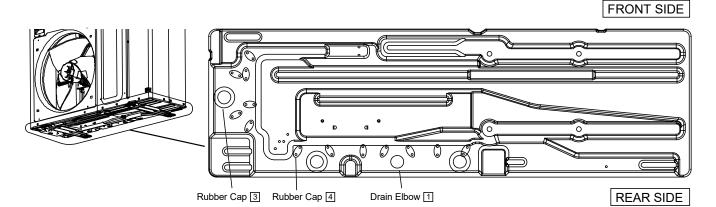

# 12.4.4 Install a Sleeve of Piping (Drill a Hole in the Wall)

- 1. Make a through hole. (Check pipe diameter and insulation thickness)
- 2. Insert the piping sleeve into the hole.
- 3. Fix the bushing to the sleeve.
- 4. Cut the sleeve until it extrudes about 15 mm from the wall.





5. Finish by sealing the sleeve with putty or caulking compound at the final stage.

# 12.4.5 Piping Installation


# 12.4.5.1 Typical Piping Installation

When outdoor unit is used alone

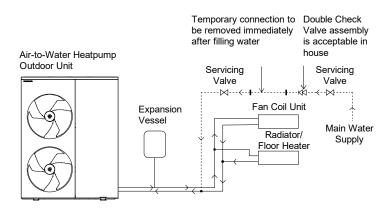


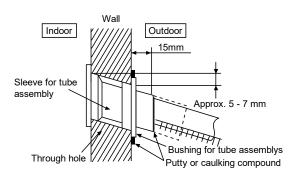

#### When indoor unit (hydromodule + tank) is connected

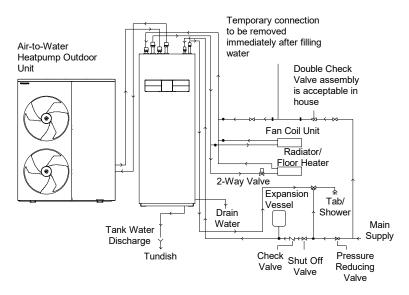


#### When indoor unit (Bi-bloc) is connected

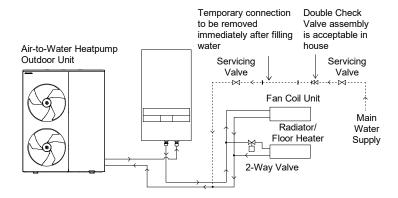

## 12.4.5.2 Water Piping Installation

- Please engage a licensed water circuit installer to install this water circuit.
- This water circuit must comply with relevant European and national regulations (including EN61770), and local building regulation codes.
- Ensure the components installed in the water circuit could withstand water pressure during operation.
- Do not use worn out tube or detachable hose set.
- Do not apply excessive force to the pipe. There is a risk of damage.
- Choose proper sealer which can withstand the pressures and temperatures of the system.
- Make sure to use two spanners to tighten the connection. Further tighten the nuts with torque wrench to the specified torque as stated in the table.
- Cover the pipe end to prevent dirt and dust when inserting it through a wall.
- If non-brass metallic piping is used for installation, make sure to insulate the pipes to prevent galvanic corrosion.
- Do not connect galvanised pipes. This may cause galvanic corrosion.
- Use correct nut for all Outdoor Unit tube connections and clean all tubes with tap water before installation.

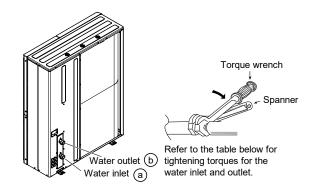

	Size	Torque	
Water Inlet Port (a)	R 1¼"	117 6 Nam	
Water Outlet Port (b)	rt 174	117.6 N•m	

## $\triangle$ CAUTION

Do not overtighten, overtightening may cause water leakage.

- Make sure to insulate the water circuit pipes to prevent reduction of heating capacity.
- After installation, check the water leakage condition in connection area during test run.
- Failure to connect the tube appropriately might cause the Outdoor Unit malfunction.
- Protection from frost:
   When water is left inside the system, freezing up is very likely to happen, which could damage the system.

Make sure the power supply is turned off before draining.

# 12.4.5.3 Space Cooling/Heating Pipework

- Failure to connect the tube appropriately might cause the Outdoor Unit malfunction.
- Refer to the table below for the rated flow rate of each particular Outdoor Unit.

Model	Rated flow rate (L/min)		
Widder	Cooling	Heat	
WH-WXG09ME8	25.8	25.8	
WH-WXG12ME8	25.8	34.4	
WH-WXG16ME8	25.8	45.9	

#### When outdoor unit is used alone

- Connect Outdoor unit Zone 1 Water inlet (a) to outlet connector of Zone 1 Panel/Floor heater.
- Connect Outdoor unit Zone 1 Water outlet (b) to inlet connector of Zone 1 Panel/Floor heater.

#### When connected to indoor unit

Refer to the Indoor Unit Installation Manual.

\* In the case of Control Module model, it is the same as outdoor unit alone case.

#### Pipe diameter and length

Model		Water piping between outdoor unit and indoor unit		
Model	Inner diameter	Maximum length	Insulator thickness	Maximum Elevation
WH-WXG09ME8	Ø 25 mm			
WH-WXG12ME8	Ø 32 mm	30m	30 mm or more	30m
WH-WXG16ME8	9 32 mm			

\* However, if the indoor unit is located more than 10 m below, the water pressure in the circulation circuit (outdoor unit section) shall be 0.5 to 1 bar.

If the outdoor unit is located below, install an extra pump on the outdoor side.

Refer to "12.4.5.4 Special Installation Patterns" in next page.

\* WH-WXG16ME8 may require installation of an extra pump depending on piping length.

	Water piping (When outdoor unit is used alone)		
Model	Inner diameter	Insulation thickness	Maximum elevation between outdoor unit and Panel/Floor heater
WH-WXG09ME8	Ø 25 mm		
WH-WXG12ME8	Ø 32 mm	30 mm or more	10m
WH-WXG16ME8	52 mm		


#### When outdoor unit is used alone


Install an expansion tank (set pressure: 1 bar) to the circulation circuit.

For capacity, refer to 11 RECONFIRMATION

# 12.4.5.4 Special Installation Patterns


Special construction patterns mentioned here refer to the case where there is a substantial difference in elevation (e.g. more than 10 m) between the outdoor unit installation and the Panel/Floor heater (or indoor unit). In this case, attention must be paid since incorrect water filling during installation may prevent the system from operating correctly and may cause water leak.

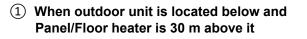

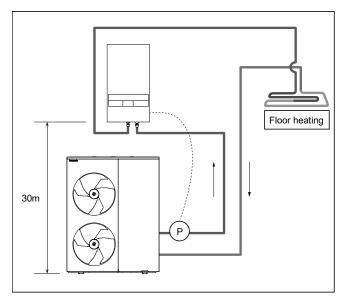

- Pressure checked by remote controller:
   3.5 ~ 4 bar. (at an elevation difference of 30 m)
- When installing an extra pump, connect it to the water outlet of the outdoor unit.
   (If installed to the water inlet, the safety valve is activated and the water is drained)
- Indoor unit is required to install an extra pump.

(2) When outdoor unit is located above and Panel/Floor heater is 30 m below it

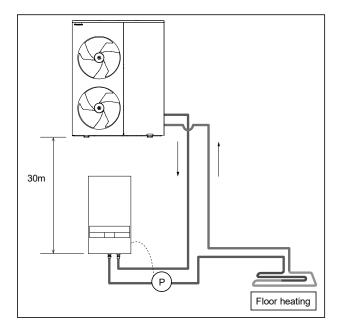


- Pressure checked by remote controller:
   0.5 ~ 1 bar. (at an elevation difference of 30 m)
- When installing an extra pump, connect it to the water outlet of the indoor unit.
- Indoor unit is required to install an extra pump.

# 12.4.6 Connect the Cable to the Outdoor Unit



- (Refer to the unit wiring diagram for details)
- For safety, install the discharge grille (left side) 5 6 using screws 2 before connecting the cables.

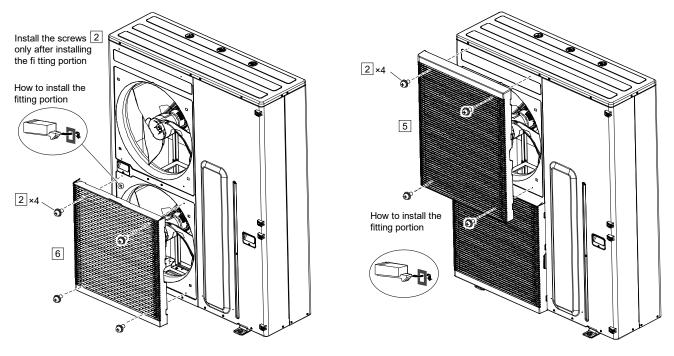

## 12.4.6.1 Fixing of Power Supply Cable and Connecting Cable

- 1. An isolating device must be connected to the power supply cable.
  - Isolating device (disconnecting means) should have minimum 3.0 mm contact gap.
  - Use approved polychloroprene sheathed flexible cable of type designation 60245 IEC 57 or heavier. Connect the other end of the cable to isolating device (Disconnecting means). See table below for cable size requirements.

Power	Supply	Cable

Model	WH-WXG09ME8 WH-WXG12ME8 WH-WXG16MI		
Cable specification	5 × min 1.5 mm <sup>2</sup>	5 × min 2.5 mm <sup>2</sup>	
Cable Diameter	Ø 8.5 ~ 10.0 mm	Ø 12.0 ~ 14.0 mm	
Cable gland to be used (see diagram	A		
in <b>2</b> next page)			
Isolating Devices	20A	25A	
Recommended RCD	30mA, 4P, typeA		

• Earth wire shall be longer than the other wires as shown in the figure 3 for the electrical safety in case of the slipping out of the cord from the Holder (Clamper).

 Connecting cable must be an approved polychloroprene sheathed flexible cable (see table below), type designation 60245 IEC 57 or heavier. The sheath diameter of some connecting cables must be within specifications compatible with the cable gland.

Make sure to install the discharge grille to the outdoor unit before

powering ON to protect againts a rotating fan.

	connection between Indoor unit and outdoor unit	Tank temperature sensor	Remote controller
Cable	2 × min	2 × min	2 × min
Specifications	0.75 mm <sup>2</sup>	0.3 mm <sup>2</sup>	0.3 mm <sup>2</sup>


	3-Way Valve	Boiler
Cable Specifications	3 × min 1.5 mm <sup>2</sup>	$2 \times \text{min } 0.5 \text{ mm}^2$
Cable Diameter	Ø 8.5 ~ 10.0 mm	Ø 4.0 ~ 7.0 mm
Cable gland to be used (see diagram in 2 next page)	В	С

#### 3. Route the cables as follows.

• Do not damage the cables by sharp edges.

Remove the front plate (1) and pull the power cable (cabtyre cable \*1) and connection cable through into the rear bushing. Be sure to use the bushing and do not lose it.


- Remove the terminal board cover (3) and cable gland cap and insert the cables into the cable gland on the bottom of the electrical control unit box.
- **3** Connect to 3-phase RCCB/ELCB ④ and <u>op</u>tional terminal board ⑤.
- 4 Fix the cable gland by referring to [Figure 2]\*2
- 5 Set the terminal board cover (3) by referring to [Figure 2] \*2
- \*1 Locally procure the specified cabtyre cable.
- \*2 Screws of cable gland and terminal board cover ③ must be tightened to the specified tightening torque to prevent ingress of gas.

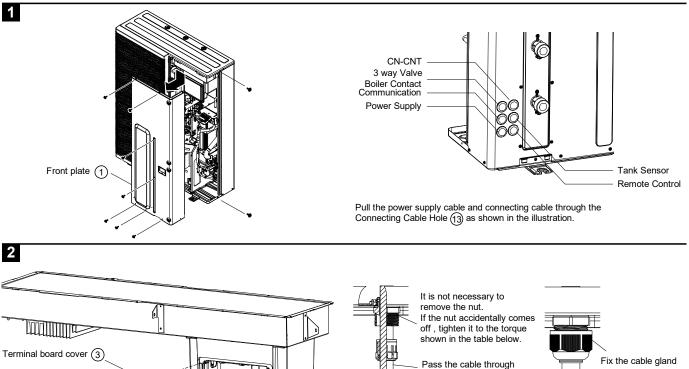

Terminal board cover 3				
0	0			3-phase RCCB/ ELCB (4)
0	- 0			Optional terminal board 5
Tightening torque : 157 ~ 196 cN•m (16 ~ 20 kgf•cm)	Cable gland B	Cable gland C	Cable gland A	Cable gland cap

	Cable gland	Nut
Cable gland	1.8 ~ 2.5 N•m	2.2 ~ 3.0 N•m
A	(18.4 ~ 25.5 kgf•cm)	(22.4 ~ 30.6 kgf•cm)
Cable gland	1.2 ~ 1.8 N•m	1.5 ~ 2.2 N•m
B, C	(12.2 ~ 18.4 kgf•cm)	(15.3 ~ 22.4 kgf•cm)


the cable gland.

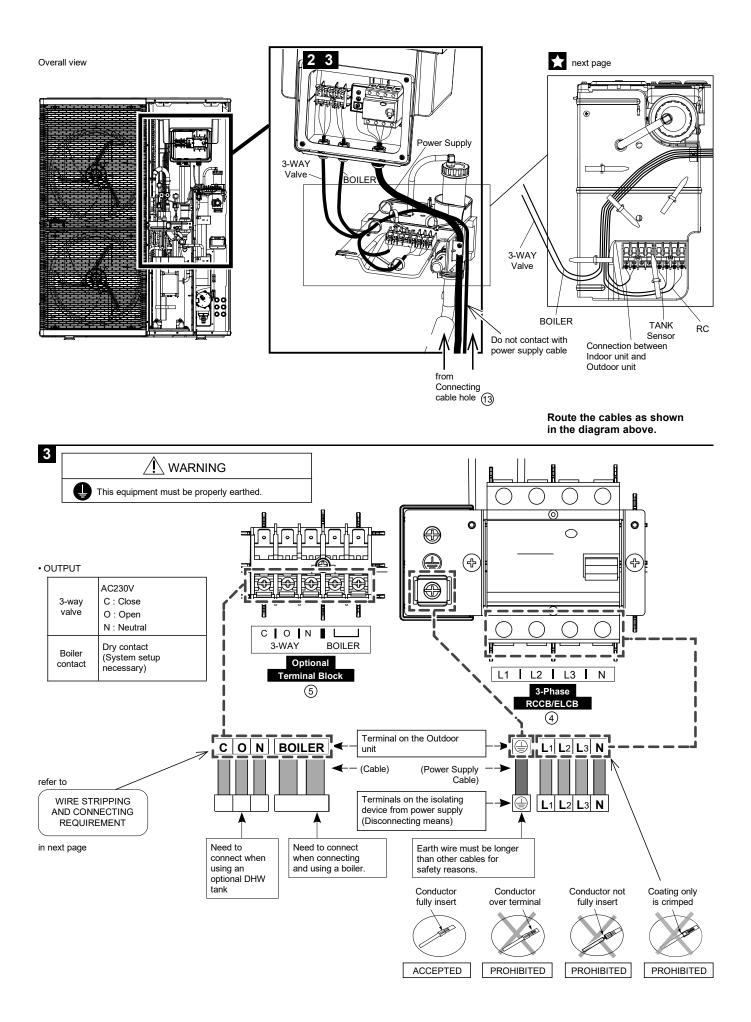


# $\star$

# 12.4.6.2 Connection Between Indoor Unit and Outdoor Unit


When outdoor unit is used alone, leave the short-circuit wires "C2" and "C3" attached as shown in the diagram below.

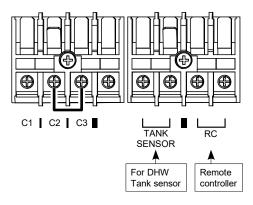

When connecting to an indoor unit, remove the short-circuit wires "C2" and "C3" and connect as shown in the diagram below.

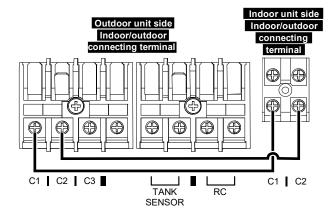

## 12.4.6.3 Wire Stripping and Connecting Requirement

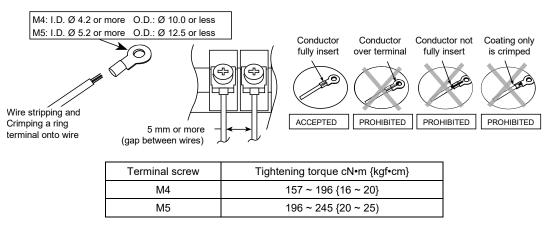

## 12.4.6.4 Connection Requirement

#### For model WH-WXG09ME8, WH-WXG12ME8

- The equipment's Power Supply complies with IEC/EN 61000-3-2.
- The equipment's Power Supply complies with IEC/EN 61000-3-3 and can be connected to current supply network.

#### For model WH-WXG16ME8

- The equipment's Power Supply complies with IEC/EN 61000-3-12.
- The equipment's Power Supply complies with IEC/EN 61000-3-3 and can be connected to current supply network.


## 12.4.7 Install Remote Controller

Remote controller is an optional item.
 Be sure to purchase it if the outdoor unit is used alone.
 If you have purchased an indoor unit, it is included.
 When relocating the remote controller, install in accordance with its Installation Manual.

## 12.4.7.1 Installation Location

- When using as Room Thermostat, install at the height of 1 to 1.5 m from the floor (Location where average room temperature can be detected).
- Install vertically against the wall.
- Avoid the following locations for installation.
  - 1. By the window, etc. where is exposed to direct sunlight or direct air
  - 2. In the shadow or backside of objects deviated from the room airflow
  - 3. Location where condensation occurs (Remote Controller is not moisture proof or drip proof)
  - 4. Location near heat source
  - 5. Uneven surface
  - 6. Outdoors
- Keep distance of 1 m or more from the TV, radio and PC. (Cause of fuzzy image or noise)


# 12.4.7.2 Remote Controller Wiring (If the Outdoor Unit is Used Alone)

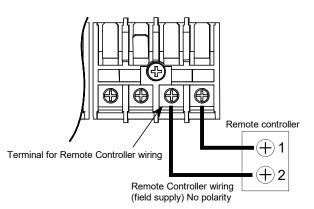


- Remote Controller cable shall be (2 × min 0.3 mm<sup>2</sup>) of double insulation PVC-sheathed or rubber sheathed cable. Total cable length shall be 50 m or less.
- (UV protection should be provided for the portion exposed to the outdoors)
- Be careful not to connect cables to other terminals of Outdoor Unit (e.g. power source wiring terminal). Malfunction may occur.
- Do not bundle together with the power source wiring or store in the same metal tube. Operation error may occur.
- When using the 2nd Remote Controller (optional), connect it to the terminal by tightening it together.

# 12.4.8 Network Adaptor Installation


1. Insert a flat head screwdriver into the slot on the top of the adaptor and remove the cover. Connect the CN-CNT cable to the connector inside the adaptor.

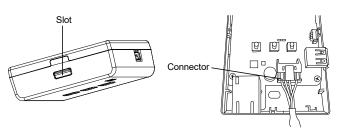

2. Pull the CN-CNT cable through the hole at the bottom of the adapter and reattach the cover.

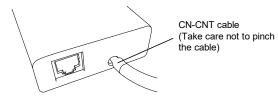

3. Connect the CN-CNT cable to the CN-CNT connector on the outdoor unit.

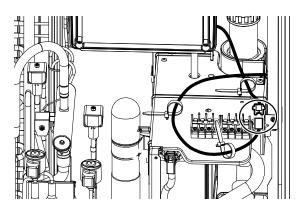

For details, refer to the instructions supplied with the network adapter. For installation location, refer to "Installation location" in


#### 7 INSTALL REMOTE CONTROLLER

# 12.4.9 Piping Insulation

 Carry out insulation of pipe connections according to "Space Cooling/Heating Pipework" in
 PIPINGINSTALLATION. Wrap the pipes endto-end with insulation to prevent condensation.

# 12.4.10 Charging the Water

- Make sure all the piping installations are properly done before carrying out the steps below.
- Start filling water to the Space Heating /Cooling circuit via Zone 1 Water inlet (a) (with pressure more than 1 bar (0.1MPa))
- 2. Stop filling water if the free water flow through Drain pipe of Pressure Relief Valve 12. (Check the Outdoor Unit)
- 3. Turn ON the Outdoor Unit.
- Remote control menu → Installer setup → Service setup → Pump maximum speed → Turn on the pump.
- 5. Make sure Water Pump  $\bigcirc$  is running.
- 6. Check and make sure no water leaking at the tube connecting points.

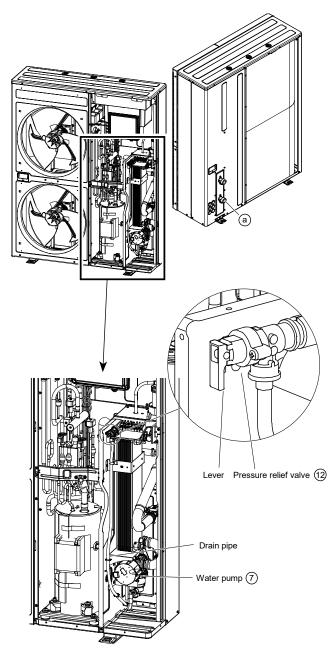

# 12.4.11 Reconfirmation

#### See formula below for capacity:

$$V = \frac{\epsilon \times Vo}{1 - \frac{98 + P_1}{98 + P_2}}$$

- V : Required gas amount <expansion vessel volume: L>
- Vo : System total water volume <L>
- $\epsilon$ : Water expansion rate 5 x 80°C = 0.0219
- P1 : Expansion tank P1 = 100 kPa charging pressure
- P2 : Maximum system P2 = 400 kPa pressure

O It is recommended to calculate the required volume of vessel with a margin of approximately 10%.

#### Water expansion rate table

Water temperature (°C)	Water expansion rate ε
10	0.0003
20	0.0019
30	0.0044
40	0.0078
50	0.0121
60	0.0171
70	0.0228
80	0.0291
90	0.0360

When an indoor unit is introduced and it is installed more than 7m lower than the outdoor unit

Increase the initial pressure in the expansion tank as per the calculations below.

**Pg= (H\*10+30) kPa** Pg : Initial pressure of expansion tank (kPa)

H : Difference in elevation (m)

# 12.4.11.5 Check RCCB/ELCB

- Ensure the RCCB/ELCB is set to "ON" condition before checking RCCB/ELCB.
- Turn on the power supply to the outdoor unit. This testing can only be done when power is supplied to the outdoor unit.

#### 

Be careful not to touch parts other than the TEST button of RCCB/ELCB when the power is supplied to Outdoor Unit. Else, electrical shock may happen. Before obtaining access to terminals, all supply circuits must be disconnected.

- Press the "TEST" button on the RCCB/ELCB. The lever would turn down if it functions normal.
- Contact authorized dealer if the RCCB/ELCB malfunction.
- If the RCCB/ELCB operates correctly, set the lever to 'ON' again after the test.


Be sure to switch off all power supply before performing each of the below checks.

## 12.4.11.1 Check Water Pressure

\* (0.50 bar = 0.05 MPa)

Water pressure should not be lower than 0.5 bar. (Check the water pressure by the remote controller) If necessary, add water into Space Heating /Cooling pipes (through the Zone 1 water inlet (a)).



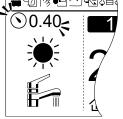

#### 12.4.11.2 Check Pressure Relief Valve

- 1. Pull the lever in the horizontal direction and confirm that the pressure relief valve works properly.
- Release the lever when water comes out of the drain pipe of the pressure relief valve. (While the air continues to come out of the drain pipe, keep raising the lever to completely discharge the air)
- 3. Confirm that the water from the drain pipe stops.
- 4. If water is leaking, pull the lever several times and return it to make sure the water stops.
- 5. If water keeps coming out of the drain, drain water. Turn off the system and contact your local authorized dealer.

# 12.4.11.3 Check Air Accumulation

- Open the air vent plugs on the heating panel, fan convector, etc., and remove the air accumulated in the equipment and piping.
- If the outdoor unit and the indoor unit are installed on different floors, open the air vent plug on the water plug of the outdoor unit and the air vent plug on the heater bottle inside the indoor unit to remove the air.

(Be careful, water will come out)

# 12.4.11.4 Expansion Vessel Volume and Set Pressure

- This outdoor unit does not have a built-in expansion tank.
- Capacity of expansion vessel should be calculated using the formula below:
- Install an expansion vessel (set pressure: 1 bar) to the circulation circuit.

# 12.4.12 Install Discharge Grille


1 Install the front plate (1)

1

2

- 2 Remove the 4 screws securing the cabinet front plate ①.
- 3 Insert the 4 claws of the discharge grille (right side) 7 and 8 , and tighten the 4 screws.

# Front plate 1

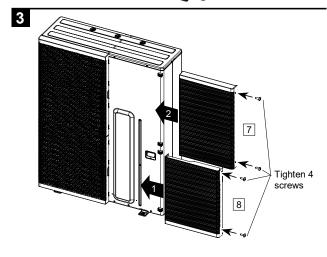

# 12.4.13 Test Run

- 1. Before test run, make sure below items have been checked:
  - a) Pipework are properly done.
  - b) Electric cable connecting work are properly done.
  - c) The Space Heating/Cooling circuit is filled up with water and trapped air is released.
- Switch ON the power supply of the Outdoor Unit. Set the Outdoor Unit RCCB /ELCB to "ON" condition. Then, please refer to the Operation Instruction for operation of Remote Controller.

#### Note:

During winter, turn on the power supply and standby the unit for at least 15 minutes before test run. Allow sufficient time to warm up refrigerant and prevent wrong error code judgement.

- For normal operation, the water pressure reading should be in between 0.5 bar and 4 bar (0.05 MPa and 0.4 MPa). If necessary, adjust the speed of the water pump (7) accordingly to obtain normal water pressure operating range. If adjusting the speed of the water pump (7) does not solve the problem, contact a local authorized dealer.
- After test run, please clean the magnetic water filter (8). Reinstall it after the cleaning is finished. (Refer to 14 MAINTENANCE)

# 12.4.13.1 Check Water Flow of Water Circuit

Select Installer setup  $\rightarrow$  Service setup  $\rightarrow$  Pump maximum speed  $\rightarrow$  Air purge.

Confirm the rated flow rate has been reached. If don't reach, change max duty or install the extra pump.

\*Water flow can be check in Service setup (Pump maximum speed)

[Heating operation at low water temperature with lower water flow may trigger "H75" during defrost process.]

\*If there is no flow or H62 is displayed, stop operating the pump and release the air. (See "CHECK AIR ACCUMULATION" in 11 **RECONFIRMATION**)

# 12.4.14 Maintenance


 In order to ensure safety and optimal performance of the Outdoor Unit, seasonal inspections, functional check of RCCB/ELCB, field wiring and piping have to be carried out at regular intervals. This maintenance and scheduled inspection should be carried out by authorized dealer.

#### 12.4.14.1 Maintenance for Magnetic Water Filter (8)

- 1. Turn OFF the power supply.
- 2. Place a container below Magnetic Water Filter (8).
- 3. Turn to remove the Magnet Bar at bottom of Magnetic Water Filter (8).
- 4. Remove the Cap of Discharge Port with Allen key (8mm).
- Open the Service Valve with Allen key (4mm) to release the dirty water from the Discharge Port into a container. Close the service valve when the container is full to avoid spillage in the outdoor unit. Dispose the dirty water.
- 6. Reinstall the Cap of Discharge Port and Magnet Bar.
- 7. Re-charge the water to Space Heating / Cooling circuit if necessary.

(For details, refer to 10 CHARGING THE WATER)

8. Turn ON the power supply.

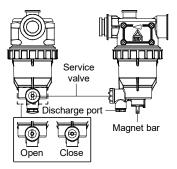

# 

Do not clean the outdoor unit with hydrocarbon solvents when Outdoor Unit needs to be cleaned during installation or servicing.

# 12.5 Appendix


# 12.5.1 Variation of System

This section introduces variation of various systems using Air-To-Water Heatpump and actual setting method. (NOTE) : This model does not have a built-in expansion vessel to prevent the pressure in the water circuit from rising in the event of temperature rise. Be sure to purchase in the market and install it.

# 12.5.1.1 Introduce Applications Related to Temperature Setting


# 12.5.1.1.1 Temperature Setting Variation for Heating

1. Remote Controller

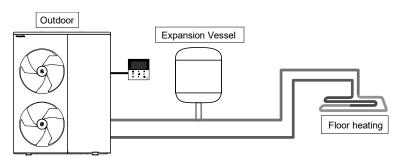

Connect floor heating or radiator directly to the Outdoor Unit. Install remote controller on the wall of the room. This is the basic form of the simplest system.


#### 2. Room Thermostat

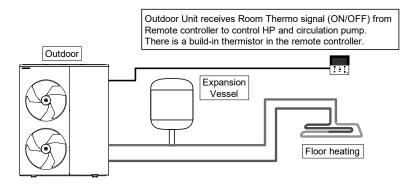

Connect floor heating or radiator directly to the Outdoor Unit. Install the remote controller in the room where floor heating is installed. This is an application that uses remote controller as Room Thermostat.

# 12.5.1.2 Examples of Installations

1. DHW (Domestic Hot Water) Tank connection

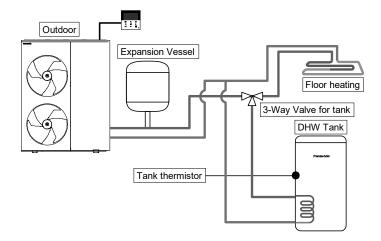

Water temperature

Setting of remote controller

Zone & Sensor:

Installer setup System setup

Setting of remote controller	
Installer setup System setup	
Zone & Sensor	


Room Thermostat

Setting of remote controller	

Installer setup System setup

> Tank connection: Yes

#### 2. Boiler connection

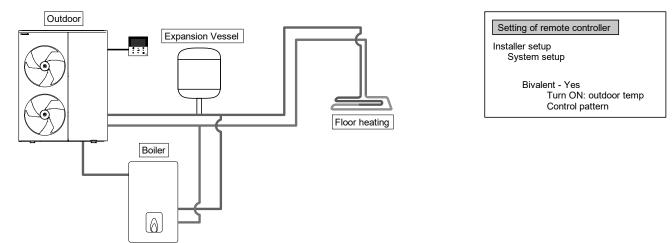

This is an application that connects the boiler to the Outdoor Unit, to compensate for insufficient capacity by operate boiler when outdoor temperature drops & heat pump capacity is insufficient.

Boiler is connected parallel with heat pump and used as heating circuit.

Besides that, an application that connects to the DHW tank's circuit to heat up tank 's hot water is also possible. Boiler output can be control by either SG ready input from Control Module unit or Auto control by 3 modes selection pattern.

(Operation setting of boiler shall be responsible by installer.)

Depending on the settings of the boiler, it is recommended to install buffer tank as temperature of circulating water may get higher. (It must connect to buffer tank especially when select Advanced Parallel setting) However, buffer tank connection requires Control Module unit.

Note: Buffer tank thermistor must be connected to Control Module unit PCB.

Panasonic is NOT responsible for incorrect or unsafe situation of the boiler system.

CAUTION Make sure the boiler and its integration in the system complies with applicable legislation. Make sure the return water temperature from the heating circuit to the Outdoor Unit does NOT exceed 70°C. Boiler is turned off by safety control when the water temperature of the heating circuit exceed 85°C.

If you wish to use optional features other than connecting DHW tank or boiler, purchase an optional indoor unit or Control Module unit.

Functions that become available by purchasing an indoor unit, etc. include:


Buffer tank connection

- 2-zone control
- Solar connection
- SG Ready
- Demand control
   and others
- Optional PCB is required


# 12.5.2 System Installation

#### 12.5.2.1 Remote Controller Outline


The LCD display as shown in this manual are for instructional purpose only, and may differ from the actual unit.

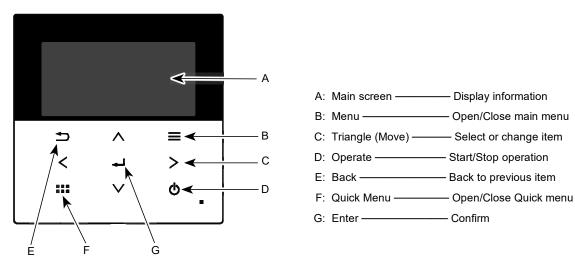

LCD Display (Actual - Dark background with white icons)

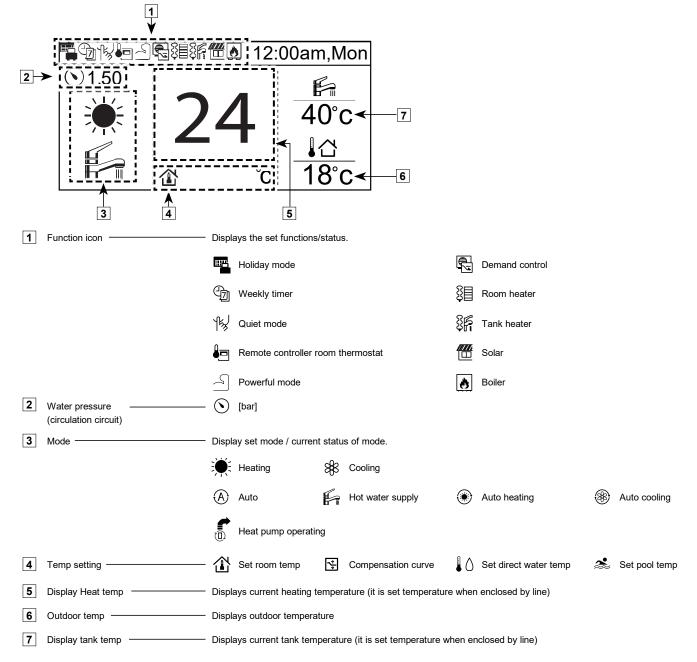


#### First time of power ON (Start of installation)

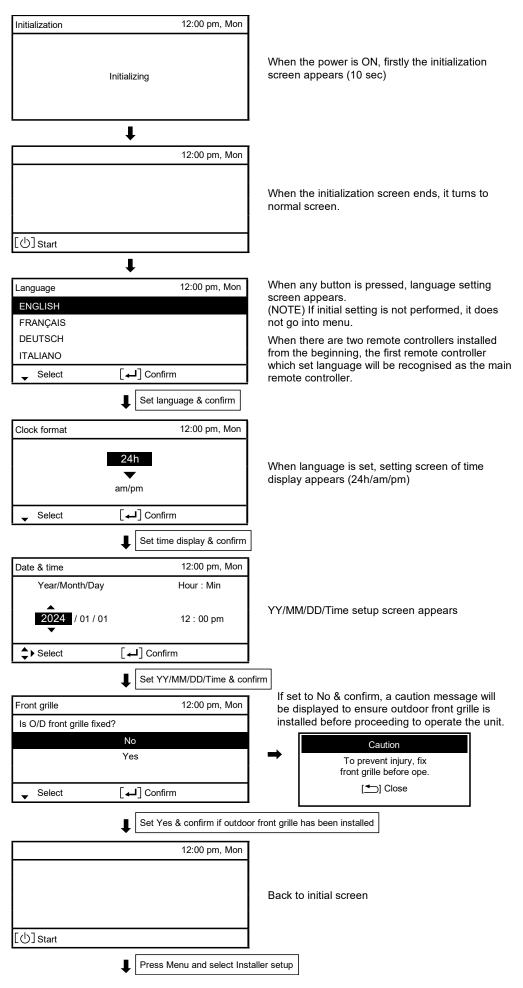


System check Personal setup Service contact Installer setup Select [+] Confirm		
Personal setup Service contact Installer setup Select [+] Confirm	Main menu	12:00 pm, Mon
Service contact Installer setup Select [+] Confirm	System check	
Installer setup Select [+] Confirm	Personal setup	
Select [+] Confirm	Service contact	
	Installer setup	
Confirm to go into Installe	Select	[←] Confirm
▼		Confirm to go into Installer s

# 12.5.3 Setup



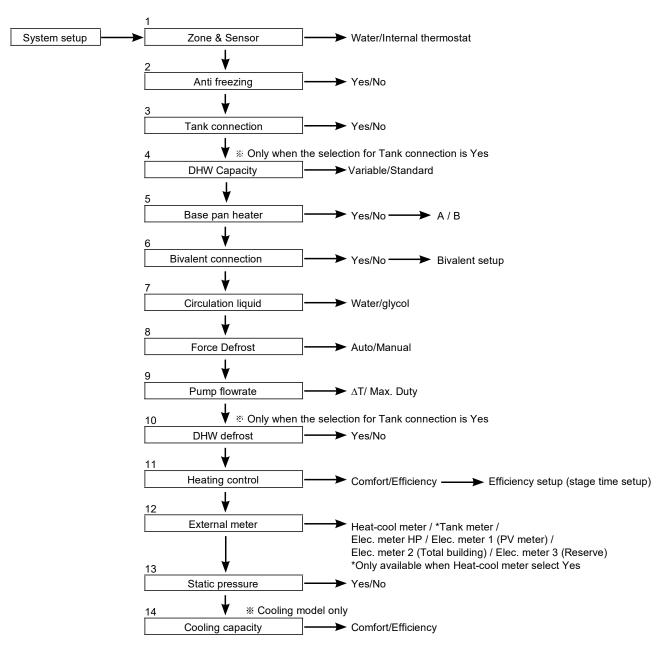

The above description is for outdoor unit alone case.
For indoor units, please refer to the installation manual supplied with the indoor unit.

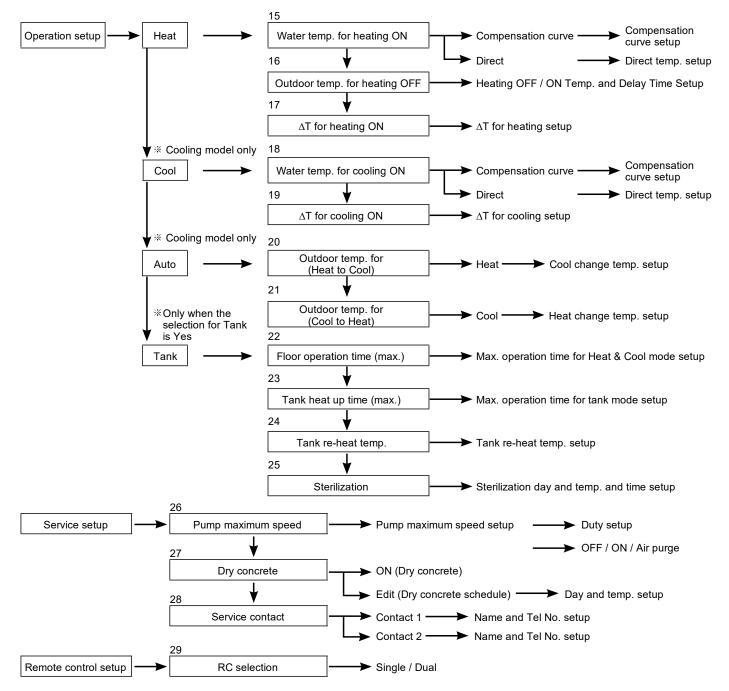

X The above description is for outdoor unit alone case.
For indoor units, please refer to the installation manual supplied with the indoor unit.

# 12.5.3.2 System Setup

1. Zone & Sensor Initial setting: Water temp.	System setup	12:00am,Mon
	Zone & Sensor	
Select sensor of room temperature control from the following 2 items:	Anti freezing	
<ol> <li>Water temperature (circulation water temperature)</li> <li>Room thermostat (Internal)</li> </ol>	Tank connection	
2) Room thermostat (internal)	DHW capacity	
	✓ Select	[←] Confirm
2. Anti freezing Initial setting: Yes	System setup	12:00am,Mon
	Zone & Sensor	
Dperate anti-freezing of water circulation circuit. f select "Yes", when the water temperature is reaching its freezing temperature, the	Anti freezing	
sirculation pump will start up. If the water temperature does not reach the pump stop	Tank connection	
temperature, heat pump will be activated.	DHW capacity	
(NOTE) If set to "No", when the water temperature is reaching its freezing	Select	[←] Confirm
cause malfunction.		
cause malfunction.		
3. Tank connection     Initial setting: No	System setup	12:00am,Mon
3. Tank connection Initial setting: No	System setup Zone & Sensor	12:00am,Mon
3. Tank connection Initial setting: No Select whether a hot water storage tank is connected or not.		12:00am,Mon
3. Tank connection Initial setting: No Select whether a hot water storage tank is connected or not. If set to "Yes", the water heating function is set to be used.	Zone & Sensor	12:00am,Mon
3. Tank connection Initial setting: No Select whether a hot water storage tank is connected or not. If set to "Yes", the water heating function is set to be used.	Zone & Sensor Anti freezing	12:00am,Mon
3. Tank connection Initial setting: No Select whether a hot water storage tank is connected or not. If set to "Yes", the water heating function is set to be used.	Zone & Sensor Anti freezing Tank connection	12:00am,Mon
	Zone & Sensor Anti freezing Tank connection DHW capacity	12:00am,Mon [ <b>↓]</b> Confirm
3. Tank connection Initial setting: No Select whether a hot water storage tank is connected or not. If set to "Yes", the water heating function is set to be used.	Zone & Sensor Anti freezing Tank connection DHW capacity	
3. Tank connection Initial setting: No Select whether a hot water storage tank is connected or not. If set to "Yes", the water heating function is set to be used.	Zone & Sensor Anti freezing Tank connection DHW capacity	
3. Tank connection       Initial setting: No         Select whether a hot water storage tank is connected or not.       f set to "Yes", the water heating function is set to be used.         The tank water temperature can be set from the main screen.       The tank water temperature can be set from the main screen.         4. DHW capacity       Initial setting: Variable	Zone & Sensor Anti freezing Tank connection DHW capacity Select	[ <b>↓</b> ] Confirm
<b>3. Tank connection</b> Initial setting: No         Select whether a hot water storage tank is connected or not.         If set to "Yes", the water heating function is set to be used.         The tank water temperature can be set from the main screen.	Zone & Sensor Anti freezing Tank connection DHW capacity Select	[ <b>←J</b> ] Confirm

If standard DHW capacity setting is selected, heat pump runs with heating rated capacity at tank heat up operation.


\* Only when "Yes" is selected for tank connection

5. Base pan heater Initial setting: No	System setup 12:00am,Mon
	Anti freezing
Select whether Base pan heater is installed or not. If set to "Yes", select to use either heater A or B.	Tank connection
in set to Tes, select to use entrier heater A of b.	DHW capacity
A: Turn on Heater when heating with defrost operation only	Base pan heater
B: Turn on Heater during heating operation when outside temperature is below 5 $^{\circ}\mathrm{C}$ .	Select [4] Confirm

Select

[ ] Confirm

% The above description is for outdoor unit alone case.

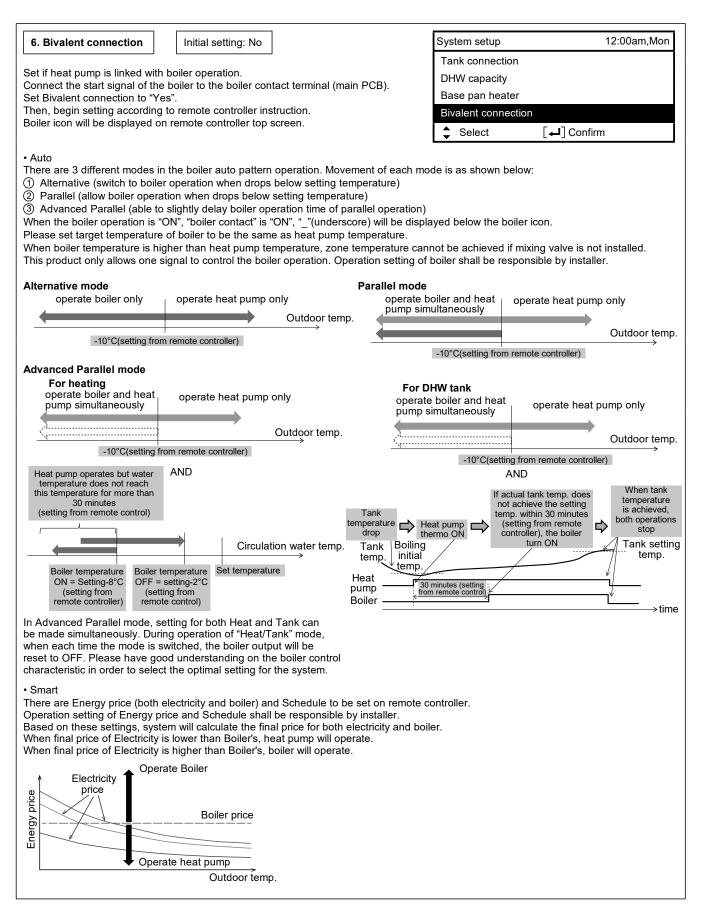

X The above description is for outdoor unit alone case.

7. Circulation Liquid	Initial setting: Wate	er	System setup	12:00am,Mon
			DHW capacity	
Set circulation of heating	water.		Base pan heater	
There are 2 types of setti	ngs: water and glycol.		Bivalent connection	
(NOTE) Places act alva	ol when using anti-freeze	liquid	Circulation Liquid	
, , ,	rror if setting is wrong.		Select	[←] Confirm
[				
8. Force Defrost	Initial setting: Manual		System setup	12:00am,Mon
			Base pan heater	
Under manual code, user	can turn on force defrost	through quick menu.	Bivalent connection	
		t operation once if heat pump	Circulation Liquid	
		ation at low ambient condition. force defrost through quick	Force Defrost	
menu)		loree denost through quick	Select	[←] Confirm
9. Pump flowrate	Initial setting: $\Delta T$		System setup	12:00am,Mon
	inniai ootiingi 11		Bivalent connection	
		np duty to use different water	Circulation Liquid	
inlet and outlet based on in operation setup menu		ting ON and $^{*}\Delta T$ for cooling ON	Force Defrost	
in operation setup menu	during indoor operation.		Pump flowrate	
		t will set the pump duty at *Pump	Select	[ <b>↓]</b> Confirm
maximum speed in the se	ervice setup menu during	room side operation.		
*1				
				40:00-m Mar
10. DHW Defrost	Initial setting: Yes		System setup	12:00am,Mon
When DHW defrost set to	"YES" hot water of dom	estic hot water tank will be used	Circulation Liquid	
during defrost cycle.			Force Defrost	
	"NO", hot water of floor h	neating circuit will be used during	Pump flowrate	
defrost cycle.			DHW Defrost	
			Select	[←] Confirm
11. Heating control	Initial setting: Comfo	ort	System setup	12:00am,Mon
<u> </u>	<u> </u>		Force Defrost	
	select for compressor freq	uency control: "Comfort" or	Pump flowrate	
"Efficiency". When set to Comfort mod	le, the compressor will rur	n at the zone limit maximum	DHW Defrost	
frequency to reach the se	et temperature faster.		Heating control	
When set to Efficiency me stage for energy saving.	ode, the compressor will r	un at part load frequency at initial	Select	[₊] Confirm
	cted, the time setting will t	ransition to 1st, 2nd, and 3rd stage	Ť	-
Increasing the time will sl		· · · · ·		

\*1 Only when the selection for Tank connection is Yes
※ The above description is for outdoor unit alone case. For indoor units, please refer to the installation manual supplied with the indoor unit.

12. External meter	Initial setting: [Heat-cool meter : No ]	System setup 12:00am,Mon
	[ Tank meter : No ] *only available when Heat-cool meter select Yes	Pump flowrate
	[ Elec. meter HP : No ]	DHW Defrost
	[Elec. meter 1 (PV meter) : No ]	Heating control
	[ Elec. meter 2 (Total building) : No ] [ Elec. meter 3 (Reserve) : No ]	External meter
		Select [+] Confirm

There are two systems for generation meter connection: single generation meter system

(Heat-cool meter) or two generation meter system (Heat-cool meter and Tank meter)

Both systems can provide all generation data of heating, cooling and DHW directly from external meter.

If Heat-cool meter is set to "Yes", it will read from external meter for heat pump's energy generation data during heating, cooling and DHW operation '1.

If Heat-cool meter is set to "No", it will base on unit's calculation for heat pump's energy generation data during heating, cooling and DHW operation.

If Heat-cool meter is set to "Yes", it will read from external meter for heat pump's energy generation data during heating, cooling and DHW operation ".

If Elec. meter HP is set to "Yes", it will read from external meter for heat pump's energy consumption data.

If Elec. meter HP is set to "No", it will base on unit's calculation for heat pump's energy consumption data.

If Elec. meter 1 (PV meter) is set to "Yes", it will read from external meter for energy generation data of solar system and display it on Cloud system.

If Elec. meter 2 (Building) is set to "Yes", it will read from external meter for energy consumption data of the building and display it on Cloud system.

If Elec. meter 3 (Reserve) is set to "Yes", it will read from external meter for energy consumption data obtained from reserved electricity meter and display it on Cloud system.

<sup>\*1</sup> Set Heat-cool meter to Yes and set Tank meter to No when 1 generation meter system is installed.

Set Heat-cool meter to Yes and set Tank meter to Yes when 2 generation meter system is installed.

Remarks: Elec. meter HP refers to the electricity meter that measures Heat Pump unit's consumption.

Elec. meter 1 / 2 / 3 refers to the Electricity meter No. 1 / No. 2 / No. 3.


System setup 12:00am,Mo	n
DHW Defrost	Γ
Heating control	
External meter	
Static pressure	
Select [+] Confirm	
	DHW Defrost Heating control External meter Static pressure

14. Cooling Capacity Initial setting: Efficiency	System setup 12:00am,Mon
	Heating control
Select the cooling capacity. If set to "Efficiency", the unit performs cooling operation efficiently at rated capacity.	External meter
If set to "Comfort", the cooling operation is performed at maximum capacity.	Static pressure
	Cooling capacity
	♣ Select [↓] Confirm

X The above description is for outdoor unit alone case.

# 12.5.3.3 Operation Setup

#### Heat

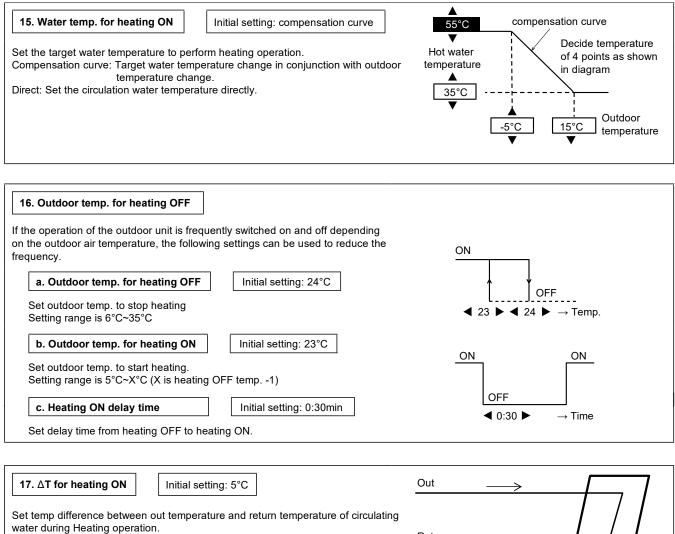


When the temperature gap is enlarged, it is energy saving but less comfort. When the gap gets smaller, energy saving effect gets worse but it is more comfortable. Setting range is  $1^{\circ}C \sim 15^{\circ}C$ 

 Return

 Out — Return = 1°C ~ 15°C

% The above description is for outdoor unit alone case.

#### **Cool** X Cooling model only

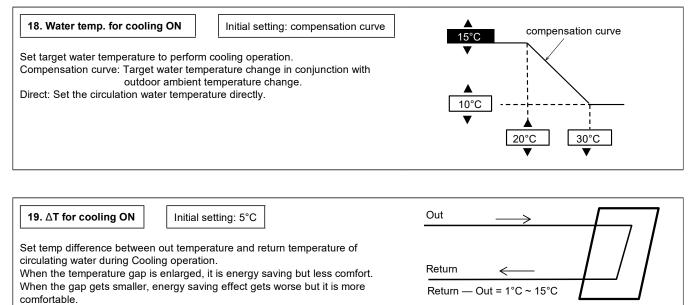

Setting range is 1°C ~ 15°C

#### Auto X Cooling model only

20. Outdoor temp. for (Heat to Cool) Initial setting: 15°C	Heat Outdoor temp. rising
Set outdoor temp that switches from Heating to Cooling by Auto setting. Setting range is 11°C ~ 25°C	Cool
Timing of judgement is every 1 hour	4 15°C ►

21. Outdoor temp. for (Cool to Heat) Initial setting: 10°C	Heat Outdoor temp. dropping
Set outdoor temp that switches from Cooling to Heating by Auto setting. Setting range is $5^{\circ}$ C ~ 14°C	Cool
Timing of judgement is every 1 hour	◀ 10°C ►

% The above description is for outdoor unit alone case.


## Tank $\$ Only when the selection for Tank connection is Yes


22. Floor operation time (max.)       Initial setting: 8h         Set the max. operating hours of heating.	Heat
When max. operation time is shortened, it can boil the tank more frequently.	30min ~ 10h
It is a function for Heating + Tank operation.	Tank
23. Tank heat up time (max.) Initial setting: 1h	Heat
Set the max. boiling hours of tank. When the max. boiling hours are shortened, it immediately returns to Heating operation, but it may not fully boil the tank.	
	Tank
	5min ~ 4h
<b>24. Tank re-heat temp.</b> Initial setting: -8°C	
Set the temperature to re-boil the tank water.	
Setting range is -12°C ~ -2°C	-12°C ~ -2°C
<b>25. Sterilization</b> Initial setting: 65°C 10min.	
Set timer to perform sterilization.	
① Set operating day & time. (Weekly timer format)	
<ul> <li>Sterilization temperature (* 55 ~65°C)</li> <li>Operation time (Time to the temperature)</li> </ul>	
<ul> <li>③ Operation time (Time to run sterilization when it reached setting temperature.</li> <li>(5 ~ 60 minutes)</li> </ul>	$\stackrel{\prime}{\longrightarrow}$
<ul> <li>* When the outdoor air temperature is below -15°C</li> <li>The Tank temperature may only rise to about 55°C.</li> <li>(Turn on the external heater to perform sterilization. Need Indoor unit).</li> <li>Sterilization temperature varies depending on the model.</li> </ul>	
The use/non-use of the sterilization mode must be set.	

% The above description is for outdoor unit alone case.

# 12.5.3.4 Service Setup

26. Pump maximum speed	Initial setting: Depend on model	Service setup		12:00am,Mon
		Flow rate	Max. Duty	Operation
Normally setting is not necessary. Please adjust when needed to reduce the pump sound, etc. Besides that, the unit has Air Purge function.		34.4 L/min	0xCE	Air Purge
When the Pump flow setting is Max. Duty, this duty setting is the duty of fixed pump that runs during room-side operation.		▲ Select		

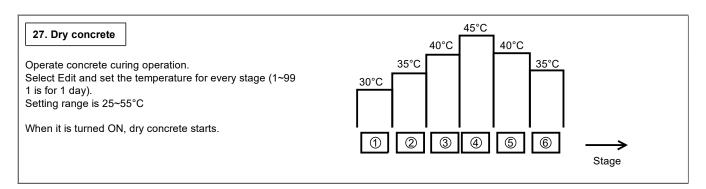


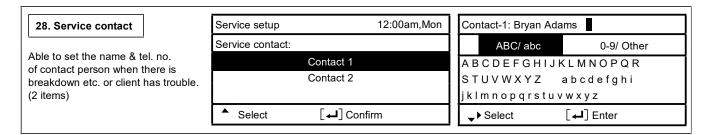

# 12.5.3.5 Remote Control Setup

29. RC selection Initial setting : Single	RC selection	12:00am,Mon
Set to "Single" when only one remote controller is installed. Set to "Dual" when two remote controllers are installed.	Single Dual	
	➡ Select	[←] Confirm

% The above description is for outdoor unit alone case.

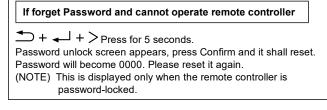

# 12.6.1 Maintenance Menu

S	etting method	of Maintenanc	e menu	]	
Ma	aintenance mer	าน	12:00a	im,Mon	1
Ac	tuator check				
Те	est mode				1
Se	ensor setup				
Re	eset password				
	, Select	[⊷] Con	firm		1
	) + + + >		conds.		_
1	(NOTE) As th not to	,	ction action or when op	i, please perating	e be careful each part (do
3	can be set wit (NOTE) Pleas It affe	(offset gap of c hin -3~3°C ran se use only whe ects temperatur ord (password r	ge) en sensor i re control.		

# 12.6.2 Custom Menu

S	etting method of Custom menu
Сι	ustom menu 12:00am,Mon
С	cool mode
R	leset energy monitor
R	Reset operation history
Α	nti-stick mode
	Select [+] Confirm
=	$+ \vee + <$ Press for 5 seconds.
<ol> <li>(1)</li> <li>(2)</li> <li>(3)</li> </ol>	<ul> <li>ms that can be set</li> <li>Cool mode (Set With/Without Cooling function) Default is without</li> <li>(NOTE) As with/without Cool mode may affect electricity application, please be careful and do not simply change it.</li> <li>In Cool mode, please be careful if piping is not insulated properly, dew may form on pipe and water may drip on the floor and damage the floor.</li> <li>Reset energy monitor (delete memory of Energy monitor)</li> <li>Please use this when moving house and handover the unit.</li> <li>Reset operation history (delete memory of operation history)</li> <li>Please use this when moving house and handover the unit.</li> </ul>
4	Anti-stick mode (select Anti-stick mode Enable/Disable) Default is Anti-stick mode /Enable Every Monday at 3:00 AM the actuator is activated periodically to prevent sticking of the operating parts. Select Disable if you wish to stop the part being activated periodically. Parts and other components that may not operate if Disable is selected may stick if not operated for a long period of time.

% The above description is for outdoor unit alone case.

# 13. Installation and Servicing Air-to-Water using R290



This symbol shows that this equipment uses a flammable refrigerant with safety A3 group per ISO 817. If the refrigerant is leaked, together with an external ignition source, there is a possibility of fire / explosion.

# 13.1 About R290 Refrigerant

Hydrocarbon is a class of organic chemical made up only with the element Carbon (C) and Hydrogen (H). R290 is the type of Hydrocarbon refrigerant which is environmentally good-natured and odorless refrigerant. Under Kigali Amendment to the Montreal Protocol, 80% reduction of greenhouse gas emission by next 30 years is required, and due to this requirement, further reduction in the emission of high greenhouse effect gas is required. Therefore, the conversion of air-conditioning refrigerant into one which has no greenhouse effect, even if it is dissipated into the atmosphere became our responsibility.

Nevertheless, in case of air-conditioning refrigerant, it would be the best if there is a refrigerant which has no impact on global warming but ensures good energy efficiency and performance, and is safe; however, there is no such refrigerant which satisfies all these conditions. As a result, we have been considering the practical usage, within the safety frame-work, of R290 refrigerant which has no effect of global warming but highly flammable.

# 13.2 Characteristics of R290 Refrigerant

#### 1. Chemical Characteristics

R290 (Propane) is refrigerant grade propane, which is natural, non toxic, and chemically stable compound formed by hydrogen.

R290 is one of natural refrigerant, therefore it has almost zero greenhouse gas effect. R-290 is a single-component hydrocarbon substance and the most hydrocarbon properties as it is highly flammable.

	R290	R32
Chemical Formula	C3H8	CH2F2
Composition	Single Composition	Single Composition
Boiling point (°C)	-42.1	-51.7
50°C vapor pressure (MPa)	1.71	3.14
Ozone Depletion Potential	0	0
Global Warming Potential (GWP)	3	675
Inflammability	Highly Inflammable (A3)	Slightly Inflammable (A2L)
Toxicity	None	None

Chemical Characteristic Table of R290 and R32

2. Characteristic of Pressure

As shown in Table 2, R290 has half the vapor pressure of R32 at the same refrigerant temperature. As such, it can be installed and maintained with the same high-pressure tools and components as the R32.

Table 2. Saturated vapor pressure comparison table

(Unit: MPaG)

Temperature (°C)	Refrigerant		
Temperature (°C)	R290	R32	
-20	0.14	0.30	
0	0.37	0.71	
20	0.74	1.37	
40	1.27	2.38	
60	2.03	3.84	
65	2.23	4.29	

Reference : Thermal properties table of Japan Society of Refrigerating and Air Conditioning Engineers (60, 65°C) NIST REFPROP V8.0 (-20 ~ 40°C)

#### 3. Flammable characteristic

As shown in below table, R290 is highly flammable and explosive when heated. The installation must be equipped with ATEX (Atmospheres Explosible) certified equipment and must always turn on the combustible gas detector during servicing and when entering the service area. Service must also be performed in a well-ventilated area, especially if the refrigerant system is being accessed.

#### 3.1 Safety class

		SAFETY	GROUP
	Higher Flammability	A3	B3
sing		A2	B2
Increasing Flammability	Lower Flammibility	A2L	B2L
ц На	No Flame Propagation	A1	B1
		Lower Toxicity	Higher Toxicity
	•	la ara a ain	

Increasing Toxicity


Refrigerant	Burning Speed cm/s
R32	6.7
R290	38.7

#### 3.2 Concentration control for R290

Because R290 is highly flammable, it can burn or explode if there is enough product concentrated in one space and the refrigerant comes in contact with an ignition source.

Control measurement;

Descriptions	Specifications
Lower flammability limit (LFL) [kg/m3]	0.038
Lower flammability limit (LFL) [%]	2.1
Practical limit (PL) [kg/m <sup>3</sup> ]	0.008
Density of vapour [kg/m³]	1.83

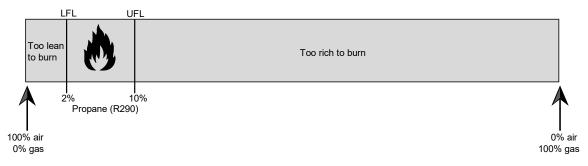

The concentration of R290 between the lower flammable limit (2%) and upper flammable limits (10%) is enough to ignite fire.

Note:

LFL – Lower flammable limit whereby the concentration of flammable gas, vapour or mist in the air below which an explosive gas atmosphere will not be formed.

UFL – Upper flammable limit whereby the concentration of flammable gas, vapour or mist in the air below which an explosive gas atmosphere will not be formed.

PL – Defined as concentration used for simplified calculation to determine the maximum acceptable amount of refrigerant in an occupied space (20% of LFL)

3.3 Material classification and Hazard statement

H280	Contain gas under pressure; may explode if heated
CGA-HG01	May cause frostbite

# 13.3 Refrigerant piping installation • Tools used in services

#### 13.3.1 Required Tools

R290 refrigerant air conditioners must use ATEX (Atmosphere Explosible) certified equipment. The common parts as R32 air conditioners for two-way valves and three-way valves (diameters of service ports); thus, they maintain commonality in the maintenance of the compressive strength, the size of pipe flaring, and the size of flare nuts as R32. However refrigerant pipe installation and services must use tools certified for highly flammable gas.

However, mixing of refrigerants is not allowed, so that you have to separate the cylinders for the recovery of refrigerants.

Tools used for installation • relocation • replacement of air conditioning units

Works	R290	R32
Connecting of refrigerant pipes	Not applicable for Monobloc	
Connecting of reingerant pipes	Not applicable for Monobloc	
Manifold gauge charging hose	HC Manifold gauge to avoid refrigerant contamination	R32 & R410A Common
Air purging	Vacuum pump complied with ATEX (Atmosphere Explosible)	Vacuum pump + Reducer / expander
Gas leakage test	Combustible gas detector	Detection liquid or soup water, HFC detector

For other installation, you can use general tools such as screw drivers (+, -), metal saws, long-nose pliers, hole core drills, linen tape, levels, temperature gauges, clamp meters, electric knives, nippers, pipe cutters, reamers or scrapers, spring benders, monkey wrenches, fixing wrenches, feeler gauges, hexagon wrenches (4 mm), testers, megohm testers, etc.

Tools used for services.

Works	R290	R32
Insertion of refrigerant	Digital scale for refrigerant charging, refrigera	nt cylinders, cylinder adopters and packing *a
Recovery of refrigerant	Refrigerant recovery devices, refrigerant cylinders, manifold gauges, charging hoses *b	

\*a. Use cylinder for each refrigerant, cylinder adopter and packing.

\*b. Use refrigerant recovery cylinder separately for each refrigerant (no mixture of refrigerant allowed).

# 13.3.2 Tools for R290

1. Manifold gauges

R32 gauge can be used for R290 pressure.

Each port of manifold has different shapes in order to prevent inserting wrong refrigerant. \*However, the port shape for R290 and R32 is the same; therefore, attention need to be paid not to insert wrong refrigerant.

Differences in high/low pressure gauges

	R290 (common R32)
High pressure gauges (red)	-0.1 ~ 5.3 MPa -76 cmHg ~ 53 kgf / cm²
Low pressure gauges (blue)	-0.1 ~ 3.8 MPa -76 cmHg ~ 38 kgf / cm²

Difference in manifold port sizes


	R290 (common R32)
Port sizes	1/2 UNF20

#### 2. Charging hoses

The material is changed to HC resistant, and the size of each manifold adopter is common, as the R32 port size of manifold gauge.

Further, some hoses are with anti-gas pressure backflow valves placed near the adopters. (hoses with the valves recommended)

Manifold gauges / Charging hoses

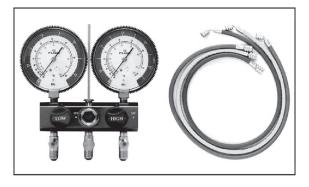

Differences in charging hoses

		R290 (common R32)
Pressure	Normal operation pressure	5.1 MPa (52 kgf / cm²)
Resistance	Burst pressure	27.4 MPa (280 kgf / cm²)
Material		HNBR rubber Internal nylon coating

3. Vacuum pump and isolator.

When using a vacuum pump, it is compulsory to use an ATEX certified vacuum pump.

When connecting service equipment (such as vacuum pumps) to a power source, the connection should be made in outside the Temporary Danger Zone. It is recommended to use an ATEX Isolator switch to facilitate a safe shutdown in the danger zone. It is necessary to set a solenoid valve in order to prevent backflow of vacuum pump oil into the charge hoses and use a vacuum pump with oil backflow prevention function.

If vacuum pump oil (mineral oil-based) mixes with R290, it may cause damage to the machine.

Vacuum pump



Isolator



#### 4. Leak Detector

HC refrigerant Electric gas leakage tester is used for R290. The usage of existing HFC detectors cannot be use as they can produce spark. We recommend to use detectors specifically designed for combustible gas.

Combustible gas leak detector



5. Digital scale for refrigerant charging R290 has lower pressure level and the evaporates speed is slow. Thus, the digital scale for refrigerant charging can be used in common with R32. The charging port for R32 is (1/2 UNF20), common with R290

Digital scale for refrigerant charging



#### 6. Refrigerant cylinders

Refrigerant cylinders for R290 are painted in other colors that might subject to change according to the international standards. R290 is a single refrigerant, so that both liquid and gas insertion are possible. Additional charging is also possible.

Refrigerant cylinders



7. Connection ports of refrigerant cylinders and packing

Charging ports which fit to the charging hose connection port size (1/2 UNF20) is needed. At the same time, the packing has to be of HC resistant materials.

Connection ports and packing



#### 8. Tools used for refrigerant piping installations and services

	Common tools	R290	R32
1.	Pipe cutters, reamers or scrapers	Not applicable for Monobloc	Not applicable for Monobloc
2.	Flare tools (clutch type)	Not applicable for Monobloc	Not applicable for Monobloc
3.	Torque wrench (1/4, 3/8)	Not applicable for Monobloc	Not applicable for Monobloc
4.	Torque wrench (1/2, 5/8)	Not applicable for Monobloc	Not applicable for Monobloc
5.	Manifold gauges, charging hose	0	0
6.	Vacuum pump, vacuum pump isolator *2	Connection 5/16 [ATEX certified] *1	
7.	Electric gas leakage detectors	Combustible gas detector	HFC detector
8.	Digital scale for refrigerant charging	0	0
9.	Recovery devices (connection port 5/16) *2	ATEX certified	HFC recovery devices
10.	Refrigerant cylinder color	Other (colors that might subject to change according to the international standards)	Other (colors that might subject to change according to the international standards)
11.	1. Refrigerant cylinder connection port and packing x o		0
12.	Allen wrench (4mm) Electric knives x o		0
*1	Those testers only for HC only cannot be for common use with HFC		
*2	Recovery devices which are certified by Atmosphere Explosible	e (ATEX)	
<ul> <li>[Knowledge for the common usage of tools for R290 &amp; R32]</li> <li>R290 and R32 machines use different compressor oils.</li> <li>If unregulated compressor oil gets mixed into, it may cause damage to the machine function.</li> </ul>			
<ul> <li>[Inserting wrong refrigerant]</li> <li>It may cause "not cooling" and "not heating" customer claims because each component (expansion valve, compressor, PCB) of the refrigerant cycle is specially adjusted for R290.</li> <li>At the same time, it is not subject to product warranty, if wrong refrigerant was inserted into system.</li> </ul>			


Reference:-

- ASHRAE Standard 34-2016
- ISO Standard ISO 5149
- ISO 817:2014

# 13.4 New installation, and Repairing of Refrigerant Cycle System Procedures

Personnels working on A3 systems may be subject to applicable occupational hazard or regulations required by local or national law.


For safe servicing and disposal, technicians must have detailed knowledge and skills in handling of flammable refrigerants, prevention of refrigerant leaks, leak detection, personal protective equipment, cylinder handling and loading. A dry powder or  $CO_2$  fire extinguisher must be available at the place of service.

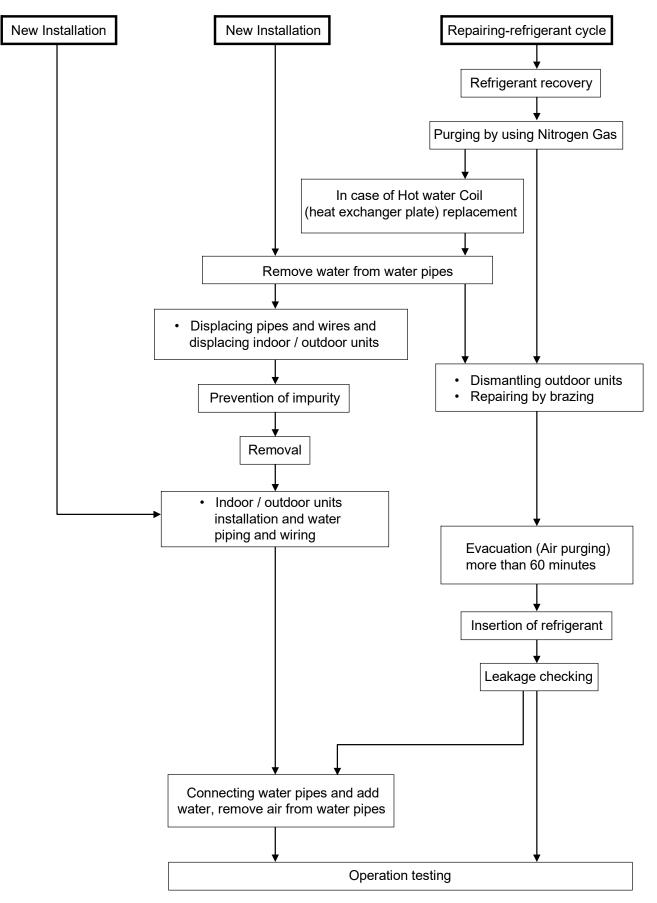

# 13.5 Servicing


# 13.5.1 Recover R290 refrigerant with refrigerant recovery machine CAUTION!

- Always turn ON the combustible leak detector.
- Keep all ignition sources, hot surface, and open flames 3 meter away from the product.
- Ensure the servicing area is well ventilated.
- Ensure the product is service by certified serviceman.
- Ensure to always have the approved fire extinguisher.

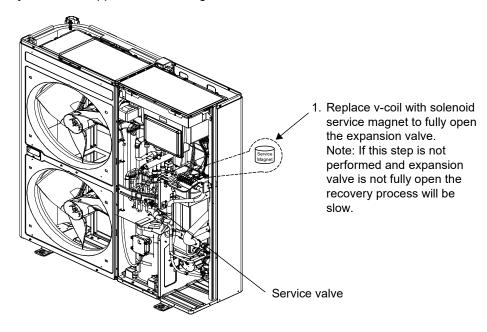

#### CAUTION!

All equipment and material must be ATEX certified to be allowed to operate within Atmosphere Explosible zone.

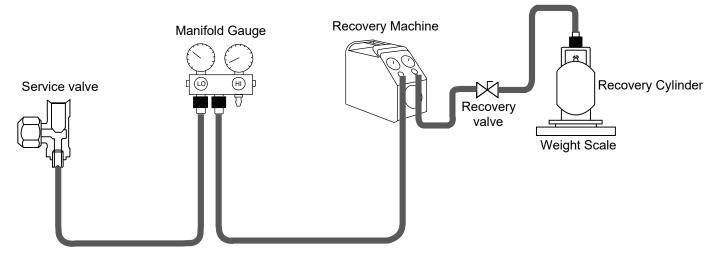


#### **CAUTION!**

Do not refill R290 refrigerant more that 50% of recovery cylinder capacity to avoid overpressure. (Safety risk)

Refrigerant Type	Recovery Cylinder Capacity
R32	80% of the weight
R290	50% of the weight

- 2. Connect the Low side charging hose of the manifold gauge to the service valve (2-way valve) in the outdoor unit.
- 3. Connect the center hose of the manifold gauge to the recovery machine.
- 4. Attached the manifold gauge correctly and tightly. Ensure both valve (Low side and High side) is in close position.
- 5. Connect the hose from recovery machine to the recovery cylinder.
- 6. Turn ON the recovery machine, turn the low side valve, service valve and recovery valve to open position.

# 13.5.2 Purging by using Nitrogen Gas Before Servicing and Disposal

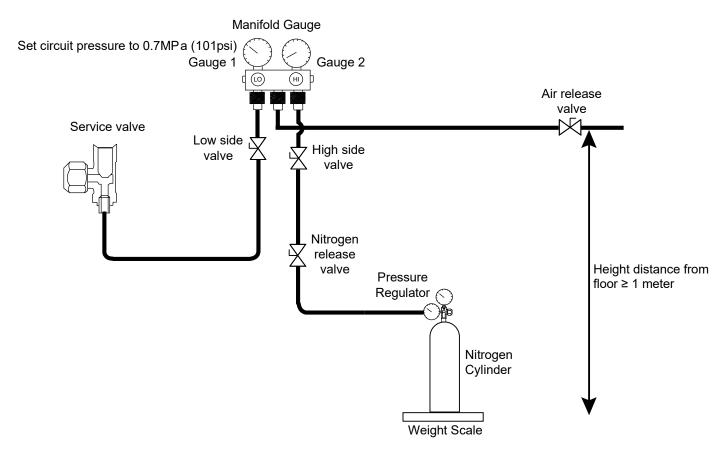

- 1. Connect nitrogen cylinder to the high side at the manifold gauge. Ensure nitrogen cylinder is connected to pressure regulator.
- 2. Close air release valve and open service valve.
- 3. Open High side valve and nitrogen release valve. (Set the pressure regulator to 200psi).
- 4. Charge nitrogen gas up to 0.7MPa (101psi) or charge 400 grams of nitrogen into the unit.
- 5. Close high side valve and open air release valve (half open) to release remaining propane to the atmosphere. Air release valve must be directed 1 meter from the floor to enable the propane gas to spread properly in the atmosphere. [Beware not to fully open the air release valve to avoid high pressure and compressor oil discharge].
- 6. When gauge 1 pressure reach near atmospheric (15psi) point the combustible leak detector to air release valve to detect the presence of propane. If presence of propane can still be detected, repeat procedure 2 to 5 until presence of propane cannot be detected.
- [Then refrigerant circuit repairment or unit decommissioning should be done].
- 7. Before charging new refrigerant, vacuum the system until it reaches to 500micron (67Pa) to remove foreign gas in the system and hold for 15 minutes.

# 14. Operation and Control

# 14.1 Basic Function

Inverter control, which equipped with a microcomputer in determining the most suitable operating mode as time passes, automatically adjusts output power for maximum comfort always. In order to achieve the suitable operating mode, the microcomputer maintains the set temperature by measuring the temperature of the environment and performing temperature shifting. The compressor at outdoor unit is operating following the frequency instructed by the microcomputer at indoor unit that judging the condition according to internal water setting temperature and water outlet temperature.

# 14.1.1 Internal Water Setting Temperature

Once the operation starts, control panel setting temperature will be taken as base value for temperature shifting processes. These shifting processes are depending on the Air-to-Water Heat pump settings and the operation environment. The final shifted value will be used as internal water setting temperature and it is updated continuously whenever the electrical power is supplied to the unit.

# 14.1.2 Heating Operation

## 14.1.2.1 Thermostat Control

- Compressor is OFF when Water Outlet Temperature Internal Water Setting Temperature > 3°C for continuously 3 minutes.
- Compressor is ON after waiting for 3 minutes, if the Water Outlet Temperature Water Inlet Temperature (temperature at thermostat OFF is triggered) <-3°C.

# 14.1.2.2 Thermostat Control (Outdoor Ambient Temperature)

Stops provide heating to room side during high outdoor ambient condition. Control content:

- Heating operation and water pump will turn OFF when outdoor ambient temperature > outdoor thermo off temperature + 3°C.
- (Outdoor thermo off set temperature is set by control panel. Thermo off set temperature is between 5°C ~ 35°C)
- Heating operation will resume when Outdoor ambient temperature < Outdoor thermo OFF set temperature + 1°C.</li>

# 14.1.2.3 Heat Mode Operation

Operation of heat pump provide heating capacity to room side by hot water through heating panel, floor heating or fan coil unit.

- 1 3 ways valve control:
  - $\circ$  3 ways valve switch and fix to heating side.
- 2 Heat pump operates follow normal heating operation.
- 3 Back up heater operate follow normal operation.
- 4 2 ways valve control:
  - 2 ways valve opens.

# 14.1.3 Cooling Operation

#### 14.1.3.1 Thermostat Control

- Compressor is OFF when Water Outlet Temperature Internal Water Setting Temperature > -1.5°C for continuously 3 minutes.
- Compressor is ON after waiting for 3 minutes, if the Water Outlet Temperature Water Inlet Temperature (temperature at thermostat OFF is triggered) >3°C.

#### 14.1.3.2 Cool Mode Operation

- 1 3 ways valve control:
  - $\circ$  3 ways valve switch and fix to cooling side.
- 2 Heat pump operates follow normal cooling operation.
- 3 Room heater DOES NOT operate during cool mode.
- 4 2 ways valve control:
  - 2 ways valve is closed.

# 14.1.3.3 Cooling Capacity Control

The cooling capacity can be set to either Efficiency or Comfort priority. (However, this is only available for WH-WXG12ME8 and WH-WXG16ME8.)

#### Remocon setting : Cooling capacity = Efficiency (default)

Prioritize efficiency and operate the cooling with reduced capacity

#### Remocon setting : Cooling capacity = Comfort

Prioritize comfort and operate the cooling at maximum capacity.

## 14.1.4 Target Water Temperature Setting

# 14.1.4.1 Target Water Temperature Control of Standard System (Optional PCB not Connected)

There are 2 types of temperature control selection which are Compensation and Direct.

- Temperature control type selection by installer:
  - 1 Compensation : Wlo, WHi, ODLo, ODHi can be set at installer menu.
  - 2 Direct : Direct Water Temperature Set
- Remote control setting by user:
  - 1 Compensation : Shift value ±5°C from the compensation curve
  - 2 Direct : Direct water temperature set change

\*This setting only able to set when room sensor select as Water Temperature.

\*Instead of water temperature, user will set target room temperature when room sensor select as Room Thermistor OR Internal Room Thermostat.

- Target water temperature is calculated as below condition.
  - Target water temperature = A (Base temperature) + B (shift temperature)

A (Base Temperature)	Compensation	Direct
A (Dase reinperature)	Value from the curve + User shift value set	Direct value from user setting

o B (shift temperature) value is depend on the room sensor selection at remote controller as below table:

B (Shift Temp.)	B shift value depend on the room sensor selection at remocon as table below
Sensor selection	
Water temperature	B = 0
External Room thermostat	B = 0
Internal Room thermostat &	Cool Mode: B = 0 ; when Zone OFF or Zone Room Thermo OFF B = B = 1* (room set temp (R/C) – actual room temp) Max/Min Regulation of B: (Max = 5 ; Min = -5)
Room Thermistor	Heat Mode: B = 0 ; when Zone OFF or Zone Room Thermo OFF B = follow Heating Room Temperature PI control logic


#### • Maximum/minimum regulation of Target Water Temperature

	Heating	Cooling
MAX	55°C (Below Ambient -25°C) * 75°C (Above Ambient -15°C) *	20°C
MIN	25°C	5°C

\* Between outdoor ambient -15°C and -25°C, max target decreases gradually from 75°C to 55°C.

#### Compensation Type: (Operation under Heat Mode and Cool Mode)


• The set temperature defines the parameters for the ambient (Outdoor temperature) dependent operation of the unit. The water temperature is determined automatically depending on the outdoor temperature. Default setting is the colder outdoor temperature will result in warmer water and vice versa. The user has the possibility to shift up and shift down the target water by remote control setting.

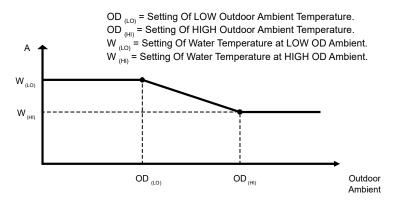

- Outdoor ambient is updated every 30 minutes when operation ON.
- Setting water outlet temperature always follow W(LO) or W(HI) whenever is higher if outdoor ambient sensor or indoor communication error happen.

However, when powerful mode is requested by remote control during heating mode, the higher value of HLo or Whi will be used for A calculation.

- \* There are 2 compensation curves (for heating and cooling). During heating mode, the heating curve is used and during cooling mode, the cooling curve is use.
- Compensation curve set shift value:

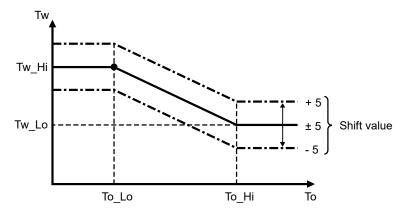

# 14.1.5 Target Water Temperature at Extension System (Optional PCB is Connected, Excluding when Operating in Standalone)

Target water temperature is calculated as below.

- Heat Mode:
- When buffer tank selection is "YES:" Target water temperature = Target buffer tank temperature + [2°C]
- When buffer tank selection is "NO"
  - If both zone 1 and zone 2 is active
  - Target Water Temperature = Higher zone target water temperature of Zone 1 and Zone 2. o If only one zone is active

Target Water Temperature = Zone target water temperature of active zone.

- Cool mode:
- When buffer tank selection is "YES"
  - If both zone 1 and zone 2 active
  - Target Water Temperature = Lower Zone Target Water Temperature of Zone 1 and Zone 2  $_{\odot}$   $\,$  If only one zone is active
    - Target Water Temperature = Zone Target Water Temperature of active zone
- When buffer tank selection is "NO"
  - If both zone 1 and zone 2 active
  - Target Water Temperature = Lower Zone Target Water Temperature of Zone 1 and Zone 2
  - If only one zone is active
    - Target Water Temperature = Zone Target Water Temperature of active zone

# 14.1.6 Target Zone Water Temperature Control

Purpose:- To control zone mixing and zone pump according to the zone sensor temperature

## 14.1.6.1 Target Zone 1 Water Temperature Setting Control

- Start condition
  - $\circ$  Heating zone 1 is ON by remote control or Timer or Auto Mode OR
  - Cooling zone 1 is ON by remote control or Timer or Auto Mode.
- Cancel condition
  - Heating zone 1 is OFF by remote control or Timer or Auto mode AND
  - Cooling zone 1 is OFF by remote control or Timer or Auto mode.
- Target Zone 1 water temperature is calculated as below condition.
  - Target Zone 1 water temperature = A (Base temperature) + B (shift temperature)

A (Base Temperature)	Compensation	Direct
A (base reinperature)	Value from the curve + User shift value set	Direct value from user setting

- \* During heat mode and compensation select, if powerful mode is activated, higher value of WLo or WHi will be use as curve value.
  - B (shift temperature) value is depend on the room sensor selection at remote controller as below table:

B (Shift Temp.)	B shift value depend on the room sensor selection at remocon as table below	
	Sensor selection	
Water temperature	B = 0	
External Room thermostat	B = 0	
Internal Room thermostat &	Cool Mode: B = 0 ; when Zone OFF or Zone Room Thermo OFF B = B = 1* (room set temp (R/C) – actual room temp) Max/Min Regulation of B: (Max = 5 ; Min = -5)	
Room Thermistor	Heat Mode: B = 0 ; when Zone OFF or Zone Room Thermo OFF B = follow Heating Room Temperature PI control logic	
Pool Function Selected	B = Delta value setting from remocon	

\* B = 0 regardless of which sensor selection, if SHP control bit is enable except Pool function select (maintain Pool "B" value)

\*\* Pool function also can be select at Zone 1 when optional PCB is connected and Zone 1 system is select.

• Maximum/minimum regulation of Target Water Temperature.

	Heating	Cooling
MAX	55°C (Below Ambient -25°C) * 75°C (Above Ambient -15°C) *	20°C
MIN	25°C	5°C

- \* Between outdoor ambient -15°C and -25°C, max target decreases gradually from 75°C to 55°C.
- Target Zone 1 Water Temperature (Heat mode only) during SG ready control
  - If buffer tank selection is "NO" then following shift is carried out.
    - While digital input is "10" or "11" then,
      - Final Target Zone 1 water temperature
        - = Target Zone 1 water temperature\* (SG ready % setting (remote control menu))%
  - If buffer tank selection is "YES"
    - No shift of Target Zone 1 Water Temperature. Target Buffer Tank Temperature will change accordingly.
       \* Refer to "Buffer tank temperature control"

# 14.1.6.2 Target Zone 2 Water Temperature Setting Control (Excluding when Operating in Standalone)

- Start condition
  - Heating zone 2 is ON by remote control or Timer or Auto Mode OR
  - $\circ$  Cooling zone 2 is ON by remote control or Timer or Auto Mode.
- Cancel condition
  - Heating zone 2 is OFF by remote control or Timer or Auto mode AND
  - Cooling zone 2 is OFF by remote control or Timer or Auto mode.
  - Target Zone 2 water temperature is calculated as below condition.
- Target Zone 2 water temperature = A (Base temperature) + B (shift temperature)

A (Base Temperature)	Compensation	Direct
	Value from the curve + User shift value set	Direct value from user setting

- \* During heat mode and compensation select, if powerful mode is activated, higher value of WLo or WHi will be use as curve value.
  - B (shift temperature) value is depend on the room sensor selection at remote controller as below table:

B (Shift Temp.)	B shift value depend on the room sensor selection at remocon as table below			
Sensor selection				
Water temperature	B = 0			
External Room thermostat	B = 0			
Internal Room thermostat & Room Thermistor	Cool Mode: B = 0 ; when Zone OFF or Zone Room Thermo OFF B = B = 1* (room set temp (R/C) – actual room temp) Max/Min Regulation of B: (Max = 5 ; Min = -5)			
	Heat Mode: B = 0 ; when Zone OFF or Zone Room Thermo OFF B = follow Heating Room Temperature PI control logic			
Pool Function Selected	B = Delta value setting from remocon			

- \* B = 0 regardless of which sensor selection, if SHP control bit is enable except Pool function select (maintain Pool "B" value)
- \*\* Pool function also can be select at Zone 2 when optional PCB is connected and Zone 2 system is select.

• Maximum/minimum regulation of Target Water Temperature.

	Heating	Cooling
МАХ	55°C (Below Ambient -25°C) * 75°C (Above Ambient -15°C) *	20°C
MIN	25°C	5°C

\* Between outdoor ambient -15°C and -25°C, max target decreases gradually from 75°C to 55°C.

- Target Zone 2 Water Temperature (Heat mode only) during SG ready control
  - If buffer tank selection is "NO" then following shift is carried out.
    - While digital input is "10" or "11" then,
      - Final Target Zone 2 water temperature
      - = Target Zone 1 water temperature\* (SG ready % setting (remote control menu))%
  - If buffer tank selection is "YES"
    - No shift of Target Zone 2 Water Temperature. Target Buffer Tank Temperature will change accordingly.
       \* Refer to "Buffer tank temperature control"

# 14.1.6.3 Zone Temperature Control Contents

- During Standard System (Optional PCB not connected)
  - Only 1 zone temperature control is available
  - This zone room temperature is control by either one of the 4 room sensor (Room Th, Int/Ext Room Thermostat, Water temperature)
  - Target Zone Water Temperature is calculated based on selected temperature control type (Compensation or Direct) and selected room sensor. Target Water Temperature will set same as Target Zone Water Temperature
  - o Target Water Temperature is the temperature for heat pump to operate refer to indoor water outlet sensor.
  - Heat pump and water pump OFF when ROOM Thermo OFF (Zone thermo OFF by Room Th or Room Thermostat).

\* There will be no zone sensor connected to zone 1 (No zone sensor error), mixing valve and zone pump will not operate.

• During Extension System (Optional PCB connected)

\* There will be no zone sensor connected to zone 1 (No zone sensor error), mixing valve and zone pump will not operate.

- During Extension System (Optional PCB connected)
- Buffer Tank connection select "NO" &
  - One zone system is select
    - This zone room temperature control by either one of the 4 room sensor (Room Th, Int/Ext Room Thermostat, Water temp.)
    - Target Zone Water Temperature calculate base on selected temperature control type (Compensation or Direct) and selected room sensor.
    - Target Water Temperature will set same as Target Zone Water Temperature
    - Target Water Temperature is a temperature for heat pump to operate refer to indoor water outlet sensor.
    - Heat pump and water pump OFF when ROOM Thermo OFF (Zone thermo OFF by Room Th or Room Thermostat).

\* There will be no zone sensor connected to zone 1 (No zone sensor error), mixing valve and zone pump will not operate.

- 2 zone system select
  - Each zone room temperature is control by each sensor which select from either one of the 4 room sensor
  - Target Zone 1 & 2 Water Temperature is calculated based on selected temperature control type (Compensation or Direct) and selected room sensor.
     \* Zone Mixing Valve & Zone pump will operate to achieve Target Zone Water Temperature which refer to zone sensor.
    - \* Zone Sensor will detect if zone sensor is open or short.
  - Target Water Temperature will set same as the active & higher zone water temperature setting. (When cooling mode, lower zone water temp setting)
  - Target Water Temperature is the temperature for heat pump to operate refer to indoor water outlet sensor.


- Heat pump and water pump OFF when ROOM Thermo OFF (Both Zone thermo OFF by Room Th or Room Thermostat).
- Buffer Tank Connection select "YES" &
  - 1 zone system or 2 zone system select
    - Each zone control by each sensor which select from either one of the 4 room sensor
    - Target Zone 1 & 2 Water Temperature calculate base on selected temperature control type (Compensation or Direct) and selected room sensor. Each zone have their own Target Zone Water Temperature.

\* Zone Mixing Valve & Zone pump will operate to achieve each Target Zone Water Temperature which refer to zone sensor

\* Zone Sensor will detect if zone sensor is open or short.

- Target Buffer Tank Temperature will be set as active & higher zone water temperature setting + Buffer Delta T. (Heating) Target Buffer Tank Temperature will be set as active & lower zone water temperature setting (Cooling).
- Target Water Temperature will set as Target Buffer Tank Temperature + [2°C] (Heating) Target Water Temperature will set as Lower or Active Target Zone Water Temp. + [-3°C] (Cooling)
- Target Water Temperature is a temperature for heat pump to operate refer to indoor water outlet sensor.
  Heat pump and water pump OFF when ROOM thermo OFF
  - Heat mode: ROOM thermo OFF (Buffer Tank Temperature > Target Buffer Tank + [0°C]
  - Cool mode: ROOM Thermo OFF (Both Zone thermo OFF by Room Th or Room Thermostat)

#### 14.1.7 Auto Mode Operation

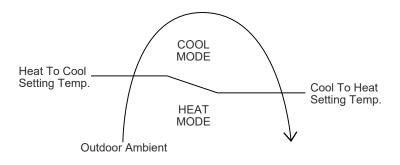


- Control details:
  - To enable the unit to operate either heat or cool mode automatically, heat to cool set temperature and cool to heat set temperature can be set by control panel.
  - Automatic operation is judged based on control panel setting temperature and outdoor ambient temperature.

\* Minimum setting of heat to cool set temperature is 1°C higher than cool to heat set temperature.

- Judgement control:
  - If outdoor ambient temperature < Heat to Cool Set Temperature, unit will operate in Heat Mode or else the unit will operate in Cool Mode.
  - If current operation is Cool mode, outdoor ambient temperature > Cool to Heat Temperature, unit will maintain Cool mode operation or else the unit will operate Heat mode.
  - If current operation is Heat mode, outdoor ambient temperature >Heat to Cool Temperature, unit will maintain Heat mode operation or else the unit will operate Cool mode.
  - Every 60 minutes the outdoor ambient temperature is judged.
  - When Auto + Tank mode is selected, operation mode switching is judged by both outdoor ambient temperature and indoor air temperature.

### 14.1.8 Auto Cooling Mode Operation Limit

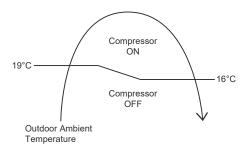

- Auto Mode Cooling Only operation will start once the outdoor ambient temperature reaches 19°C and compressor will continue to run until the outdoor ambient temperature drops to 16°C.
- Due to this limitation, If Heat to Cool temperature is set lower than 19°C, the compressor will not operates until the outdoor ambient temperature reaches 19°C or higher.

#### 14.1.9 Tank Mode Operation

- 3 ways valve direction
  - 3 ways valve switch to tank side during Tank Thermo ON condition. Switch 3 ways valve to room side when tank achieve Tank Thermo OFF temperature.
- Tank Thermo ON/OFF Characteristic
  - o Tank Thermo OFF

#### Case 1: Internal Tank Heater is select and Tank Heater ON

- Tank temperature > Tank Set Temperature continuously for 15 seconds.
- Water outlet >75°C
- Case 2: <u>Tank Heater OFF OR External Heater is select</u>
  - When heat pump OFF due to water thermos & Tank temperature > Tank water set temperature for continuously 20 seconds. OR
  - Tank temperature > Tank set temperature + 1°C for continuously 20 seconds.
  - Tank Thermo ON

Case 1: <u>Tank Heater ON (Internal Tank Heater)</u>

• Tank temperature < Tank set temperature + R/C (Tank re-heat temperature)

Case 2: Tank Heater OFF (Internal Tank Heater)

- Tank temperature < Tank water set temperature + R/C (Tank re-heat temperature)
- \* When tank thermo ON, water pump will ON for 3 minutes then only heat pump turn ON. \* Tank water set temperature = tank set temperature or 65°C whichever lower.
- 2 ways valve close
  - Heat pump Thermostat Characteristic
  - Heat pump Water Outlet set temperature is set to below table:

Outdoor ambient temperature	Heat pump water outlet temperature
< -20°C	55°C
> -20°C	65°C
> -15°C	75°C

Characteristic of heat pump thermos ON/OFF under tank mode condition:

Water Outlet Thermo Condition

- Heat pump thermos OFF temperature:
- 1 Heat pump thermo OFF temperature = Target Water outlet temperature + (3°C)
- 2 Water outlet temperature > heat pump thermo OFF temperature for continuously 3 minutes, heat pump OFF but water pump continue ON.

- Heat pump thermo ON temperature
  - 1 Heat pump thermo ON temperature = water inlet during thermo OFF time + [-3°C]
  - 2 When water outlet temperature < heat pump thermo ON temperature, heat pump ON.

Water inlet thermo protection condition

- Heat pump thermo OFF temperature:
- Water inlet temperature > [75°C/55°C] for continuously 30 seconds, heat pump OFF, water pump continue ON.
- Heat pump thermo ON temperature:
  - 1 Heat pump thermos ON temp = water inlet temperature < [75°C/55°C].

Outdoor ambient temperature	Water inlet temperature
< -20°C	55°C
> -20°C	75°C

#### Thermo ON/OFF for Heat Pump in Tank Operation:

When tank temperature achieve heat pump OFF condition, refer below condition: Conditon 1 : Tank Heater ON (Internal Tank Heater)

 Heat pump will turn OFF, water pump continue ON and room heater will continue ON if tank temperature below tank heater thermo ON condition. 3 ways valve will only switch to room side after tank temperature reach tank heater thermo OFF condition.

Conditon 2 : Tank Heater OFF (Internal Tank Heater)

If tank temperature achieve tank thermo OFF, heat pump turn OFF, water pump turn OFF, room heater OFF and 3 ways valve switch to room side.

When tank temperature achieve heat pump ON condition, water pump ON, heat pump ON and room heater turn OFF.

#### Heat pump OFF condition at Tank Mode

- Tank temperature > tank water set temperature continuously for 20 seconds after heat pump thermos OFF due to water thermo. (Heat pump turn OFF but water pump continue ON and room heater turn ON to achieve tank set temperature) OR
- Tank temperature > tank set temperature + [1°C] for continuously 20 seconds. (Heat pump OFF, water pump OFF, room heater OFF and 3 ways valve switch to room side)

#### Heat pump ON condition at Tank Mode

Tank temperature < tank water set temperature + R/C setting (Tank re-heat temp) (Water pump turn ON OR continue ON, heat pump ON and 3 ways valve switch to tank side or maintain at tank side)</li>

#### Tank heater control

• Internal heater only operates to tank side if Tank heater ON and backup heater is enable.

#### Internal heater turn ON condition:

- Tank temperature < tank set temperature AND
- Heat pump thermos OFF **AND**
- 20 minutes from previous heater off AND
- Internal tank heater selects USE from control panel.

#### Internal heater turn OFF condition:

- Tank temperature > tank set temperature for continuously 15 seconds OR
- Heat pump thermo ON OR
- Mode change or operation is off by control panel.

### 14.1.10 Heat + Tank Mode Operation

- 1 3 ways valve control:
  - 3 ways valve switch to room side during room heat-up interval and switch to tank side during tank heatup interval. Both modes will switch alternately. Tank mode is the initial running mode of Heat + Tank mode.
- 2 Heat pump operation control:
  - During room heat-up interval
    - Follow normal heating operation. Switching to tank side depends to below cases: Case 1:
      - [Previous switch from tank interval to room interval due to thermo OFF]
    - Switch to tank heat-up interval when Tank temp < Tank thermos ON temp (Room heat-up interval ends)
      - Case 2:

[If heating operation at room side is less than 30 minutes and switch to tank side 3 times consecutively]

 Maintain at room heat-up interval regardless of the tank temperature. Switch to tank heat-up interval only when (Room Interval Timer is complete **OR** Room heat pump thermo OFF) **AND** Tank temperature < Tank thermo ON temperature. Case 3:

[Previous switch from tank interval to room interval due to tank interval timer is complete]

- Maintain at room heat-up interval regardless of the tank temperature. Switch to tank heat-up interval only when (Room Interval Timer is complete **OR** Room heat pump thermo OFF) **AND** tank temperature < Tank thermo ON temperature.</li>
- During Tank heat-up interval
  - Tank interval is the first mode running when heat + tank mode is select.
  - Switch to room interval only when tank achieve tank thermo OFF **OR** tank heat-up interval timer is complete.
  - Heat pump operates according to normal tank mode operation.
- 3 Room heater control:

0

0

- During heating heat-up interval
- Follow normal room heater control operation.
- 4 Tank heater control:
  - During heating heat-up interval
    - Internal tank heater will not function under heating heat-up interval.
  - o During tank heat-up interval
    - Internal tank heater will turn ON after heat pump thermo off to boil tank temperature to tank set temperature.
    - 2 ways valve control is open
  - Water pump control:
    - Water pump always turn ON if room heat pump thermo ON OR Tank thermo ON.

### 14.1.11 Cool + Tank Mode Operation

- 1 3 ways valve control:
  - 3 ways valve switch to room side during room cooling interval and switch to tank side during tank heatup interval. Both mode will switch alternately. Tank mode is the initial mode of cool + tank mode.
- 2 Heat pump operation control:
  - During room heat-up interval
    - Follow normal cooling operation.
      - Switching to tank side depends to below cases: Case 1:
        - [Previous switch from tank interval to room interval due to thermo OFF]
    - Switch to tank heat-up interval when Tank temperature < Tank Thermo ON temperature (Room interval will ends)</li>
      - Case 2:

[If cooling operation at room side is less than 30 minutes and switch to tank side for 3 times consecutively]

- Maintain at room cooling interval regardless of the tank temperature. Switch to tank heat-up interval only when (Room Interval Timer is complete **OR** Room heat pump thermo OFF) **AND** Tank temperature < Tank thermo ON temperature. Case 3:
- [Previous switch from tank interval to room interval is due to tank interval timer is complete]
- Maintain at room cooling interval regardless of the tank temperature. Switch to tank heat-up interval only when (Room Interval Timer is complete **OR** Room heat pump thermo OFF) **AND** tank temperature < Tank thermo ON temperature.</li>

\*Tank Thermo ON temperature:

Internal Tank Heater select USE	<tank (tank="" +="" c="" r="" re-heat="" set="" setting="" temperature="" temperature)<="" th=""></tank>
Others	<tank (tank="" +="" c="" r="" re-heat="" set="" setting="" td="" temperature="" temperature)<="" water=""></tank>


- During Tank heat-up interval
  - Tank interval is the first mode running when the cool + tank mode is select.
  - Switch to room interval only when tank achieve tank thermo OFF **OR** tank heat-up interval timer is complete.
  - Heat pump operates according to normal tank mode operation.
- 3 Room heater control:

0

- During room cooling interval
- Room heater is OFF and not operates.
- 4 Tank heater control:
  - o During room cooling interval
    - Internal tank heater will not function under room cooling interval.
  - o During tank heat-up interval
    - Internal tank heater will turn ON after heat pump thermos off to boil tank temperature to tank set temperature.
- 5 2 ways valve is close.
- 6 Water pump control:
  - Water pump always turn ON if room heat pump thermo ON **OR** Tank thermo ON.

### 14.1.12 Outdoor Fan Motor Operation

Outdoor fan motor is adjusted according to operation condition. It starts when compressor starts operation and it stops 30 seconds after compressor stops operation.

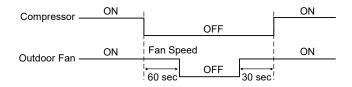

The reason the outdoor fan stops 60 seconds after the compressor stops is to exhaust heat.


The reason why the compressor starts operating 30 seconds before it starts is to accurately detect the outside temperature.

# 14.2 Water Pump

The system will start checking on the water flow level after operation start for 30 seconds. If water pressure level is detected low or high continuously 300 seconds, the water pump and the compressor will be OFF permanently and OFF/ON control panel LED will blink (H21 error occurs).

### 14.2.1 Water Pump Control

- Once the indoor unit is ON, the water pump will be ON immediately and no error judgment for 30 seconds. However, during this 30 seconds operation, if there is any abnormality cause at outdoor or malfunction, the compressor should be OFF immediately and restart delay after 3 minutes.
- The system will start checking on the water flow level after operation start for 30 seconds. If water flow level is detected low continuously 140 seconds, the water pump and the compressor will be OFF permanently and OFF/ON control panel LED will blink (H62 error occurs).
- When error happens, the power has to be reset to clear the error.
- If there is no error indication, the water pump shall be continuously running.
- The water pump will remain ON when compressor OFF due to thermostat OFF setting is reached.
- Water pump will OFF when room thermo **OR** tank thermo **OR** buffer tank thermo OFF.
- Water pump will delay 30 seconds to turn OFF when request to OFF except during anti-freeze deice activate or air purge mode.

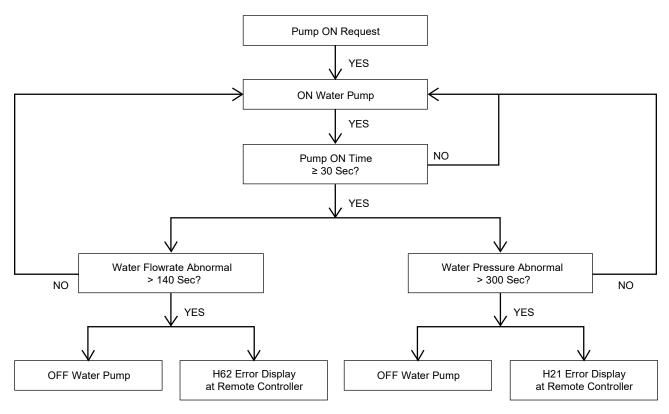

#### Maximum pump speed setting on remote control


 Standard pump speed is automatically controlled to get the designed water temperature different between water inlet and outlet (ΔT). Instead of setting the standard pump speed, maximum pump speed is manually adjusted by the installer according to water circuit pressure drop.

However, the following sequences do not follow maximum pump duty setting by remote control.


- Pump down mode
- Air purge mode
- Normal deice

1) P-Q graph for different pump HEX duty


#### • Standalone (WH-WXG09ME8, WH-WXG12ME8)

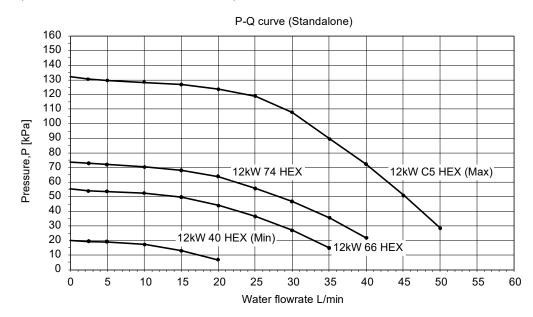


• Standalone (WH-WXG16ME8)

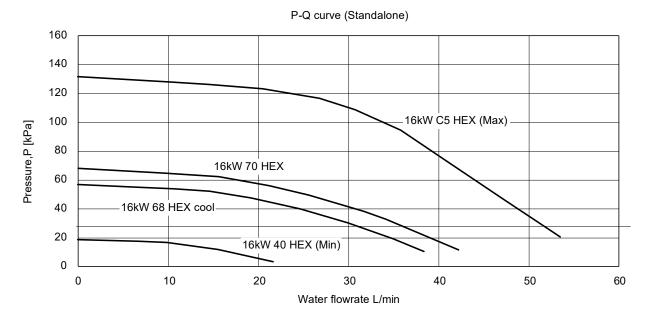


#### • Connection AiO (WH-WXG09ME8, WH-WXG12ME8)

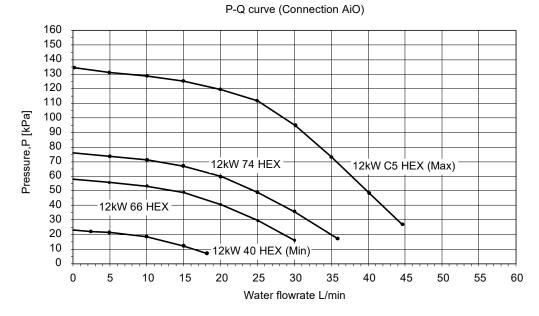

#### • Connection AiO (WH-WXG16ME8)

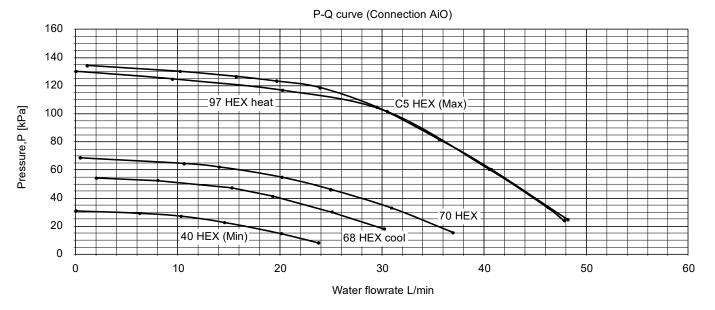


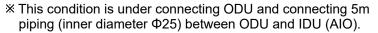

### 14.2.2 Zone Water Pump Control

Purpose:

• Water pump install at each zone to circulate the water inside each zone during buffer tank connection selected "YES" or 2 zone systems.

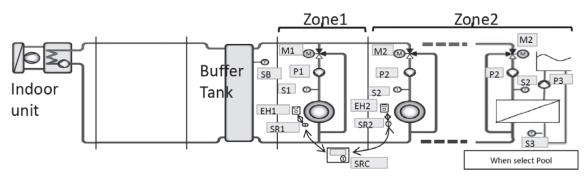

Content:

- AC type water pump install for this zone water pump control. When optional PCB connected, 230V output will drive this zone pump.
- There are three pump can be connected through Optional PCB. (Zone 1 Pump, Zone 2 Pump, & Pool Pump)

\* Zone 1 pump [P1] use to circulate zone 1 water circuit & Zone 1 mixing valve [M1] adjust to control the Zone 1 target water temperature.

\* Zone 2 pump [P2] use to circulate zone 2 water circuit & Zone 2 mixing valve [M2] adjust to control the Zone 2 target water temperature.

\* When Pool Function select as Zone 2 circuit, [P2] use to circulate water to heat exchanger which use to transfer heat to pool water.

\* Pool pump [P3] circulates the pool water through the heat exchanger to get warm water.

- Zone 1 and Zone 2 water pump start condition:
   Zone room request ON (eg. Zone 1 thermo ON, only zone 1 pump will turn ON)
- Zone 1 and Zone 2 water pump stop condition:
   Zone room request OFF
- Pool water pump start condition:
  - Pool Zone request ON AND
  - Pool function is selected
- Pool water pump stop condition
  - Pool zone: Zone room request OFF OR
  - Pool function is cancel

\* Zone 1 & Zone 2 water pump need to turn OFF when antifreeze deice pump stop control activate and turn ON back after the antifreeze deice pump stop control end under setting of "NO" buffer tank connection.

#### Zone Pump Prohibit ON control:

- Start condition: Zone 1 water temperature ≥ 85°C continuously for 5 minutes \*stop zone water pump operates if the zone water fulfilled.
- Cancel condition: After 30 minutes from start condition fulfilled.
   \*zone water pump operates according to normal condition.


### Zone Pump Control during Anti-Freeze

Zone pump control during Zone Anti-Freeze Control:

- When Zone Anti-Freeze Flag=1, Zone Pump Turn ON.
- When Zone Anti-Freeze Flag=0, Zone Pump Turn OFF.
- Zone pump control during Indoor Anti-Freeze Control:
- Zone pump only ON/OFF if the Extension PCB connected and Buffer Tank select "NO" condition
  - When Indoor Anti-Freeze flag=1, Zone Pump Turn ON
  - When Indoor Anti-Freeze flag=0, Zone Pump Turn OFF
- \* Pool Water Pump will not affected by both Indoor anti-freeze control or zone anti-freeze control.

### 14.2.3 Water Pump Speed Feedback Error

- Basically pump speed feedback is control by micon.
- When pump speed is below low limit or over high limit for a few seconds, micon detect pump error and system is stopped.
- Error detection conditions:
  - Detect abnormal water pump speed for continuous 10 secs.
- Current pump speed < 300 rpm or</li>
  - Current pump speed > 6000 rpm for 10 seconds.
- Control contents:
  - When error occurs, water pump, heating and heater is stopped for 30 seconds then restart again (Retry control).
  - When micon detect error again, system is stopped and error code [H20] is displayed at control panel.

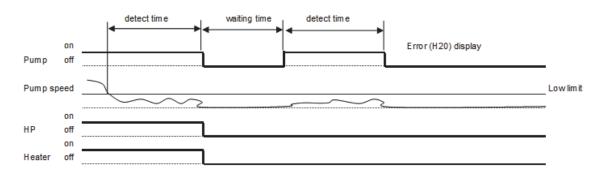

# 14.3 Extra Pump Function (Optional)

There are three different controls for the external pump, Heat (default), DHW or NO.

#### Remocon setting : Extra pump = Heat (default)

This is the conventional setting for adding an external water pump when the flow rate is insufficient due to water pressure loss, etc.

#### Start conditions:

- 1) Outdoor Water Pump Turn ON
- 2) 3 ways valve switch at room side
- 3) External Pump control for Bivalent ON. (Alternative or SG ready mode or Smart mode)
- 4) Heat Pump OFF AND Boiler turn ON under Bivalent control
- 5) When Optional PCB Connectivity select No AND Buffer Tank Connection select Yes
- 6) Not Tank only mode AND Zone room thermo ON
   When [ (1) AND (2) ] OR [ (3) AND (4) ] OR [ (5) AND (6) ] fulfill, turn ON extra pump.
   \*Output 230V to the external pump when fulfil start condition.

#### **Cancel conditions:**

- 1) Outdoor water pump turn OFF
- 2) 3 ways valve switch to tank side
- 3) Heat pump OFF and Boiler OFF under Bivalent Control
- 4) When Optional PCB Connectivity select No AND Buffer Tank Connection select Yes
- 5) Tank Only mode
- 6) Zone room thermo OFF

When {[ (1) OR (2) ] AND (3) } OR { (4) AND [ (5) AND (6) ]} fulfill, turn OFF extra pump. \*Stop output 230V to external pump when either one stop condition fulfil.

#### Remocon setting : Extra pump = DHW

This is the setting when using DHW circulation operation.

#### **DHW circulation start conditions**

- All of the following holds
- 1) Extra pump = "DHW"
- 2) DHW circulation is effective time.
- 3) Tank mode is "ON"

#### **DHW circulation start conditions**

- Which of the following holds
- 1) Extra pump = "No" or "Heat"
- 2) DHW circulation isn't effective time.
- 3) Tank mode is "OFF"

#### **DHW circulation operation**

Operation is 2 type, Confort or Efficiency

#### **DHW circulation operation (Comfort)**


Prioritize comfort over power consumption

- 1) When DHW circulation request is received, pump port is supply 230V
- 2) During this operation, 230V is always supply
- 3) When operation is "OFF", 230V is stopped

#### **DHW circulation operation (Efficiency)**

#### Pump operate intermittent (ON/OFF)

- 1) When DHW circulation request is received, pump port is supply 230V.
- 2) Pump operate intermittent (ON/OFF)
- ON time and OFF time is decided by Remocon.
- 3) When operation is "OFF", 230V is stopped

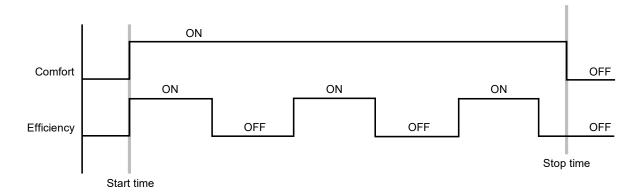

#### Remocon setting : Extra pump = No

The extra pump does not work.


# 14.4 Water Circuit Part Safety

### 14.4.1 Water Circuit Part Safety Control

- 1 When water pump is ON, the system will start checking flow switch status (ON/OFF).
- 2 If the flow switch ON for 10 seconds, the system will check on the water inlet temperature for 10 seconds. If the water inlet temperature not exceeds 80°C, the water pump shall be continuously running with normal mode.

If the water inlet temperature exceeds 80°C for continuously 10 seconds, the water pump will be OFF immediately.

3 After water pump OFF for more than 10 minutes, it will be ON back and the indoor unit safety control checking is restarted.

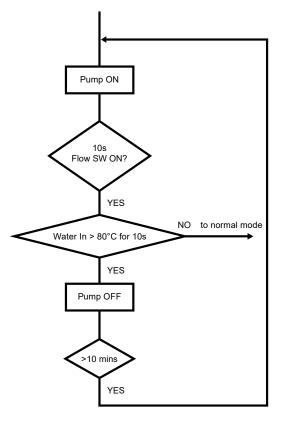

# 14.5 Auto Restart Control

1 When the power supply is cut off during the operation of Air-to-Water Heatpump, the compressor will reoperate after power supply resumes.

### 14.6 Indication Panel

LED	Operation	
Color	Green	
Light ON	Operation ON	
Light OFF	Operation OFF	

#### Note:

• If Operation LED is blinking, there is an abnormality operation occurs.

# 14.7 Indoor Back-Up Heater Control (Excluding when Operating in Standalone)

### 14.7.1 Indoor Electric Heater Control

- 1 Normal Heating Mode
  - Heater On condition:
    - a. Heater switch is ON
    - b. After Heatpump thermo ON for [30] mins
    - c. After water pump operate [9] mins
    - d. Outdoor air temperature < Outdoor set temperature for heater
  - e. When water outlet temperature < Water set temperature + [-4°C]
  - f. [20] minutes since previous Backup heater Off
    - \* When heatpump cannot operate due to error happens during normal operation, heater will go into force mode automatic
    - \* Heater need to operate during deice operation
  - g. Current water flowrate is higher than min. flowrate
  - Heater Stop Condition:
  - a. When outdoor set temperature > outdoor set temperature + [+2°C] for continuous 15 secs OR
  - b. When water out temp> water set temperature + [-2°C] for continuous 15 secs OR
  - c. Heater switch is Off OR
  - d. Heatpump thermo-off or OFF condition
- 2 Force Heater Mode
  - Heater On condition:
    - a. After water pump operate [9] mins
    - b. When water outlet temperature < water set temperature + [-4°C]
    - c. [20] minutes since previous Backup heater Off
    - d. Current water flowrate is higher than min. flowrate
  - Heater Stop condition
    - a. Force mode off **OR**
    - b. When water outlet temperature > water set temperature + [-2°C] for continuous 15 secs

\* Do not operate heater at the following situation

- Water outlet temperature sensor, and water inlet sensor abnormal
- 2 Flow switch abnormal
- 3 Circulation pump stop condition

### 14.7.2 Room Heater Operation during Deice

#### Purpose:

• To protect the indoor Heat Exchanger from ice forming and prevent heat exchanger plate breakage.

#### **Control content:**

- This Heater protection control will activate only if the backup heater is enable at custom setup by remote controller. Once fulfil the start condition, room heater will turn ON together (base on max heater capacity selection) and stop together if stop condition is fulfilled.
  - \* If the heater is request to turn ON OLP feedback will be detected.

#### Starting conditions:

- During normal deice operation 4~9
- Water outlet temperature < 7°C or Water inlet temperature < 7°C</li>


Heater operates when 1 ~2 fulfilled.

#### Stop condition:

- When normal deice end or
- Water outlet temperature > 45°C

However, room heater keeps ON if indoor electric heater control activate.

< Deice operation time chart >

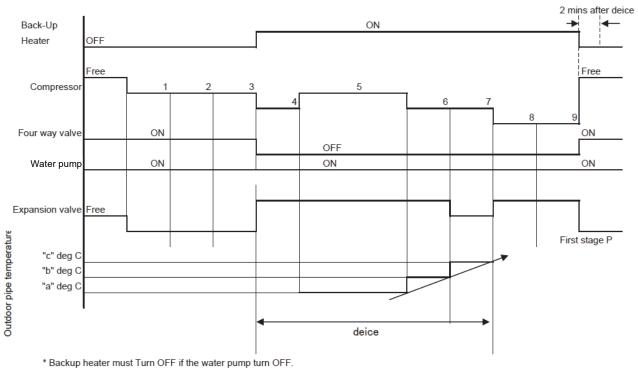


# 14.8 Tank Heater Control (Excluding when Operating in Standalone)

### 14.8.1 Internal Heater Control at Tank Mode

- Internal heater turn ON condition:
  - 1 Internal Heater select for Tank heater by remote controller
  - 2 Tank Heater select ON by user.
  - 3 Backup Heater Enable
  - 4 Tank Temperature < Tank Set Temperature
  - 5 Heat Pump Thermo OFF
  - 6 20 minutes from previous heater off.
- Room heater turn OFF condition:
  - 1 Tank Temperature > Tank Set Temperature + [0°C] for continuous 15 seconds. OR
  - 2 Heat Pump Thermo ON **OR**
  - 3 Mode Change or Operation OFF by remote controller **OR**

\* Backup Heater Turn ON/OFF all together according to the selected heater capacity.

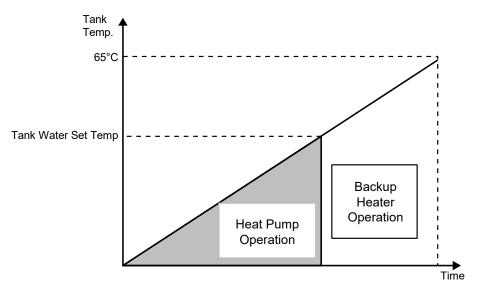

# 14.9 Base Pan Heater Control (Optional)

- To enable the base pan heater function, control panel initial setting has to be manually adjusted by activating Base Pan Heater menu.
- There are 2 optional start condition can be selected, Type A or Type B.
- Control details:
  - 1 Type A: (Default Auto Mode)
    - Start conditions:
    - When outdoor air temperature  $\leq$  3°C during heating and deice operation is ON.

Control contents:

• Base pan heater is ON during deice operation and continues ON for 10 minutes after deice operation ends.

#### Cancel condition:

- $\overline{}$  When outdoor temperature > 6°C after deice end or
- When operation is not at heating mode or
- Base pan heater ON timer count is completed.
- 2 Type B: (ON Mode)

Start conditions:

• When outdoor air temperature is  $\leq 5^{\circ}$ C and operates in heating mode, base pan heater is ON.

Cancel conditions:

- When outdoor air temperature is > 7°C or
- When operation is not at heating mode.

# 14.10 Force Heater Mode

Purpose of Force Heater Mode:

• As a backup heat source when heat pump error. Force heater Mode only control backup heater to heat up the room circuit, and turn ON back up heater or booster heater to boil up tank water base on the tank heater selection (internal or external).

Force Heater Control start condition:

- Force heater request ON by user during error OR auto turn ON by remote controller during error AND (Force Heater mode can be operate regardless of mode selection, remocon will send the latest mode selection force bit by bit to indoor. Indoor will judge to turn ON heater to room side if it is heat mode selected, and turn ON heater to heat tank water base on tank heater selection)
- During Error Happen (exclude the error list below)

Error List which not allow Force Heater operation

H12	Capacity Mismatch	H90	Abnormal ID/OD communication		
H20	Abnormal Water Pump	H95	Abnormal Voltage Connection		
H21	Abnormal Water Pressure	F30	Abnormal water outlet 2 sensor		
H62	Abnormal Water Flow	F37	Abnormal Water Inlet sensor		
H70	Abnormal Back-up Heater OLP	F45	Abnormal Water Outlet sensor		
H74	PCB Communication Error	F50	Abnormal Water Inlet 2 sensor		
H76	Indoor-Remote Controller Communication Error				
[When tank	[When tank mode operate with external heater selected & tank heater select ON ]				
H22	Abnormal tank 2 sensor	H91	Abnormal tank heater OLP		
H72	Abnormal tank 1 sensor				

Force Heater Control Stop Condition:

- Force Heater request OFF OR
- Operation OFF request **OR**
- Power reset **OR**
- Error of above list happens during force heater operation.

Control contents:

After fulfill start condition, indoor will operate the force heater operation according to below mode condition Heat mode Only: Turn ON backup heater to achieve room heat pump target water temperature.

Heat + Tank mode: Turn ON backup heater to heat up room **OR** Turn ON Heater to Boil up tank water. Cool mode Only: Water pump and backup heater will OFF in force heater mode.

Cool + Tank mode: Operate pump and internal Heater OR External heater to Boil up tank water.

Tank mode Only: Operate pump and internal Heater OR External heater to Boil up tank water.

\* For heat mode condition, backup heater will only turn ON if the backup heater is enable regardless of Room Heater Selection.

\* For tank mode condition, If internal heater selected backup heater will turn ON to boil up tank water.

If external heater selected , booster heater will turn ON to boil up tank water regardless of tank heater selection.

Room Side: (Heat Mode):

- When force heater mode start condition fulfilled, turn ON water pump and turn ON backup heater follow below control.
- Operate the 3 ways valve at room side only and turn ON 2 ways valve as heat mode operation.
- Turn ON the zone pump and mixing valve if system select 2 zone system or Buffer tank connect YES, control according to normal zone pump and mixing valve control.
- When Force heater mode stop condition fulfilled, turn OFF heater as below condition and turn OFF water pump after pump delay time.

Backup Heater On Condition:

- When Force Heater Control start condition fulfill AND
- After water pump operate 2 minutes AND
- When water outlet temperature < water set temperature + [-4°C] AND
- 20 minutes since previous Backup heater Off AND
- Backup Heater Enable

Backup Heater Stop condition:

- Force mode off OR
- Operation off **OR**
- When water outlet temperature > water set temperature + [-2°C] for continuous 15 secs OR
   \* ON/OFF follow normal heater sequence.

Tank side (Tank mode):

- When tank mode select and force heater bit received, turn ON backup heater (INTERNAL) or Booster Heater (External) depend on the tank heater selection.
- If tank heater selection is INTERNAL, follow normal thermo judgement to switch 3 ways valve to tank side and room side.
- If tank heater selection is EXTERNAL, only turn ON booster heater according to tank thermo.

Tank Heater selection is INTERNAL:

Backup Heater ON Condition:

- After water pump operate 2 mins AND
- When tank temperature < Tank set temperature [Remocon Set Tank Re-heat Temp] AND
- 20 minutes since previous Backup heater OFF AND
- Backup Heater Enable

Backup Heater OFF condition:

- Force mode off OR
- When tank temperature > Tank set temperature for continuous 15 secs **OR**
- Tank Operation OFF

Tank Heater selection is EXTERNAL:

- Booster Heater ON condition:
- Force Heater mode ON AND
- Tank temperature < tank set temperature + [Remocon Set Tank Re-heat Temp] 1°C, AND</li>
- 20 minutes since previous heater off.

Booster Heater OFF condition:

- Tank temperature > tank set temperature for continuous 15 secs.
- Force mode OFF
- Tank Mode Operation OFF

(During tank interval or tank mode condition, water pump and 3 ways valve will OFF)

# 14.11 Powerful Operation

Powerful mode is use to increase the capacity of heat pump to achieve higher target temperature. Powerful mode is applicable when heat mode is operating.

#### Remote control setting:

On quick menu of remote control, there is 4 options of powerful mode can be select.

- OFF : Cancel powerful mode
- 30 minutes : Set powerful for 30 minutes
- 60 minutes : Set powerful for 60 minutes
- 90 minutes : Set powerful for 90 minutes

#### **Control contents:**

During the time set by remote control, powerful will activate according to 2 shift up controls. However, this function is applicable only for heating. Remote control will transmit the signal to indoor unit once this function is select then transmit OFF signal to indoor when the timer is complete. Indoor will transmit signal to outdoor for frequency control.

Indoor setting temperature shift

- If system is standard system (Optional PCB is not connected)
  - Target water temperature will shift up to Wlo or Whi whichever higher.
- If system is extension system (Optional PCB is connected)
  - Target water Zone 1 and Zone 2 temperature will shift up to Wlo or Whi whichever higher.

\* If "Direct Type" temperature control is select, this powerful shift up setting is not effective.

- Start condition
  - Powerful function is select by remote control.
- End Condition
  - OFF/ON button is pressed.
  - Powerful function is OFF by remote control.

# 14.12 Quiet Operation

Quiet mode is use to reduce the noise of outdoor unit by reducing the frequency or fan speed.

#### Quiet level

There are 3 level (Level 1, Level 2, Level 3) to set by quick menu function on remote control.

#### **Control content**

Once the quiet function is select, the remote control will transmit the signal to indoor and outdoor unit.

#### Quiet priority

Set whether to prioritize "Sound" or "Capacity"

# In case of "Sound" is set for "Quiet priority" in the function setup of the remote control Start condition

Quiet mode is set on remote control.

Quiet mode is request ON by weekly timer.

### Stop condition

OFF/ON button is pressed. Quiet mode is OFF by remote control. Quiet mode is request OFF by weekly timer.

# In case of "Capacity" is set for "Quiet priority" in the function setup of the remote control Start condition

- 1) Quiet mode is set on remote control.
- 2) Quiet mode is request ON by weekly timer.
- 3) During heating : Water outlet temperature > Target Water Temperature 3°C
- 4) During Cooling : Water outlet temperature < Target Water Temperature + 3°C
- 5) During operation mode when 3 way valve is at tank direction : Tank temperature > Tank set Temperature 3°C

When condition {(1) or (2)} and {(3) or (4) or (5)} is fulfilled, after the quiet mode start by user or timer.

#### Stop condition

1) Quiet mode is OFF by remote control.

- 2) OFF/ON button is pressed.
- 3) Quiet mode is request OFF by weekly timer.
- 4) During heating : Water outlet temperature ≤ Target Water Temperature 5°C for continues 30 minutes
- 5) During Cooling : Water outlet temperature ≥ Target Water Temperature + 5°C for continues 30 minutes
- 6) During operation mode when 3 way valve is at tank direction : Tank temperature <= Tank set temperature 5°C for continues 30 minutes

When any of above mentioned condition is achieved, this control is cancelled.

# 14.13 Sterilization Mode

- Purpose:
  - To sterilize water tank by setting the required boiling temperature.
- Remote control setting
  - Days for sterilization function to start can be select.
  - Time of selected day to start sterilization function.
  - Boiling temperature (Internal heater is  $55^{\circ}C \sim 65^{\circ}C$ )
  - Maximum operation time is 5 minutes to 1 hour.
- Start condition
  - Tank connection set to "YES" by remote control
  - Sterilization function selects "YES".
  - o Sterilization signal received from remote controller by timer.
  - Tank mode request ON.
- Stop condition
  - When boiling timer is completed. Boiling timer (Remote control set maximum operation time) start counting once tank achieve boiling set temperature **OR**
  - After 8 hours of operation since sterilization start.
  - Tank mode request OFF.
- Control content:
  - During sterilization function activation time, target tank set temperature will internally change to boiling set temperature.
  - During sterilization activates, heat pump and heater (external or internal) will operate as normal tank mode to achieve the boiling set temperature.
  - o Sterilization operation will end when stop condition is fulfill.
  - After sterilization is complete, tank set temperature will resume to normal operation.

\* Tank temperature may not achieve boiling set temperature if tank heater is select OFF **OR** external compressor switch.

# 14.14 DHW Circulation Pipe Sterilization Operation

#### Purpose:

This control is designed to prevent legionella for DHW circulation pipe.

#### DHW circulation pipe sterilization mode start conditions

All of the following holds

- 1) Remocon setting : Extra pump = DHW
- 2) Tank sterilization operation is finished.
- 3) Tank sterilization is completed within 490 minutes since sterilization function start

#### DHW circulation pipe sterilization mode stop conditions

Which of the following holds

- 1) After 490 minutes of operation since DHW circulation pipe sterilization start
- 2) Circulation pump operated 30 minutes
- 3) Tank mode Request OFF
- 4) Remocon setting : Extra pump = Heat or NO

#### DHW circulation pipe sterilization mode control contents


It works in the following order.

- 1) Tank sterilization mode is ON
- 2) Tank boiling start Target temp. is RC setting
- 3) Tank sterilization mode finish or stop.
- 4) DHW circulation pump operate during 30 minutes
- 5) Back to normal operation

# 14.15 Outdoor Ambient Thermo OFF Control

#### Purpose:

Stop provides heating to room side during high outdoor ambient condition.

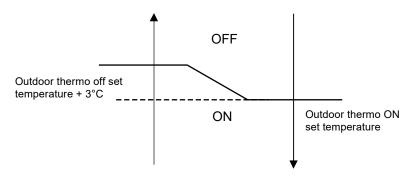

#### Control content:

- Heating outdoor ambient thermo OFF control only applicable when heat pump operate in heat mode. (This control will not activate when running in tank side)
- Heat pump and water pump will turn OFF when outdoor ambient is higher than outdoor thermo OFF set temperature.
- Heat pump will thermo ON back when outdoor ambient < Outdoor thermo ON set temperature and RC delay time has passed after Heating thermo-ON temperature is reached.

# 14.16 Alternative Outdoor Ambient Sensor Control

Purpose of the Alternative Outdoor Ambient Sensor:

 It is some possibility that the air to water heat pump unit will install at a location where the original ambient sensor is expose to direct sunlight. Therefore, another optional ambient sensor can be connect to indoor PCB and locate at new and better reading location to improve the heat pump performance.

#### Control Detail:

- Remocon can select either the extra outdoor ambient sensor is connected or not. (YES/NO)
- The alternative outdoor ambient sensor will connect to indoor unit main PCB terminal.

- when alternative sensor select NO
  - Original Outdoor temperature sensor will use for Indoor & Outdoor heat pump operation reference sensor.
  - Data communication direction : OUTDOOR send outdoor temperature reading to INDOOR.
  - Error judge : OUTDOOR will judge the original outdoor sensor error (F36 display if error detect). No
    judge error on alternative outdoor sensor
- o when alternative sensor select YES
  - Alternative Outdoor temperature sensor will use for Indoor & Outdoor heat pump operation reference sensor.
  - Data communication direction : INDOOR send outdoor temperature reading to OUTDOOR.
  - Error judge : INDOOR will judge the Extra outdoor sensor error only after operation ON request received from remocon.

(F36 display if error detect). No judge error on original outdoor sensor.

# 14.17 Force DHW mode

Purpose:

When user want to use hot water now, user can press this force DWH mode under the quick menu to operate tank only mode to boil up the tank temperature.

#### Remocon setting:

Force DHW function can be activate under quick menu.

Control Content:

- when press the Force DHW function during operation OFF condition:
  - When receive this Force DHW bit from remocon, indoor will run tank only mode regardless of the mode selection.
  - After tank temperature achieve tank thermo off temperature, turn OFF force DHW bit and return to operation OFF with previous mode selection.
  - When press the Force DHW function during operation ON condition:
  - When receive this Force DHW bit from remocon, indoor will memories the running mode and run tank only mode regardless of the mode selection.
    - After tank temperature achieve tank thermo off temperature, turn OFF force DHW bit and return to previous memories running mode.

\* when operation OFF or mode change request from remocon during force DHW mode operation, End force DHW mode and follow the new request operation.

\* Once receive force DHW mode from remocon, indoor direct start tank mode and consider tank thermo ON. Thermo OFF only when achieve tank thermo OFF depend on the Tank System Setting.

### 14.18 SMART DHW mode

Panasonic All In One model provide the option to choose STANDARD DHW Mode or SMART DHW Mode for Tank Heat Up according to requirement. SMART DHW mode comparatively consume lower tank heat up power but longer re-heat time than STANDARD DHW Mode.

#### SMART DHW control

- During SMART DHW start time 20:00 (Default Setting) to SMART DHW stop time 05:00 (Default setting) Heat pump re-heat the tank water only when tank temperature drop below 20°C (Default setting)
- Time between 05:00 to 20:00 Heat pump reheat the tank water when tank temperature as below condition

Condition 1: Tank Heater ON Reheat when tank temperature below tank set temperature + R/C (Tank re-heat Temperature) - 3°C

Condition 2: Tank Heater OFF

Reheat when tank temperature below Tank set temperature or 51°C (Whichever lower) + R/C (Tank re-heat Temperature) -3°C

\* SMART DHW start time, stop time and SMART ON Temperature can change in CUSTOM menu.

# 14.19 Efficiency Tank Mode Operation

Tank mode operation follows NEW control as below when conditions below are fulfilled:

### Start conditions

- 1) All-in-One model selection : YES AND
- 2) DHW capacity = Variable *AND*
- 3) Heating control = Efficiency

### **Control Contents:**

3-way valve direction change to tank side. When Thermo off, 3WV switch to room side. Check TS1 (Tank top sensor) - TS2 (Tank centre sensor) always When [TS1 - TS2] <  $2.5^{\circ}$ C for 40 hours, use TS2 as thermo ON and OFF judgement.

### **Cancel conditions:**

Tank mode operation follows CURRENT (default -8°C) control when ANY of the following is fulfilled:

- 1) All-in-One model selection : NO OR
- 2) DHW capacity = Standard OR
- 3) Heating control = Comfort

### Tank Thermo ON conditions:

- 1) Internal Tank Heater Select AND Tank Heater ON: Tank Temp < Tank Set Temp + R/C (Tank reheat Temp)
- 2a) Tank Heater Select OFF *OR* External Heater Select *AND* 3°C < [TS1 TS2] < 12°C: Tank Temp < 30°C
- 2b) Tank Heater Select OFF *OR* External Heater Select *AND* [TS1 TS2] < 3°C: Tank Temp < Tank Water Set Temp. + R/C (Tank reheat Temp)
- 2c) Tank Heater Select OFF *OR* External Heater Select *AND* [TS1 TS2] > 12°C: Tank Temp < 36°C

### Tank Thermo OFF conditions:

- 1) Internal Tank Heater Select AND Tank Heater ON:
- a) Tank temperature > Tank set temperature + 0°C for continuous 20 seconds after heat pump OFF due to water thermo OFF OR
- b) Tank temperature > Tank set temperature + 1°C for continuous 20 seconds OR
- c) Water outlet temperature > 75°C
- 2) Tank Heater Select OFF OR External Heater Select:
- a) Tank temperature > Tank Water set temperature + 0°C for continuous 20 seconds after heat pump OFF due to water thermo OFF OR
- b) Tank temperature > Tank set temperature + 1°C for continuous 20 seconds

# 14.20 Anti Freeze Control

- Anti freeze protection control menu can be set YES or NO by control panel.
- In heatpump system there are 2 types of anti freeze control:
  - 1. Models with Back up heater (Excluding in Standalone and connection control module):
    - Water pump circulation anti freeze control
      - Water pump turns ON when <u>ALL</u> below conditions are fufilled:
        - Heat pump OFF (Stand by) OR error occurs.
        - $\circ$   $\;$  Water flowing flag is ON.
        - Water flow sensor is not abnormal.
        - Outdoor ambient temp. < 3°C OR outdoor ambient temp. sensor is abnormal.
        - Water inlet/outlet temp. < 25°C
        - After 5 minutes from previous water pump OFF.
      - Water pump turns OFF when **<u>ANY</u>** below conditions is fufilled:
        - Outdoor ambient temp.  $\ge \overline{4^{\circ}C}$
        - During -5°C < Outdoor ambient temp. < 4°C</li>
          - After water pump ON for 4 minutes, and water inlet temp. ≥ 8°C
          - Else, shift to back up heater anti freeze control.
        - During Outdoor ambient temp. < -5°C</li>
          - After water pump ON for 4 minutes, and water inlet temp. ≥ 33°C
          - Else, shift to back up heater anti freeze control.

- However, if flow sensor is abnormal (H62), then water pump circulation anti freeze control will not activate.
- Back up heater anti freeze control
  - Back up heater turns ON when <u>ALL</u> below conditions are fufilled:
    - Water inlet/outlet temp. <  $25^{\circ}C$
    - Water pump circulation anti freeze control activated and water pump ON for 4 minutes.
  - Back up heater turns OFF when <u>ANY</u> below conditions is fufilled:
    - When Outdoor ambient temp. < -5°C, water inlet/outlet temp. >  $33^{\circ}$ C
    - When Outdoor ambient temp.  $\ge$  -5°C, water inlet/outlet temp. > 33°C
  - However, if back up heater is abnormal (H70), then back up heater anti freeze control will not activate.
- 2. Models without Back up heater (Standalone and connection control module):
  - Water pump circulation anti freeze control
    - Water pump turns ON when <u>ALL</u> below conditions are fufilled:
    - Heat pump OFF (Stand by) OR error occurs.
    - Water flowing flag is ON.
    - Water flow sensor is not abnormal.
       Outdoor ambient temp. < 3°C OR outdoor ambient temp. sensor is abnormal.</li>
    - Outdoor ambient temp. < 3 C OK ou</li>
       Water inlet 2 / outlet 2 temp. < 25°C</li>
    - After 5 minutes from previous water pump OFF.
    - Water pump turns OFF when ANY below conditions is fufilled:
      - Outdoor ambient temp.  $\ge \overline{4^{\circ}C}$
      - During 0°C < Outdoor ambient temp. < 4°C
        - After water pump ON for 4 minutes, and water inlet temp.  $\geq 26^{\circ}$ C
        - Else, shift to back up heater anti freeze control.
      - During Outdoor ambient temp. < 0°C
        - After water pump ON for 4 minutes, and water inlet temp. ≥ 28°C
        - Else, shift to back up heater anti freeze control.
    - However, if flow sensor is abnormal (H62), then water pump circulation anti freeze control will not activate.
  - Heat pump unit operation anti freeze control
    - Heat pump unit operation turns ON when <u>ALL</u> below conditions are fufilled:
    - Water pump circulation anti freeze control activated and water pump ON for 4 minutes.
    - Heat pump unit operation turns OFF when <u>ANY</u> below conditions is fufilled:
      - Water inlet / Water inlet 2 temp. > 40°C for 3 minutes.

### 14.20.1 Zone Anti-Freeze Control

• If buffer tank selection is "NO" and Anti- Freeze function select "NO" from remote control, this control cannot activate.

Start condition:

- After [5] min from previous Zone pump off. AND
- Outdoor air temp < [3] °C OR Outdoor sensor is abnormal. AND</li>
- Zone water temperature < [6]°C OR Zone Sensor Short or Open

Cancel condition:

- After water Zone pump ON [4] min AND
- Outdoor air temp ≥ [4]°C **OR**
- During -5 °C ≤ Outdoor air temp < [4] °C OR Zone water temperature sensor > [8] °C
- During Outdoor air temp < [-5] °C</li>
   Zone water temperature sensor > [20] °C
   \*However, Zone water temperature sensor is Open or Short, Condition C and D is ignored.


# 14.21 Solar Operation (Optional)

### 14.21.1 Solar Operation:

Solar function:

 This function allow user to control the solar pump to operate depend on the solar sensor reading compare to the tank installed. Solar pump will circulate the hot water energy store at solar panel to heat up the DHW Tank or Buffer Tank.

Solar Connection Diagram:

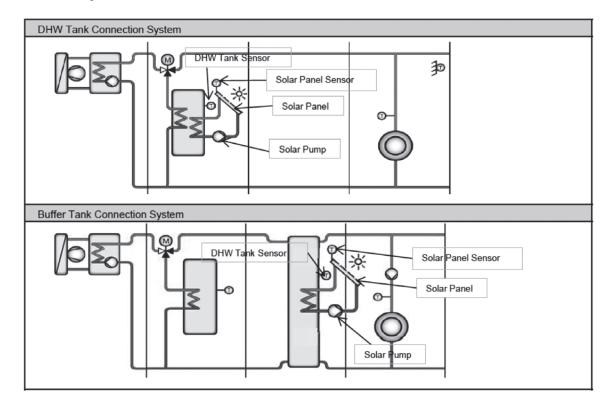

- Solar function can only enable when the Optional PCB is connected.
- Few part as below need to install to control the solar operation:
  - Solar Panel
  - o Solar Pump
  - Solar Panel Sensor
  - Tank Sensor (Buffer tank sensor OR DHW Tank sensor depend on the connection direction)
     \* During Solar Connection to the system, installer need to alert on the high water temperature may flow to the zone circuit or DHW piping circuit. Therefore pipe which withstand higher water temperature need to be installed.
- Solar remote control setting
  - 1 Solar Setting can only be set when the optional PCB connection is select "YES"
  - 2 By remote controller, Setting as below list can be set for solar function operation (Installer Menu)
    - Solar Function ("YES" or "NO)
    - Tank Connection Direction ("DHW TANK" or "BUFFER TANK")
    - Delta T turns ON: Difference temperature setting between solar panel sensor and Tank to turn on solar pump. (Range :5 ~ 15°C)
    - Delta T turns OFF: Difference temperature setting between solar panel thermistor and Tank to turn off solar pump. (Range :2 ~ 10°C)
    - Outdoor temp for Anti-Freeze : Outdoor temp to start Anti-Freeze control for solar circuit. (Range : -20 ~ 10°C)
    - Tank Temperature HI Limit Set (Range : 70 ~ 90°C)

### 14.21.2 Solar Operation Control

• Solar function can only be activate if the solar function selection "YES" from remote control. To achieve hot water from solar panel, indoor need to control the solar pump and circulate hot water from solar panel.

Under normal case:

- Solar pump start condition:
  - Solar panel temperature > Delta T turn on setting temp (R/C) + Tank temperature (depend on selection, DHW or Buffer) AND
    - Tank temperature (DHW or Buffer) < Solar HI Limit Temp (R/C) AND</li>
    - Operation ON with heat mode (apply to solar connect to "Buffer Tank" case)

\* Condition c) ignore if the solar system is connect to DHW tank (control active under operation OFF time for Tank connection case)

- Solar pump stop condition:
  - Solar panel temperature < Delta T turn OFF setting temp (R/C) + Tank temperature (depend on selection, DHW or Buffer) OR
  - Tank hot water temp >= Solar HI Limit Temp (R/C) + [2]°C

Under solar Anti-freeze protection control:

- Solar pump start condition:
- Outdoor temp < Outdoor temp setting for Anti-Freeze (R/C)</li>
- Solar pump stop condition:
  - Outdoor temp > Outdoor temp setting for Anti-Freeze + [2]°C

\*\*However, During Cool mode this function cannot activate if Tank selection is "Buffer Tank".

\*\*Solar pump can operate even if Heat pump is under error stop.

• Solar operation during error:

0

- o During Tank sensor (DHW or Buffer depend on selection) abnormal, Solar operation will not able to function.
- o During Solar Panel sensor detect OPEN (not include SHORT), Solar operation will not able to function too.

# 14.22 Boiler Bivalent Control

- Boiler is an additional or alternative heat source to heat up the room when necessary.
- Purpose of this control is to turn ON and turn OFF the Boiler output signal when boiler heating capacity needed in the system.
- Boiler is possible to connect to DHW Tank and Buffer Tank depends on the installer.
- Boiler operation parameter need to be set on Boiler itself, indoor do not control the boiler operation direction and operation.
- There are Alternative mode, Parallel mode, & Advance Parallel mode available to select by installer to fit to the total system.

#### Bivalent control selection by remote controller

Remote control setting value: 1 Outdoor Ambient Set = (Range: -15°C ~ 15°C)

#### • Alternative Mode

• Only one heat source operates at one time, either heat pump or boiler depends on condition.

#### Control detail:

During Operation ON at Heat mode or Tank mode or Heat + Tank Mode

- Boiler signal turn ON and heat pump and water pump turn OFF when:
  - Outdoor ambient < Outdoor Ambient Set AND</li>
  - Boiler prohibit flag = 0

\*\* However water pump can operate when Anti-freeze control condition fulfilled.

- Boiler signal turn OFF and heat pump and water pump turn ON when:
  - Outdoor ambient > Outdoor Ambient Set + [2°C] OR
  - Boiler prohibit flag = 1

#### Parallel Mode

 Parallel mode allows heat pump and boiler ON at the same time. Boiler operates as an additional heating capacity when low heat pump capacity at low ambient condition.

### Control detail:

0

0

During operation ON at Heat mode or Tank mode or Heat + Tank mode

- Boiler signal turns ON when:
  - Outdoor ambient < Outdoor Ambient Set AND</li>
- Boiler prohibit flag = 0
- Boiler signal turns OFF when:
- Outdoor ambient > Outdoor Ambient Set + [2°C] OR
- Boiler prohibit flag = 1

#### • Advance Parallel Mode

• Advance parallel mode allow heat pump to operate and turn ON boiler only when ambient and temperature condition is fulfilled.

Remote control setting value:

- 1 Outdoor Ambient Set = (Range : -15°C ~ 15°C)
- 2 Selection of boiler connection direction. (Heat only, DHW only, Heat & DHW)
- 3 Setting data under Heat Direction
  - Start Temperature | START\_TEMP |
  - Start Delay Timer | START\_TIMER |
  - Stop Temperature | STOP\_TEMP |
  - Stop Delay Timer | STOP\_TIMER |
- 4 Setting data under DHW Direction
  - Delay Timer | DELAY\_TIMER |

#### Control detail:

During operation ON at Heat Mode

- Boiler signal turns ON when
  - Outdoor ambient < Outdoor Ambient Set AND</li>
  - Buffer tank temperature < Target Buffer Tank Temperature + [START\_TEMP] for [START\_TIMER]</li>
     AND
  - Heat pump operate at room side AND
  - Connection of Boiler to Heating Select "YES" From installer menu AND
  - Buffer Tank connection select "YES" AND
  - Boiler prohibit flag = 0
- Boiler signal turns OFF when
  - Outdoor ambient > Outdoor Ambient Set + [-2°C] OR
  - Buffer Tank temperature > Target Buffer Tank temperature + [STOP\_TEMP] for [STOP\_TIMER] OR
  - Heat pump not at room side. OR]
  - Boiler prohibit flag = 1

#### During operation ON at Tank Mode

- o Boiler signal turns ON when
  - Outdoor ambient < Outdoor Ambient Set AND</li>
  - Heat pump operate at tank side for continuous | DELAY\_TIMER | AND
  - Connection of Boiler to DWH Tank select "YES" from installer menu. AND
  - Boiler prohibit flag = 0
- Boiler signal turns OFF when
  - Outdoor ambient > Outdoor Ambient Set + [2°C] OR
  - Heat pump not operates at tank side. OR
  - Boiler prohibit flag = 1

#### Boiler prohibit flag control

#### Purpose:

• For product safety. Boiler signal is OFF when water temperature is too high.

#### Start condition:

- Water outlet ≥  $85^{\circ}$ C continues for 5 minutes.
- Water inlet ≥  $85^{\circ}$ C continues for 5 minutes.
- Zone1 water temp ≥ 75°C continues for 5 minutes.
- Zone2 water temp  $\geq$  75°C continues for 5 minutes.

Contents:

After start condition fulfilled, set boiler prohibit flag = 1

Cancel condition:

o After 30 minutes from start condition fulfilled.

Contents:

Set boiler prohibit flag = 0

# 14.23 External Room Thermostat Control (Optional)

Purpose:


1 Better room temperature control to fulfill different temperature request by external room thermostat. Recommended external room thermostat:

Maker	Characteristic
Siemen (REV200)	Touch panel
Siemen (RAA20)	Analog

Connection of external room thermostat:

Wire Connection and thermo characteristic of Siemen REV200:


Setting	L/L1 (H)	Heat Thermo	L/L2 (C)	Cool Thermo
Set Temp < Actual Temp	Open Circuit	OFF	Short Circuit	ON
Set Temp > Actual Temp	Short Circuit	ON	Open Circuit	OFF

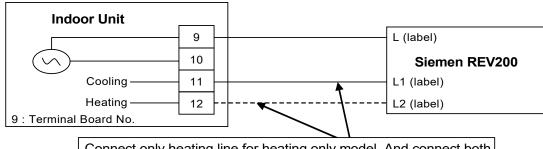

Connect only heating line for heating only model. And connect both heating and cooling line for heat + cool model.

Wire Connection and thermo characteristic of Siemen RAA20:

Setting	L/Y1 (H)	Heat Thermo	L/Y2 (C)	Cool Thermo
Set Temp < Actual Temp	Open Circuit	OFF	Short Circuit	ON
Set Temp > Actual Temp	Short Circuit	ON	Open Circuit	OFF

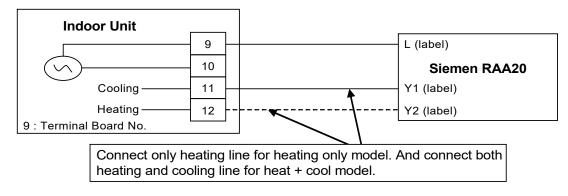

Control Content:

- External room thermostat control activate only when remote thermostat connection select YES by Indoor control
  panel.
- When indoor running heat mode, refer thermo On/Off from heating line feedback. And when indoor running cool mode, refer thermo On/Off from cooling line feedback.
- Heat pump Off immediately when receive thermo off feedback.


# 14.24 Three Ways Valve Control

Purpose:

- 3 ways valve is used to change flow direction of hot water from heat pump between heating side and tank side.

Control contents:

- 1 3 ways valve switch Off:
  - During 3 ways valve switch Off time, the hot water will provide heat capacity to heating side. 0
- 3 ways valve switch On: 2
  - During 3 ways valve switch On time, the hot water will provide heat capacity to tank side. 0
- 3 Stop condition:
  - During stop mode, 3 ways valve will be in switch off position. 0

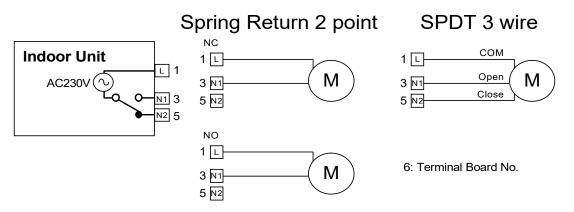

СОМ

Open

Close

Μ

\* During pump down and force mode, fix 3 ways valve in close condition.

\* Recommended Parts : SFA 21/18 (Siemens)


# 14.25 Two Ways Valve Control

Functionality of 2 ways valve:

Use to allow hot water to floor heating panel or block cold water to floor heating panel.

Control contents:

- When indoor running in heat mode, OPEN the 2 ways valve. 1
- When indoor running in cool mode, CLOSE the 2 ways valve. 2
- 3 Stop condition:
  - a. During stop mode, fix 2 ways valve in close condition.

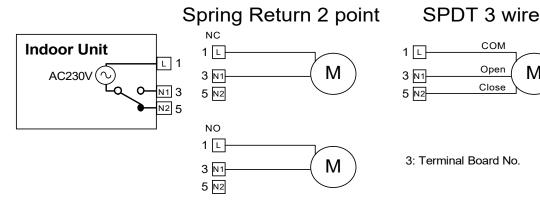

\* During pump down mode, fix 2 ways valve in close condition.

\* During force mode, open 2 ways valve.

\* Recommended Parts : SFA 21/18 (Siemens)

# 14.26 Anti-Stick Mode Operation

This mode is a control to prevent the water circuit actuator from locking up if not used for an extended period of time.

#### Start conditions

- 1) A.M 3:00 o'clock every Monday.
- 2) Anti-stick mode = Enable. (Anti-stick mode is selected in custom menu)

#### **Control Contents:**

It works in the following order.


- 1) If any mode operated, all operation is stopped.
- 2) Anti-stick mode operates
- 3) If Anti-stick mode finished, back to the last operation.

#### **Cancel conditions:**

- Which of the following holds
- 1) Anti-stick mode is finished.
- 2) When the customer manually starts any mode operation. (include weekly timer, sterilization mode)


#### Anti-stick mode

If zone 2 or pool or solar are not connected, they are skipped

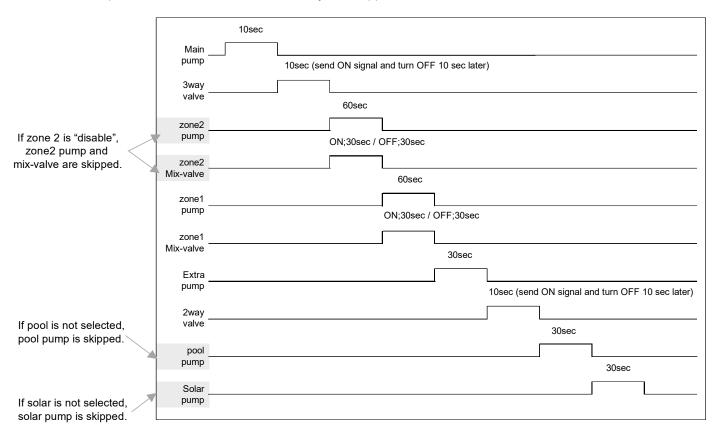

# 14.27 External OFF/ON Control


• Communication circuit between indoor unit and external controller is as per below.

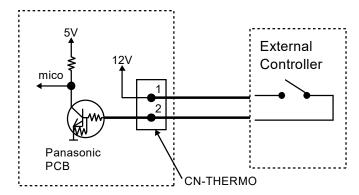

- Maximum length of communication cable is 50 meter.
- Control content:

External Control Switch	Control Panel OFF/ON	Control Panel Power LED	System Status
ON	ON	ON	ON
ON	OFF	OFF	OFF
OFF	ON	ON	OFF
OFF	OFF	OFF	OFF

Remocon Screen Display and Control Detail:

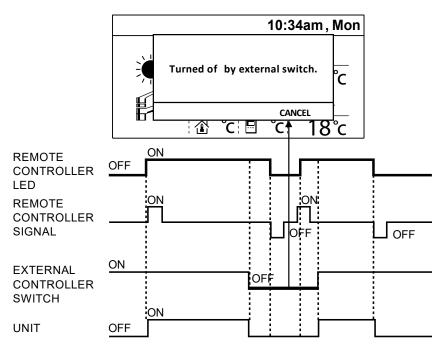

When External SW connection select "YES" from remocon installer menu:

- Heating or Cooling system will operate normally if the External Switch signal is ON.
- Once the External Switch turn OFF, System Turn OFF (Heat pump, water pump, heater etc...)
- Remocon LED remain ON or OFF according to the current operation request.
- Pop up menu at remocon main screen as above screen to inform customer system stop by External Switch.
- It is possible to press cancel and return to main screen to do change of operation setting while waiting the External Switch turn ON back.
- Remocon LED will always follow the latest changes from remocon.
- If no action on remocon for continuous 5 minutes, the pop up screen will show again on the screen.
- But once the External Switch Turn ON back, pop up screen will disappear and system can operate normally according to the latest operation setting and request.

# 14.28 External Compressor Switch (Optional PCB)

External compressor switch port can have two purpose of control as below:

- Heat source ON/OFF function (Remocon select "Heat source")
- Heater ON/OFF function (Remocon select "Heater")
- Heat source ON/OFF function

#### Purpose:

• Heat pump ON/OFF function is use to turn OFF the high power consumption device (Heat pump, & Heater) when there is energy or electric current limitation. Other optional function still can be operate under heat pump and heater OFF condition.

Control Detail:

- This External Compressor Switch is possible to connect to Optional PCB only.
- Once the remocon select External Compressor Switch connection "YES", & select "Heat source" This heat pump ON/OFF function will activate
- The ON/OFF signal of this External Compressor Switch is same as External Switch.
- When the External Compressor Switch is ON:
- Heat pump system operate normally
- When the External Compressor Switch is OFF:
  - o Heat pump, Water pump & Heater (Booster heater & Backup Heater) need to turn OFF
  - Solar, Boiler and zone control can be operate follow normal control condition.
    - \* pump delay OFF also included in this control

(There is NO pop up screen like External Switch when this External Compressor Switch is OFF.)

Heater ON/OFF function

#### Purpose:

• Heater ON/OFF function is use to turn OFF the heater (backup heater & booster heater) when there is energy or electric current limitation. Heat pump and other optional function still can operate.

Control detail:

- This External Compressor Switch is possible to connect to Optional PCB only.
- Once the remocon select External Compressor Switch connection "YES", & select "Heater" This heater ON/OFF function will activate
- When the External Compressor Switch is ON:
   Heat pump and heater operate normally
- When the External Compressor Switch is OFF:
  - Backup heater and booster heater cannot operate even heater request is ON.
  - Heat pump and option function (Solar, Boiler and zone control) can be operate follow normal control condition.

(There is NO pop up screen like External Switch when this External Compressor Switch is OFF.)

# 14.29 Heat/Cool Switch (Optional PCB)

#### Purpose:

• User can switch the running mode from heat to cool or cool to heat through external installed Heat/Cool switch. This kind of heat / cool switch may built in inside the field supply room remocon as well.

Control contents:

- Heat/Cool Switch can only be set when Cool Function is "enable" at custom menu setting, & Extension PCB select "YES" & Zone 1 not set "Pool" condition.
- This heat/cool switch control will be activate only when installer set the Heat/Cool Switch "USE" through remocon.
- Once the Heat/Cool Switch Set "USE", remocon will check indoor send Signal to judge the option of mode select.
  - When Heat/Cool Switch Contact Open : Remocon only can select Heat Mode, or Heat + Tank Mode, or Tank Mode
  - When Heat/Cool Switch Contact Close : Remocon only can select Cool Mode, or Cool + Tank Mode, or Tank Mode


- Operation ON/OFF will depend on remocon request.
- When Heat Mode is running with Contact Open, user change this setting to contact close, indoor will this signal to remocon judge and change mode to cool and send back to indoor. And it is same as from cool mode change to heat mode.
  - \* This switch have higher priority, remocon follow indoor send signal when control activated.
  - \* There is no effect to the operation when the mode running is only Tank Mode.

(Weekly Timer are ignored and cannot be set during Heat / Cool Switch is "Enable" Condition.)

# 14.30 SG Ready Control (Optional PCB)

Purpose:

• To set ON/OFF of heat pump and target temperature by digital input of third party device if necessary in field.

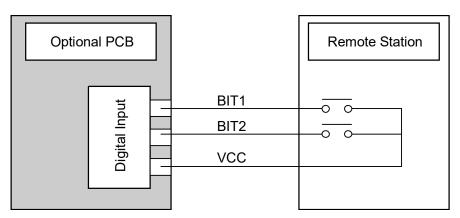

#### Remote control setting

For this function, following items need to be set on R/C (installer menu) -

- SG control = YES or NO
  - Capacity up setting 1
    - Heating capacity [50 ~ 150 %]
    - DHW capacity [50 ~ 150 %]
    - Cooling capacity [-15 ~ 0 °C]
- Capacity up setting 2
  - Heating capacity [50 ~ 150 %]
  - DHW capacity [50 ~ 150 %]
  - Cooling capacity [-15 ~ 0 °C]
- HPU stop consumption [0.5 ~ 10.0 kW]
- Power consumption setting 1
  - Heating Power consumption [0.5 ~ 10.0 kW]
  - DHW Power consumption [0.5 ~ 10.0 kW]
  - Cooling Power consumption [0.5 ~ 10.0 kW]
- Power consumption setting 2
  - Heating Power consumption [0.5 ~ 10.0 kW]
  - DHW Power consumption [0.5 ~ 10.0 kW]
  - $\circ$  Cooling Power consumption [0.5 ~ 10.0 kW]

### Control contents:

If SG control on remote control = "Yes", then following control only activate by digital input.

- While Digital input is " 00 " (Normal operation)
  - Normal operation. Once detect '00' system will operate back to normal condition.
     (All the target set temperature for heating side and DHW side will return back to previous set temperature when digital signal change from "10' or"11" back to "00".)
- While digital input is detected " 01 " (HP stop)
  - Heat pump & room heater & tank heater cannot operate.
    - (Solar control and Boiler back up and 2 Zone control can activate.)

### • While digital input is detected " 10 " (Capacity 1)

- Target temperature for heating and DHW Tank is changed according to the percentage set by Remote control setting. However, which setting temperature is change depend on system setting.
- Target temperature of cooling is change according to the adjustment value set by remocon setting.

### While digital input is detected " 11 " (Capacity 2)

- Target temperature for heating and DHW Tank is changed according to the percentage set by Remote control setting. However, which setting temperature is change depend on system setting.
- Target temperature of cooling is change according to the adjustment value set by remocon setting.
- While digital input is detected " 10 " (Capacity 1)
  - Setting temperature for heating and Tank is changed.
     However, which setting temperature is change depend on system setting.

#### If Buffer selection is "YES"

Room side

New Target Buffer tank temperature = Current Target Buffer Tank Temperature \* Remote Control setting (" capacity 1) %

\* Max Min regulation is follow Target Buffer tank temperature control specification

\*\* No change of Target zone water temperature, only set higher buffer tank temperature.

#### DHW Tank side

New Tank Set Temperature = Tank Set Temperature \* Remote Control setting for DHW ("Capacity 1) % \* (Max regulation depend on the tank max setting limit)

#### If Buffer selection is "NO"

Room side

New Target Zone Water Temperature = Current Target Zone Water Temperature \* Remote Control Setting (\*Capacity 1) %

(Zone 1 and Zone 2 will change according to its own target zone water temperature.)

(Max regulation depend on the temperature control type select)

#### DHW Tank side

New Tank Set Temperature = Tank Set Temperature \* Remote Control setting for DHW ("Capacity 1) % \* (Max regulation depends on the tank max setting limit)

Setting temperature for cooling is changed

New Target water temperature = target water temperature + R/C setting for cool (\*Capacity 1) \* (Min/max regulation of cooling water set apply)

#### • While digital input is detected " 11 " (Capacity 2)

Setting temperature for heating and Tank is changed.
 However, which setting temperature is change depend on system setting.

#### If Buffer selection is "YES"

Room side

New Target Buffer tank temperature = Current Target Buffer Tank Temperature \* Remote Control setting (" capacity 2) %

\* Max Min regulation is follow Target Buffer tank temperature control specification

\*\* No change of Target zone water temperature, only set higher buffer tank temperature.

#### DHW Tank side

New Tank Set Temperature = Tank Set Temperature \* Remote Control setting for DHW ("Capacity 2) % \* (Max regulation depends on the tank max setting limit)

#### If Buffer selection is "NO"

<u>Room side</u>

New Target Zone Water Temperature = Current Target Zone Water Temperature \* Remote Control Setting (\*Capacity 2) %

(Zone 1 and Zone 2 will change according to it's own target zone water temperature.)

(Max regulation depend on the temperature control type select)

#### DHW Tank side

New Tank Set Temperature = Tank Set Temperature \* Remote Control setting for DHW ("Capacity 2) % \* (Max regulation depends on the tank max setting limit)

\*\* This function is not applicable for Cooling mode.

#### Setting temperature for cooling is changed

New Target water temperature = target water temperature + R/C setting for cool (\*Capacity 2) \* (Min/max regulation of cooling water set apply)

#### HPU stop consumption

Operation will stop when the power consumption of the entire system exceeds (HPU stop consumption kW).

#### • While digital input is detected " 10 " (Power consumption 1)

#### Room side

Operate with the target of reducing power consumption to (Heating Power consumption 1) or less.

#### DHW Tank side

Operate with the target of reducing power consumption to (DHW Power consumption 1) or less.

Cool mode

Operate with the target of reducing power consumption to (Cooling Power consumption 1) or less.

#### • While digital input is detected " 11 " (Power consumption 2)

#### Room side

Operate with the target of reducing power consumption to (Heating Power consumption 2) or less.

#### DHW Tank side

Operate with the target of reducing power consumption to (DHW Power consumption 2) or less.

#### Cool mode

Operate with the target of reducing power consumption to (Cooling Power consumption 2) or less.

# 14.31 Demand Control (Optional PCB)

#### Remote control setting:

• When Optional PCB connection select 'YES", Demand Control function can select "YES" or "NO".

#### Purpose:

- After the demand control select YES, below control will activated.
  - 0-10V Demand control

#### 0-10V Demand control

• Demand control is use to reduce the current usage of heat pump unit by third party device.

#### Control start condition:

- Select "YES" at Demand control at installer menu.
- 0-10V input for this electrical current control is detected.

#### Control content:

- If start condition is fulfilled, indoor will receive the voltage signal from optional PCB. Indoor will send the rate value to outdoor unit.
- Outdoor will change the current limit according to the percentage receive from indoor unit.

# 14.32 Holiday Mode

• Purpose:

Promotes energy saving by allowing the user to stop the system during holiday and enables the system to resume at the preset temperature after holiday.

- Control details:
  - Indoor operate the unit according running mode request. Target temperature will follow holiday setting temperature.
    - If heat mode request is receive, Target Water Out Temperature will change according to holiday shift temperature set.
      - [If heat is set OFF at holiday, unit, water pump and zone control will OFF]
    - If tank mode request is receive, Target Tank Set Temperature will change according to the holiday tank shift temperature set.
      - [If tank is set OFF at holiday, heat pump and tank heater will OFF]
  - After days of holiday have been set, heat pump will stop and only resume operation at the end of holiday countdown.
- Start condition:
  - Holiday timer set and the holiday timer start
    - \* The day holiday mode was set is counted as day 1.
- Stop condition:
  - OFF/ON button is pressed.
  - Holiday timer is reached.

# 14.33 Dry Concrete

Purpose
 Provide heat to flor

Provide heat to floor heating panel and dry the wet concrete during installation.

- Setting condition:
  - o Dry concrete parameter can be set through remote control under system setup.
  - Parameters are possible to set up to 99 days with different target set temperature
- Control details:
  - o Dry concrete mode will be activates when select ON from service setup.
  - Once start dry concrete function, remote control will send step 1 setting temperature to indoor unit.
     \* This temperature is set at zone temperature. If system is 2 zones, both zone target temperature is set as same temperature.
  - Heat pump will start heat mode operation to room side with received target water outlet temperature.
     \* Heat pump will operate according to Heat pump Target Water Temperature.
  - After complete day 1 setup operation, day 2 data will be send to indoor at 12.00am on the second day.
  - Each preset data will be send every day until dry concrete mode is complete, unit will turns OFF and exit dry concrete function.
  - o 3 ways valve and booster heater will turn OFF and 2 ways valve will turns ON.
- Cancel condition:
  - o Dry concrete mode is complete and OFF signal is received.
  - OFF signal is received by pressing OFF/ON button.

# 14.34 Flow Sensor

- The water flow sensor serves as an overload protector that shuts down the unit when the water level is detected to be low.
- Abnormal flow detection:

Sequence Abnormal flow		Normal flow
Normal case	Flow rate < 8 I/min or ≧ 69 I/min	≧ 8 l/min
During status 2~6 on Anti-freeze deice	≧8 l/min	< 8 l/min

# **15. Protection Control**

# 15.1 Protection Control for All Operations

### 15.1.1 Time Delay Safety Control

1 The compressor will not start for three minutes after stop of operation.

### 15.1.2 30 Seconds Forced Operation

- 1 Once the compressor starts operation, it will not stop its operation for 30 seconds.
- 2 However, it can be stopped using control panel at indoor unit.

### 15.1.3 Total Running Current Control

- 1 When the outdoor running current exceeds X value, the compressor frequency will decrease.
- 2 If the outdoor running current does not exceed X value, the compressor frequency will return to normal operating frequency.
- 3 If the outdoor running current continue to increase till exceed Y value, compressor will stop, and if this occurs 3 times within 20 minutes, system will stop operation and OFF/ON control panel LED will blink (F16 error occurs).


	WH-WXG09ME8		WH-WXG12ME8		WH-WXG16ME8	
Operation Mode	X (A)	Y (A)	X (A)	Y (A)	X (A)	Y (A)
Heating	11.8	14.8	13.8	16.8	18.0	21.0
Cooling	9.0	14.8	9.0	16.8	9.0	21.0

A. DC Peak Current Control

- 1 When the current to IPM exceeds set value of 60.5 A, compressor will stop. Compressor will restart after three minutes.
- 2 If the set value exceeds again for more than 30 seconds after the compressor restarts, operation will restart after two minutes.
- 3 If the set value exceeds again for within 30 seconds after the compressor restarts, operation will restart after one minute. If this condition repeats continuously for seven times, system will stop operation and OFF/ON control panel LED will blink (F23 error occurs).

### 15.1.4 Compressor Overheating Prevention Control

 The compressor operating frequency is regulated in accordance to discharge temperature as shown in below figures. When the discharge temperature exceeds 107°C, compressor will stop, and if this occurs 4 times within 30 minutes, system will stop operation and OFF/ON control panel LED will blink (F20 error occurs).

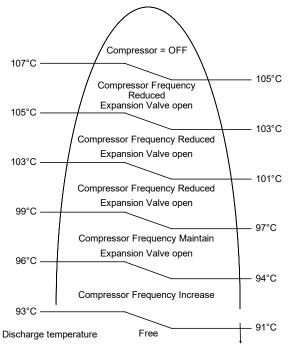


### 15.1.5 High Pressure Sensor Control

- Purpose:
  - To protect the system operation.
- Detection period:
  - After compressor on for 1 minute.
- Detection conditions:
- When abnormal high voltage detection, 5 V or when open circuit detection 0V for 5 seconds continuously.
- After detection:
  - When abnormality is detected 4 times within 120 minutes, unit stop operation.
  - OFF/ON control panel LED will blink (H64 error occurs).

# 15.1.6 Outside Temperature Current Control

Heating

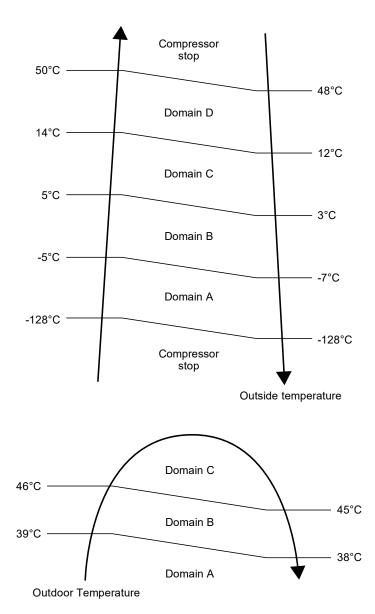

Cooling

### 15.1.7 Pre-Heat Control

• Purpose:

For compressor protection during low outdoor ambient operation (during heating low temperature operation).
Control content:

- a. Trigger Pre-Heat Control condition
  - When the outdoor air temperature is below than -10°C, and discharge temperature is -10°C or below.
- b. Resetting Pre-Heat Control condition
  - 1. When the outdoor air temperature exceeds entry condition (3°C)

2. When the discharge temperature exceeds entry condition (3°C)

# 15.2 Protection Control for Heating Operation

### 15.2.1 Outdoor Air Temperature Control


The maximum current value is regulated when the outdoor air temperature rises above 14°C in order to avoid compressor overloading.

### 15.2.2 Deice Operation


When outdoor pipe temperature and outdoor air temperature is low, deice operation start where outdoor fan motor stop.

• Deice judging condition

Outdoor Unit Deice Control

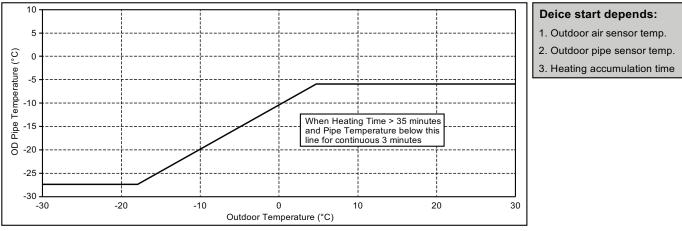

• Deice operation time diagram

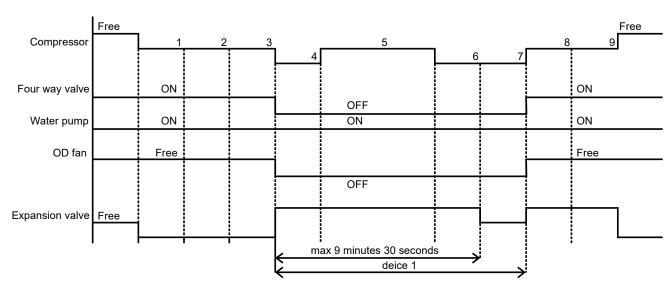


a. Deice mode 1 control:

# 15.3 Protection Control for Cooling Operation

### 15.3.1 Outdoor Air Temperature Control

- The Compressor operating frequency is regulated in accordance to the outdoor air temperature as shown in the diagram below.
- This control will begin 1 minute after the compressor starts.
- Compressor frequency will adjust base on outdoor air temperature.

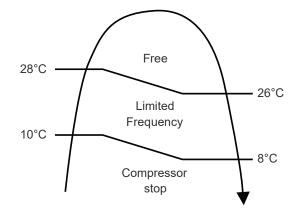

### 15.3.2 Freeze Prevention Control 1


- 1 When refrigerant temperature is lower than 0°C continuously for 10 seconds, compressor will stop operating.
- 2 Compressor will resume its operation three minutes after the refrigerant heat exchanger is higher than 2°C.
- 3 Heat exchanger freeze prevention (H99) will memory in error history.

# 16. Servicing Guide

## 16.1 How to take out Front Plate

## Open and Close Front Plate 18

- 1 Remove the 2 mounting screws of Front Plate 18.
- 2 Slide it upwards to unhook the Front Plate (18) hook.
- 3 Reverse above steps 1~2 for close it.

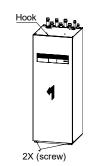



The remote control cable is connected to the front panel, so be careful when removing the panel.

## 16.2 Test Run

- 1 Before test run, make sure below items have been checked:
  - a) Pipework are properly done.
  - b) Electric cable connecting work are properly done.
  - c) Tank Unit is filled up with water and trapped air is released.
  - d) Please turn on the power supply after filling the tank until full.
- 2 Switch ON the power supply of the Tank Unit. Set the Tank Unit RCCB/ELCB to "ON" condition. Then, please refer to the Operation Instruction for operation of Remote Controller (1).

#### Note:

• During winter, turn on the power supply and standby the unit for at least 15 minutes before test run. Allow sufficient time to warm up refrigerant and prevent wrong error code judgement.

- 3 For normal operation, Water Pressure reading should be in between 0.5 bar and 3 bar (0.05 MPa and 0.3 MPa) If necessary, adjust the Water Pump ④ SPEED accordingly to obtain normal water pressure operating range. If adjust Water Pump ④ SPEED cannot solve the problem, contact your local authorized dealer.
- 4 After test run, please clean the Magnetic Water Filter Set (9) and Water Filter Set (30). Reinstall it after finish cleaning.


# 16.3 Expansion Vessel (13) Pre Pressure Checking

## For Space Heating / Cooling

- Expansion Vessel (13) with 10 L air capacity and initial pressure of 1 bar is installed in this Tank Unit.
- Total amount of water in system should be below 200 L. (Inner volume of Tank Unit's piping is about 5 L)
- If total amount of water is over 200 L, please add another expansion vessel. (field supply)
- Please keep the installation height difference of system water circuit within 10 m. (Extra pump may be required)

# 16.4 Pump Down Procedures

Refer below steps for proper pump down procedure.

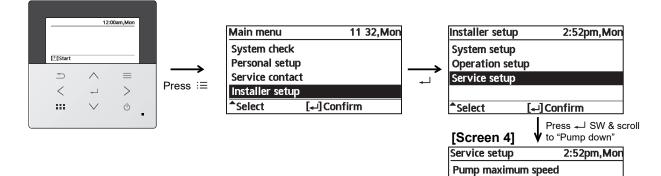

Pump down Dry concrete

Service setup

Pump down

Se Pi

[()]Start

Service contact

[+-]Confirm

[₊]Confirm

ON

Pump down operation in progress!

[①]0FF

৵

3 03pm,Mon


<u>- ^---- 11</u>50

3:04pm,Mon

€

⊅

# 16.5 How To Adjust Pump Speed

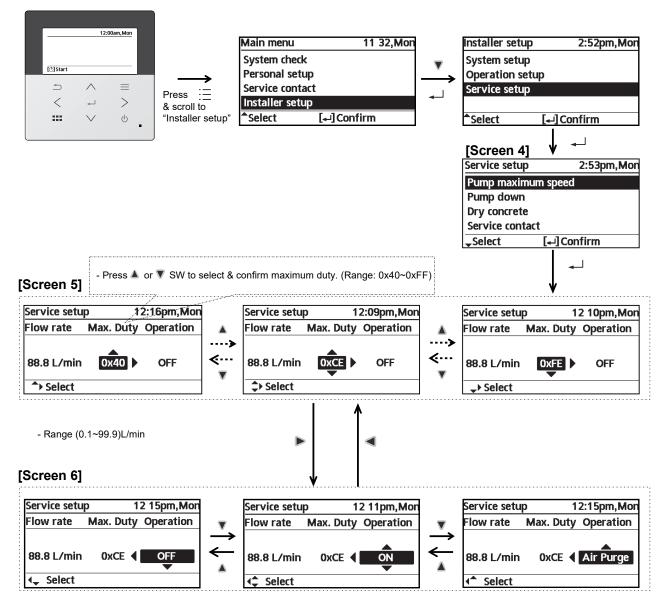


Press ▲ or ▼ SW to select & confirm operation

## NOTE:

- 1. Whenever at [Screen 5], if press 🕑 SW to OFF, pump operation should be turned OFF.
- 2. Whenever at [Screen 6], if press 0 SW to OFF, pump operation should be turned OFF.

# 16.6 How To Unlock Cool Mode

Operation must be OFF

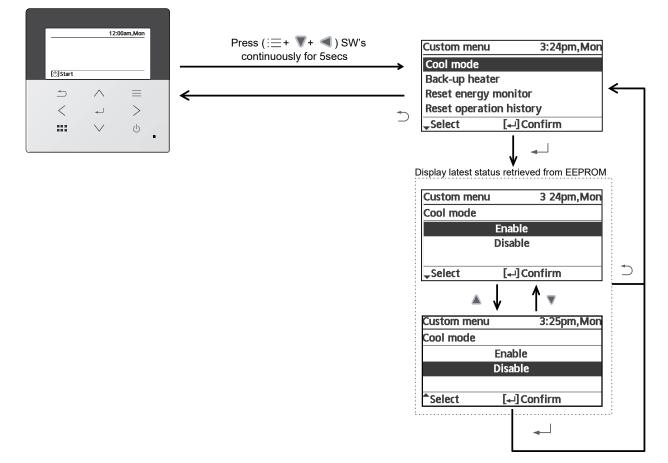


## 16.7 EEPROM Factory Default Data Setup Procedure



- EEPROM default data setup is only possible during initialization process.

- Press (  $\blacktriangle$  ,  $\nabla$ ,  $\blacktriangleleft$  ,  $\blacktriangleright$  ) simultaneously for 5secs continuously, initialization process will stop & EEPROM default data setup process will start.


During EEPROM default data setup process, display should be as shown below.

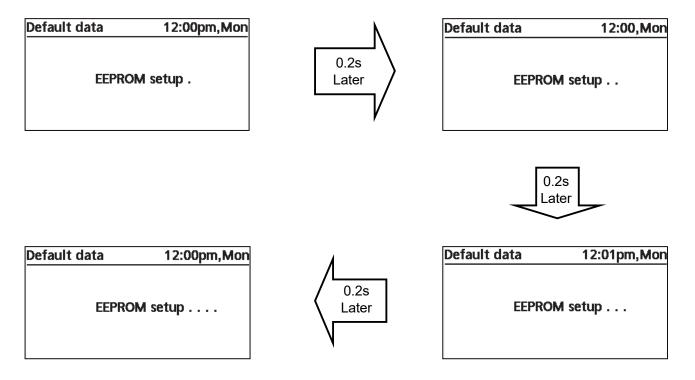


- Once EEPROM default data setup process is complete, initialization process will re-start from beginning.

Initialization	12:00,Mon	]←───	Real time and date will blink
Initializing .			

# 16.8 Dry Concrete Setup

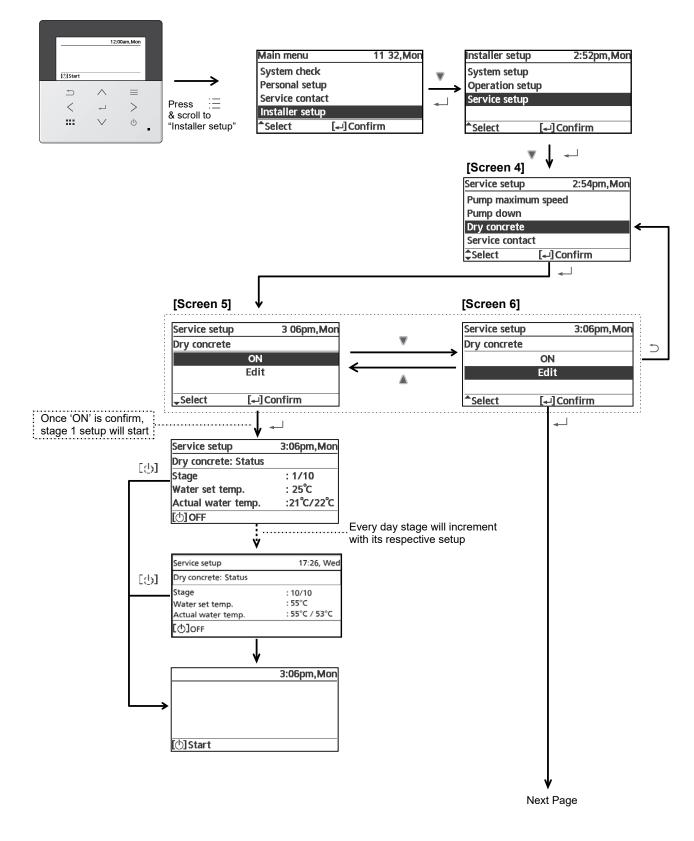

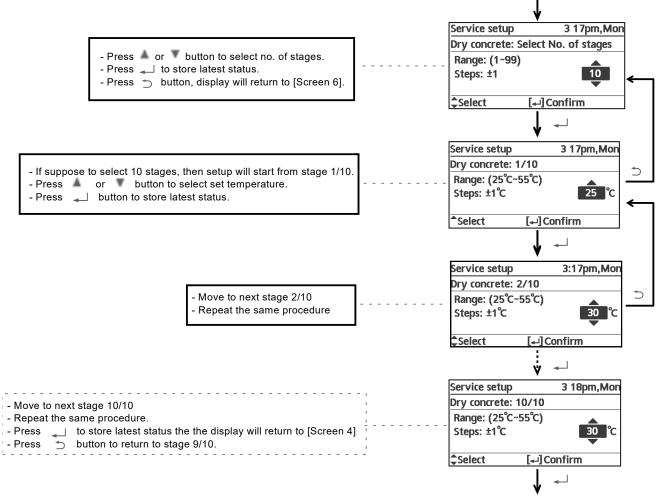

Return to [Screen 6]

# 17. Maintenance Guide


In order to ensure safety and optimal performance of the Tank Unit, seasonal inspections on the Tank Unit, functional check of RCCB/ELCB, field wiring and piping have to be carried out at regular intervals. This maintenance should be carried out by authorized dealer. Contact dealer for scheduled inspection.

- 1 Charging and Discharging the Water Make sure all the piping installations are properly done before carry out below steps. Charge the Water
  - For Domestic Hot Water Tank
    - a. Set the Domestic Hot Water Tank Discharge (Drain Tap) (9) to "CLOSE".



Domestic Hot Water Tank Discharge (Drain Tap) (

- b. Set all Tap / Shower "OPEN".
- c. Start filling water to the Domestic Hot Water Tank via Tube Connector C.
   After 20~40min, water should flow out from Tap / Shower.
   Else, please contact your local authorized dealer.
- d. Check and make sure no water leaking at the tube connecting points.
- e. Set the Domestic Hot Water Tank Discharge (Drain Tap) (9) to "OPEN" for 10 seconds to release air from this pipeline. Then set it "CLOSE".
- f. Turn the Safety Relief Valve <sup>(25)</sup> knob counterclockwise slightly and hold for 10 seconds to release air from this pipeline. Then recover the knob to original position.
- g. Ensure Step 5 & 6 is carried out each time after charging water to Domestic Hot Water Tank.
- h. To prevent back pressure from happening to the Safety Relief Valve <sup>(25)</sup>, do turn the Safety Relief Valve <sup>(25)</sup> knob counterclockwise.
- For Space Heating / Cooling
  - a. Start filling water (with pressure more than 1 bar (0.1MPa)) to the Space Heating/Cooling circuit via Tube Connector (a).
  - b. Stop filling water if the free water flow through Pressure Relief Valve drain pipe. (Check the Outdoor Unit)
  - c. Turn ON the Tank Unit.
  - d. Remote control menu  $\rightarrow$  Installer setup  $\rightarrow$  Service setup  $\rightarrow$  pump maximum speed  $\rightarrow$  Turn on the pump.
  - e. Make sure Water Pump ④ is running.
  - f. Check and make sure no water leaking at the tube connecting points.
  - g. Reinstall the Cabinet front plate f by tightening the 2 mounting screws.

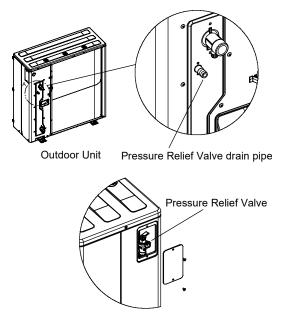

Discharge the Water


- For Domestic Hot Water Tank
- a. Turn OFF power supply.
- b. Set the Domestic Hot Water Tank Discharge (Drain Tap) (9) to "OPEN".
- c. Open Tap / Shower to allow air inlet.
- d. Turn the Safety Relief Valve <sup>(25)</sup> knob counterclockwise slightly and hold it until all air is released from this pipeline. Then recover the knob to original position after ensured the pipeline is emptied.
- e. After discharge, set Domestic Hot Water Tank Discharge (Drain Tap) (9) to "CLOSE".
- 2 Check Water Pressure \*(1 bar = 0.1 MPa)

Water pressure should not lower than 0.5 bar (with inspects the Water Pressure from Remote Controller). If necessary add water into Tank Unit (via Tube Connector (a)).

3 Check Pressure Relief Valve

\*Pressure Relief Valve is mounted in the Outdoor Unit.

- o Confirm that the pressure relief valve is working properly, Pull the lever horizontal direction.
- Release the lever when water comes out of the drain pipe of the pressure relief valve.
   (While the air continues to come out of the drain pipe, keep raising the lever to completely discharge the air.)
- Confirm that the water from the drain pipe stops.
- o If water is leaking, pull the lever several times and return it to make sure the water stops.
- o If water keeps coming out of the drain, drain water.
- Turn off the system and contact your local authorized dealer.

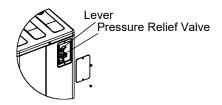

- 4 Check Air Accumulation
  - Open the air vent plugs on the heating panel, fan convector, etc., and remove the air accumulated in the equipment and piping.
  - If the outdoor unit and the indoor unit are installed on different floors, open the air vent plug on the water plug of the outdoor unit and the air vent plug on the heater bottle inside the indoor unit to remove the air. (be careful, water will come out)
- 5 Indoor Unit Control Board Area

Thorough visual inspection of the control board and look for defects, i.e. loose connection, melting of wire insulator and etc.

6 RCCB/ELCB

Ensure the RCCB/ELCB set to "ON" condition before check RCCB/ELCB.

Turn on the power supply to the Tank Unit.

This testing could only be done when power is supplied to the Tank Unit.

## 

Be careful not to touch parts other than RCCB/ELCB test button when the power is supplied to Tank Unit. Else, electrical shock may happen. Before obtaining access to terminals, all supply circuits must be disconnected.

- Push the "TEST" button on the RCCB/ELCB. The lever would turn down and indicate "0", if it functions normal.
- o Contact authorized dealer if the RCCB/ELCB malfunction.
- Turn off the power supply to the Tank Unit.
- If RCCB/ELCB functions normal, set the lever to "ON" again after testing finish.


7 Reset Overload Protector

Overload Protector serves the safety purpose to prevent the water over heating. When the Overload Protector trip at high water temperature, take below steps to reset it.

- a. Take out the cover.
- b. Use a test pen to push the centre button gently in order to reset the Overload Protector.
- c. Fix the cover to the original fixing condition.

Use test pen to push this button for reset Overload protector 11.

- 8 Maintenance for Magnetic Water Filter Set ⑦
  - a. Turn OFF power supply.
  - b. Place a container below Magnetic Water Filter Set (7).
  - c. Turn to remove the Magnet Bar at bottom of Magnetic Water Filter Set (7).
  - d. By using Allen key (8mm), remove the Cap of Discharge Port.
  - e. By using Allen Key (4mm), open the Service Valve to release the dirty water from the Discharge Port into a container. Close the service valve when the container is full to avoid spillage in the tank unit. Dispose the dirty water.
  - f. Reinstall the Cap of Discharge Port and Magnet Bar.
  - g. Re-charging the water to Space Heating / Cooling circuit if necessary (refer Section 5 for details.)
  - h. Turn ON power supply.

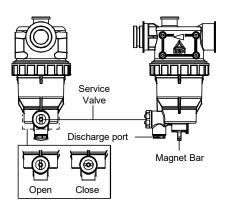

9 Maintenance for Safety Relief Valve 25

It is strongly recommended to operate the valve by turn the knob counter clockwise to ensure free water flow through discharge pipe at regular intervals to ensure it is not blocked and to remove lime deposit.

Stagnant water in Tank Unit should be drained if it is not going to be operated for more than 60 days.

## 17.1 Maintenance for Magnetic Water Filter Set

## 17.1.1 Service and maintenance

 If forget Password and cannot operate remote controller

 Press → + ↓ + ▶ for 5 sec.

 Password unlock screen appears, press Confirm and it shall reset.

 Password will become 0000. Please reset it again.

 (CAUTION) Only display when it is locked by password.

 17.1.2 Maintenance menu

Setting method of Maintenance menu			
Maintenance menu 12:00am,Mon			
Actuator check			
Test mode			
Sensor setup			
Reset password			
✓ Select [↓] Confirm			
Press $- + + +$ for 5 sec. Items that can be set			
Actuator check (Manual ON/OFF all functional parts) (NOTE) As there is no protection action, please be careful not to cause any error when operating each part (do not turn on pump when there is no water etc.)			
② Test mode (Test run) Normally it is not used.			
<ul> <li>Sensor setup (offset gap of detected temp of each sensor within -2~2°C range) (NOTE) Please use only when sensor is deviated. It affects temperature control.</li> </ul>			
④ Reset password (Reset password)			

## 17.1.3 Custom menu

Setting method of Custom menu
Custom menu 12:00am,Mon
Cool mode
Back-up heater
Reset energy monitor
Reset operation history
Smart DHW
✓ Select [←] Confirm
Please press $\blacksquare$ + $\mathbf{\nabla}$ + $\mathbf{\triangleleft}$ for 10 sec.
Items that can be set (1) Cool mode (Set With/Without Cooling function) Default is without (NOTE) As with/without Cool mode may affect electricity application, please be careful and do not simply change it. In Cool mode, please be careful if piping is not insulated properly, dew may form on pipe and water may drip on the floor and damage the floor.
<ul> <li>Backup heater (Use/Do not use Backup heater) (NOTE) It is different from to use/not to use backup heater set by client. When this setting is used, heater power on due to protection against frost will be disabled. (Please use this setting when it is required by utility company.) By using this setting, it cannot defrost due to low Heating's setting temp and operation may stop (H75) Please set under the responsibility of installer. When it stops frequently, it may be due to insufficient circulation flow rate, setting temp of heating is too low etc.</li> </ul>
③ Reset energy monitor (delete memory of Energy monitor) Please use when moving house and handover the unit.
(4) Reset operation history (delete memory of operation history) Please use when moving house and handover the unit.
<ul> <li>(5) Smart DHW (Set Smart DHW mode Parameter)</li> <li>a) Start time: Tank reboil at lower ON Temp. onward.</li> <li>b) Stop time: Tank reboil at normal ON Temp. onward.</li> <li>c) ON Temp.: Tank Reboil Temp when Smart DHW start.</li> </ul>

## 17.1.4 Specifications

# 17.1.4.1 Specifications of fresh water was heat transfer medium in brazed heat exchanger

Parameter	Quality Limits for Tap Water on the Secondary Side
Temperature	Below 60°C
pН	7 to 9
Alkalinity	60mg/I <hco<sub>3 &lt;300mg/I</hco<sub>
Conductivity	< 500µS/cm
Hardness	[Ca⁺, Mg⁺] / [HCO₃⁻] > 0.5
Chloride	< 200mg/l at 60°C
Sulphate	[SO <sub>4</sub> <sup>2-</sup> ] > 100mg/l and [HCO <sub>3</sub> <sup>-</sup> ] / [SO <sub>4</sub> <sup>2-</sup> ] > 1
Nitrate	NO₃ < 100mg/l
Chlorine	< 0.5mg/l

## 17.1.4.2 External filter

Solids in the water must be filtered.


Minimum filter mesh size required for the field supply external filter in the water inlet is 20 mesh.

# 18. Troubleshooting Guide

# 18.1 Refrigeration Cycle System

In order to diagnose malfunctions, make sure that there are no electrical problems before inspecting the refrigeration cycle.

Such problems include insufficient insulation, problem with the power source, malfunction of a compressor and a fan.

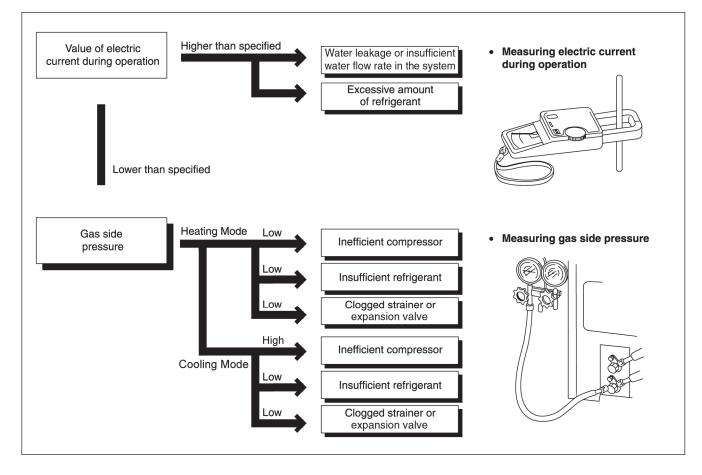

# 18.2 Relationship between the Condition of the Air-to-Water Heatpump Indoor and Outdoor Units and Pressure and Electric Current

	Heating Mode			Cooling Mode		
Condition of the Air-to- Water Heatpump indoor and outdoor units	Low Pressure	High Pressure	Electric current during operation	Low Pressure	High Pressure	Electric current during operation
Water leakage or insufficient water flow rate in the system				1	1	*
Excessive amount of refrigerant				1		
Inefficient compression			-	1	*	
Insufficient refrigerant (gas leakage)	*	1	*	1	1	*
Outdoor heat exchange deficiency	-	-	-			
Clogged expansion valve or Strainer				1	1	-

• Carry out the measurements of pressure, electric current, and temperature fifteen minutes after an operation is started.

# 18.3 Breakdown Self Diagnosis Function


## 18.3.1 Self Diagnosis Function (Three Digits Alphanumeric Code)

- When abnormality occur during operation, the system will stop operation, and OFF/ON control panel LED will blink and error code will display on the control panel.
- Even error code is reset by turning OFF power supply or by selecting ERROR RESET, if the system abnormality
  is still unrepaired, system will again stop operation, and OFF/ON control panel LED will again blinks and error
  code will be display.
- The error code will store in IC memory.

#### • To check the error code

- 1 When an abnormality occurs, system will stop operation and OFF/ON control panel LED will blink.
- 2 Error code of the abnormality will be display on the control panel.
- 3 To determine the abnormality description, the error code table needs to be referred.

eg:

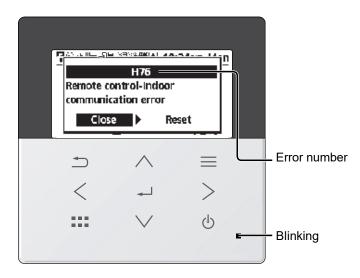


Press < > to select Close / Reset then press  $\prec$ 

- To display past/last error code
  - 1 Turn ON power supply.
  - 2 Refer below procedure to retrieve the error code history.
- To permanently delete error code from IC memory
  - 1 Turn ON power supply.
  - 2 Refer below procedure to clear error history.

	12	:00am,Mon		
[①] Start				
_	$\wedge$	≡		
<		>		Press :≡ button and select
	$\vee$	Ċ		"System Check"
			•	

Main menu	9:	17am,Mon
Function set	up	
System chec	k	
Personal set	up	
Service cont	act	
Select	[₊-]Confi	rm

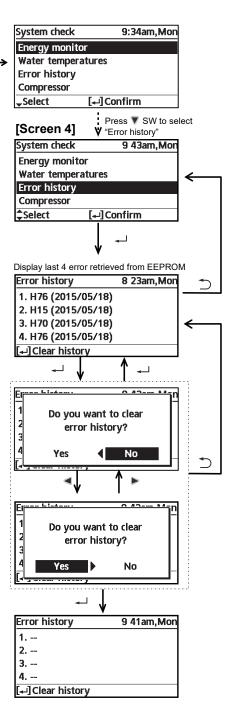

# 18.4 Error Codes Table

Diagnosis display	Abnormality/Protection control	Abnormality judgement	Primary location to verify
H00	No abnormality detected		
H12	Indoor/Outdoor capacity unmatched	90s after power supply	<ul> <li>Indoor/outdoor connection wire</li> <li>Indoor/outdoor PCB</li> <li>Specification and combination table in catalogue</li> </ul>
H15	Outdoor compressor temperature sensor abnormality	Continue for 5 sec.	Compressor temperature sensor (defective or disconnected)
H20	Water pump abnormality	Continue for 10 sec.	<ul><li>Indoor PCB</li><li>Water pump (malfunction)</li></ul>
H23	Indoor refrigerant liquid temperature sensor abnormality	Continue for 5 sec.	<ul> <li>Refrigerant liquid temperature sensor (defective or disconnected)</li> </ul>
H27	Service valve error	Continue for 5 minutes	<ul> <li>High pressure sensor (defective or disconnected)</li> </ul>
H28	Abnormal solar sensor	Continue for 5 sec.	<ul> <li>Solar temperature sensor (defective or disconnected)</li> </ul>
H31	Abnormal swimming pool sensor	Continue for 5 sec.	<ul> <li>Pool temperature sensor (defective or disconnected)</li> </ul>
H36	Abnormal buffer tank sensor	Continue for 5 sec.	<ul> <li>Buffer tank sensor (defective or disconnected)</li> </ul>
H38	Brand code not match	When indoor and outdoor brand code not same	_
H42	Compressor low pressure abnormality	_	<ul> <li>Outdoor pipe temperature sensor</li> <li>Clogged expansion valve or strainer</li> <li>Insufficient refrigerant</li> <li>Outdoor PCB</li> <li>Compressor</li> </ul>
H43	Abnormal Zone 1 sensor	Continue for 5 sec.	Water temperature Zone 1 sensor
H44	Abnormal Zone 2 sensor	Continue for 5 sec.	Water temperature Zone 2 sensor
H62	Water flow switch abnormality	Continue for 1 min.	<ul> <li>Water flow switch</li> </ul>
H63	Abnormal low pressure sensor	4 times in 20 minutes	<ul> <li>Low pressure sensor (defective or disconnect)</li> </ul>
H64	Refrigerant high pressure abnormality	Continue for 5 sec.	<ul> <li>Outdoor high pressure sensor (defective or disconnected)</li> </ul>
H65	Abnormal deice water circulation	water flow > 7 l/min continuously for 20 seconds during anti freeze deice	Water pump
H67	Abnormal External Thermistor 1	Continue for 5 sec.	<ul> <li>Room temperature Zone 1 sensor</li> </ul>
H68	Abnormal External Thermistor 2	Continue for 5 sec.	Room temperature Zone 2 sensor
H70	Back-up heater OLP abnormality	Continue for 60 sec.	<ul> <li>Back-up heater OLP (Disconnection or activated)</li> </ul>
H72	Tank sensor abnormal	Continue for 5 sec.	<ul> <li>Tank sensor</li> </ul>
H74	PCB communication error	Communication or transfer error	<ul> <li>Indoor main PCB and Sub PCB</li> </ul>
H75	Low water temperature control	Room heater disable and deice request to operate under low water temperature	<ul> <li>Heater operation must enable to increase water temperature</li> </ul>
H76	Indoor - control panel communication abnormality	—	<ul> <li>Indoor - control panel (defective or disconnected)</li> </ul>
H90	Indoor/outdoor abnormal communication	> 1 min after starting operation	<ul><li>Internal/external cable connections</li><li>Indoor/Outdoor PCB</li></ul>
H91	Tank heater OLP abnormality	Continue for 60 sec.	<ul> <li>Tank heater OLP (Disconnection or activated)</li> </ul>
H95	Indoor/Outdoor wrong connection		<ul> <li>Indoor/Outdoor supply voltage</li> </ul>
H98 / F95	Outdoor high pressure overload protection Cooling high pressure overload	_	<ul><li>Outdoor high pressure sensor</li><li>Water pump or water leakage</li><li>Clogged expansion valve or strainer</li></ul>
	protection		<ul><li>Excess refrigerant</li><li>Outdoor PCB</li></ul>
H99	Indoor heat exchanger freeze prevention	_	<ul><li>Indoor heat exchanger</li><li>Refrigerant shortage</li></ul>
F12	Pressure switch activate	4 times occurrence within 30 minutes	Pressure switch
F14	Outdoor compressor abnormal revolution	4 times occurrence within 20 minutes	Outdoor compressor
F15	Outdoor fan motor lock abnormality	2 times occurrence within 30 minutes	Outdoor PCB     Outdoor fan motor
F16	Total running current protection	3 times occurrence within 20 minutes	<ul><li>Excess refrigerant</li><li>Outdoor PCB</li></ul>

Diagnosis display	Abnormality/Protection control	Abnormality judgement	Primary location to verify
F20	Outdoor compressor overheating protection	4 times occurrence within 30 minutes	<ul> <li>Compressor tank temperature sensor</li> <li>Clogged expansion valve or strainer</li> <li>Insufficient refrigerant</li> <li>Outdoor PCB</li> <li>Compressor</li> </ul>
F22	IPM (power transistor) overheating protection	3 times occurrence within 30 minutes	<ul><li>Improper heat exchange</li><li>IPM (Power transistor)</li></ul>
F23	Outdoor Direct Current (DC) peak detection	7 times occurrence continuously	Outdoor PCB     Compressor
F24	Refrigeration cycle abnormality	2 times occurrence within 30 minutes	<ul> <li>Insufficient refrigerant</li> <li>Outdoor PCB</li> <li>Compressor low compression</li> </ul>
F25	Cooling/Heating cycle changeover abnormality	4 times occurrence within 30 minutes	<ul><li> 4-way valve</li><li> V-coil</li></ul>
F27	Pressure switch abnormality	Continue for 1 min.	Pressure switch
F30	Water outlet sensor 2 abnormality	Continue for 5 sec.	Water outlet sensor 2 (defective or disconnected)
F32	Abnormal Internal Thermostat	Continue for 5 sec.	Control panel PCB thermostat
F36	Outdoor air temperature sensor abnormality	Continue for 5 sec.	<ul> <li>Outdoor air temperature sensor (defective or disconnected)</li> </ul>
F37	Indoor water inlet temperature sensor abnormality	Continue for 5 sec.	<ul> <li>Water inlet temperature sensor (defective or disconnected)</li> </ul>
F40	Outdoor discharge pipe temperature sensor abnormality	Continue for 5 sec.	<ul> <li>Outdoor discharge pipe temperature sensor (defective or disconnected)</li> </ul>
F41	PFC control	4 times occurrence within 10 minutes	Voltage at PFC
F42	Outdoor heat exchanger temperature sensor abnormality	Continue for 5 sec.	<ul> <li>Outdoor heat exchanger temperature sensor (defective or disconnected)</li> </ul>
F43	Outdoor defrost sensor abnormality	Continue for 5 sec.	<ul> <li>Outdoor defrost sensor (defective or disconnected)</li> </ul>
F45	Indoor water outlet temperature sensor abnormality	Continue for 5 sec.	Water outlet temperature sensor (defective or disconnected)
F46	Outdoor Current Transformer open circuit	—	<ul> <li>Insufficient refrigerant</li> <li>Outdoor PCB</li> <li>Compressor low</li> </ul>
F48	Outdoor EVA outlet temperature sensor abnormality	Continue for 5 sec.	Outdoor EVA outlet temperature sensor (defective or disconnected)
F49	Outdoor bypass outlet temperature sensor abnormality	Continue for 5 sec.	Outdoor bypass outlet temperature sensor (defective or disconnected)

## 18.5 Self-diagnosis Method

## 18.5.1 Connection Capability Rank Abnormality (H12)

#### **Malfunction Decision Conditions:**

During startup operation of cooling and heating, the capability rank of indoor checked by the outdoor is used to determine connection capability rank abnormality.


#### **Malfunction Caused:**

- 1 Wrong model interconnected.
- 2 Wrong indoor unit or outdoor unit PCB (main) used.
- 3 Faulty indoor unit or outdoor unit PCB (main).

#### Abnormality Judgment:

Continue for 90 seconds.

# **Troubleshooting:**

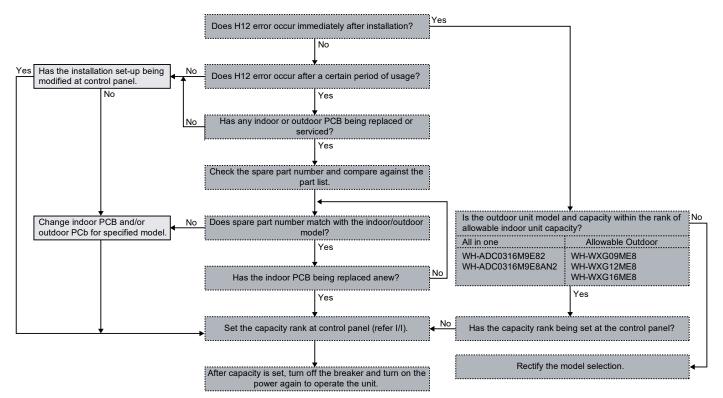

## 18.5.2 Compressor Tank Temperature Sensor Abnormality (H15)

## Malfunction Decision Conditions:

During startup and operation of cooling and heating, the temperatures detected by the compressor tank temperature sensor are used to determine sensor error.


## **Malfunction Caused:**

- 1 Faulty connector connection.
- 2 Faulty sensor.
- 3 Faulty outdoor unit PCB (main).

## Abnormality Judgment:

Continue for 5 seconds.

# Troubleshooting:

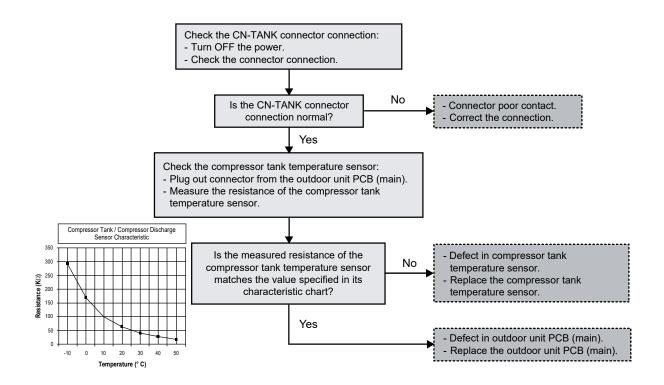

## 18.5.3 Water Pump Abnormality (H20)

#### **Malfunction Decision Conditions:**


During startup and operation of cooling and heating, the rotation speed detected by the IPM of water pump motor during water pump operation is used to determine abnormal water pump (feedback of rotation > 6,000rpm or < 1,000rpm).

#### **Malfunction Caused:**

- 1 Operation stop due to short circuit inside the water pump motor winding.
- 2 Operation stop due to breaking of wire inside the water pump motor.
- 3 Operation stop due to breaking of water pump lead wires.
- 4 Operation stop due to water pump motor IPM malfunction.
- 5 Operation error due to faulty indoor unit PCB.

#### Abnormality Judgment:

Continue for 5 seconds.

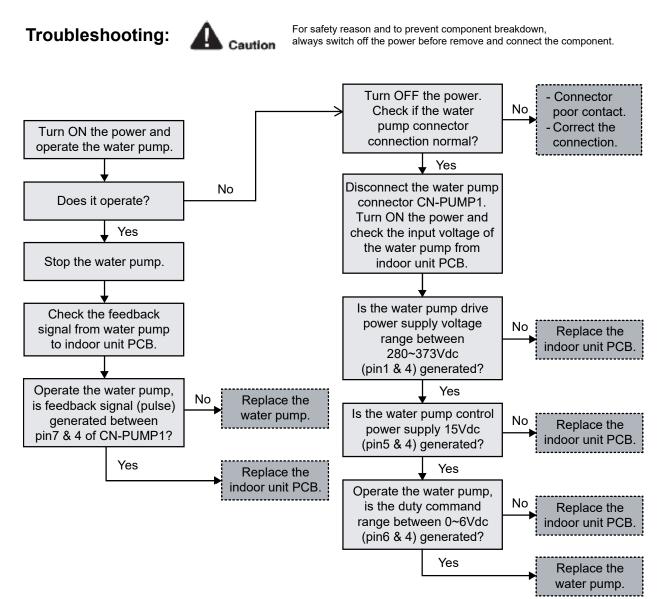

## 18.5.4 Indoor Refrigerant Liquid Temperature Sensor Abnormality (H23)

## **Malfunction Decision Conditions:**


During startup and operation of cooling and heating, the temperatures detected by the indoor refrigerant liquid temperature sensor are used to determine sensor error.

#### **Malfunction Caused:**

- 1 Faulty connector connection.
- 2 Faulty sensor.
- 3 Faulty indoor unit PCB (main).

#### Abnormality Judgment:

Continue for 5 seconds.

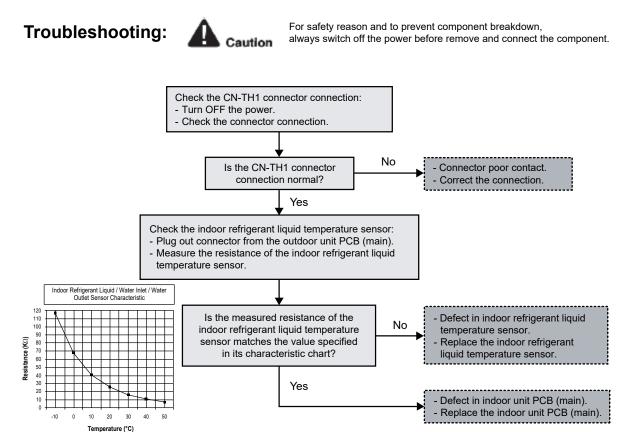

## 18.5.5 Service Valve Error (H27)

#### **Malfunction Decision Conditions:**

During cooling operation, when:-


- [a] Indoor refrigerant pipe temperature at compressor startup present indoor refrigerant pipe temperature < 2°C [b] Present high pressure high pressure at compressor startup < 5kg/cm<sup>2</sup>
- \*\*Judgment only for first time cooling operation and not during pump down operation.

### Malfunction Caused:

- 1 3 way valves closed.
- 2 Faulty high pressure sensor.
- 3 Faulty indoor refrigerant pipe temperature sensor
- 4 Faulty outdoor unit PCB (main).

#### Abnormality Judgment:

Continue for 5 minutes.

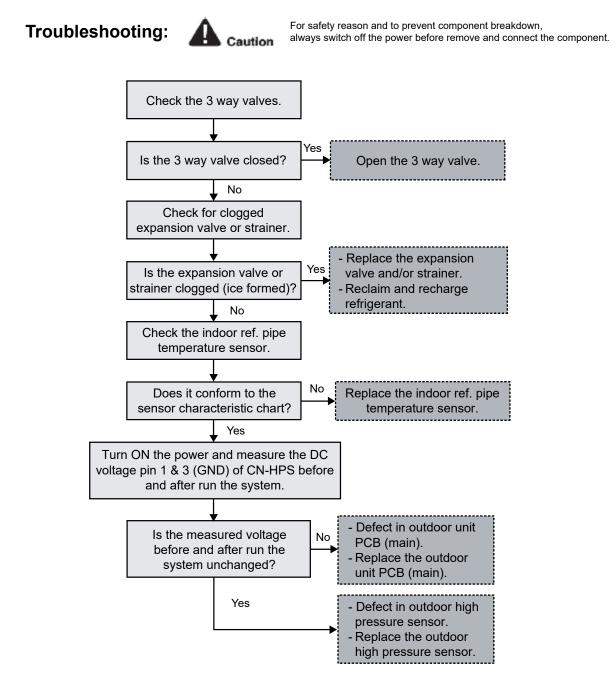

## 18.5.6 Abnormal Solar Sensor (H28)

### Malfunction Caused:

- 1 Faulty connector connection.
- 2 Faulty solar sensor.
- 3 Faulty indoor sub PCB.

# Abnormality Judgment: Continue for 5 seconds.

Abnormal solar sensor	<b>A</b>	Caution	For safety reason and to prevent component breakdown, always switch off the power before remove and connect the component.
H28 happens check connection at CN207 norr	NO NO		Correct sensor connection
YES			
Measure resistance of sensor match character	ic? NO	•	Change solar sensor
YES			
Change Indoor sub PCB			


## 18.5.7 Abnormal Swimming Pool Sensor (H31)

#### Malfunction Caused:

- 1 Faulty connector connection.
- 2 Faulty swimming pool sensor.
- 3 Faulty indoor sub PCB.

#### Abnormality Judgment:

Continue for 5 seconds.

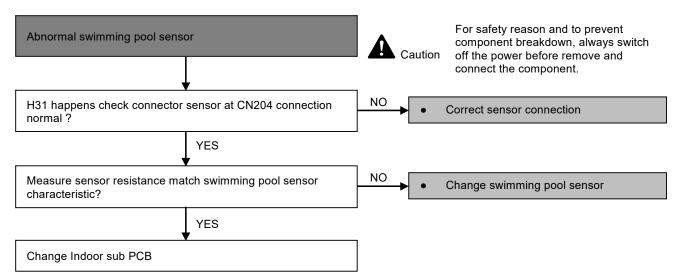

## 18.5.8 Abnormal Buffer Tank Sensor (H36)

## Malfunction Caused:

- 1 Faulty connector connection.
- Faulty buffer tank sensor. 2
- 3 Faulty indoor sub PCB.


# Abnormality Judgment: Continue for 5 seconds.

Abnormal buffer tank sensor	Caution	For safety reason and to prevent component breakdown, always switch off the power before remove and
		connect the component.
H36 check buffer tank sensor connection at CN5 normal?	NO •	Correct connection
YES		
Disconnect sensor from sub PCB measure resistance of sense and compare against characteristic same?	sor NO	Change buffer tank sensor
YES		
Change sub PCB		

## 18.5.9 Brand Code Not Matching (H38)

#### **Malfunction Caused:**

1 Indoor and outdoor brand code not match.

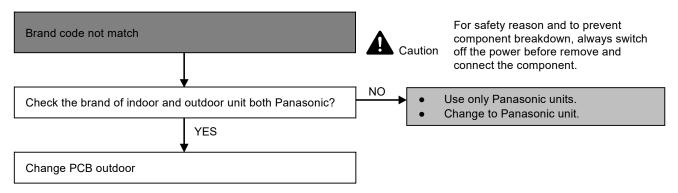


## 18.5.10 Compressor Low Pressure Protection (H42)

## **Malfunction Decision Conditions:**

During operation of heating and after 5 minutes compressor ON, when outdoor pipe temperature below -29°C or above 26°C is detected by the outdoor pipe temperature sensor.

## Malfunction Caused:

- 1 Dust accumulation on the outdoor unit heat exchanger.
- 2 Air short circuit at outdoor unit.
- 3 2 way valve partially closed.
- 4 Faulty outdoor unit fan motor.
- 5 Refrigerant shortage (refrigerant leakage).
- 6 Clogged expansion valve or strainer.
- 7 Faulty outdoor pipe temperature sensor.
- 8 Faulty outdoor unit main PCB (main).

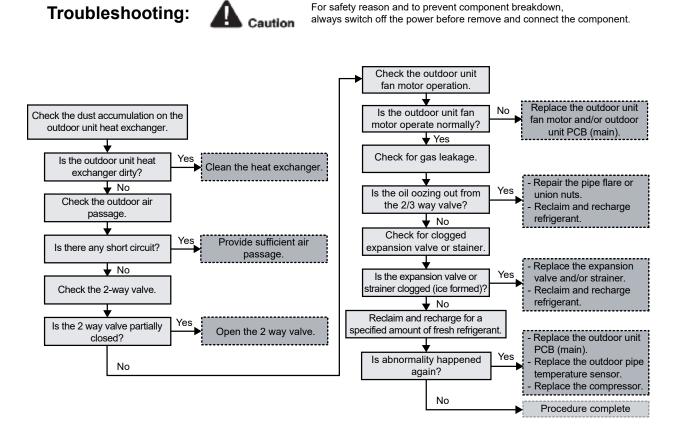


## 18.5.11 Abnormal Zone 1 Sensor (H43)

#### **Malfunction Caused:**

- 1 Faulty connector connection.
- 2 Faulty buffer tank sensor.
- 3 Faulty indoor sub PCB.

#### Abnormality Judgment:

Continue for 5 seconds.

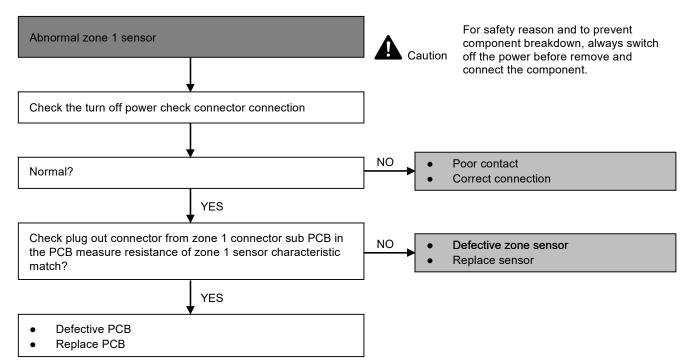

# 18.5.12 Abnormal Zone 2 Sensor (H44)

### Malfunction Caused:

- 1 Faulty connector connection.
- Faulty buffer tank sensor. 2
- 3 Faulty indoor sub PCB.

# Abnormality Judgment: Continue for 5 seconds.

Abnormal zone 2 sensor	-	Caution	For safety reason and to prevent component breakdown, always switch off the power before remove and
	7	_	connect the component.
Turn off power check connecto	r connection normal?	•	Correct abnormal connection
	YES	-	
Plug out from sub PCB, check resistance is it match?	sensor characteristics measure	NO •	Change sensor zone 2
	YES	-	
Change PCB			

## 18.5.13 Water Flow Switch Abnormality (H62)

#### **Malfunction Decision Conditions:**


During operation of cooling and heating, the water flow detected by the indoor water flow switch is used to determine water flow error.

#### **Malfunction Caused:**

- 1 Faulty water pump.
- 2 Water leak in system.
- 3 Faulty connector connection.
- 4 Faulty water flow switch.
- 5 Faulty indoor unit PCB (main).

#### Abnormality Judgment:

Continue for 10 seconds (but no judgment for 9 minutes after compressor startup/restart).

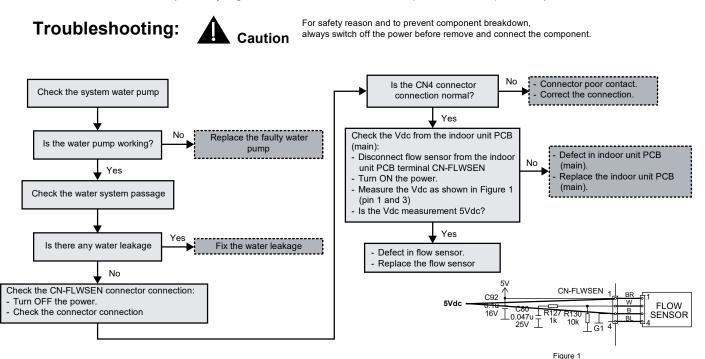

## 18.5.14 Outdoor High Pressure Abnormality (H64)

## **Malfunction Decision Conditions:**


During operation of cooling and heating, when the outdoor high pressure sensor output signal is 0 Vdc or 5 Vdc.

#### Malfunction Caused:

- 1 Faulty connector connection.
- 2 Faulty sensor.
- 3 Faulty outdoor unit PCB (main).

### Abnormality Judgment:

Continue 4 times in 20 minutes.

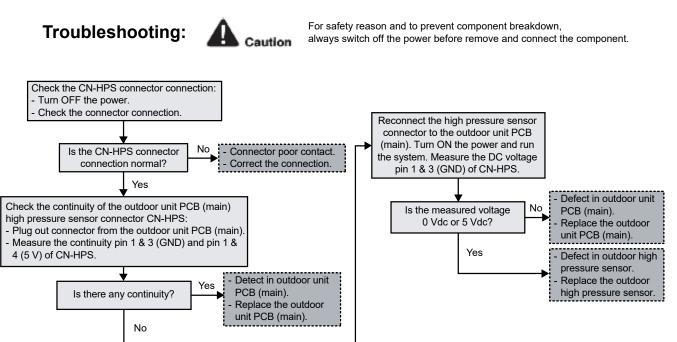

## 18.5.15 Deice Circulation Error (H65)

### **Malfunction Decision Conditions:**


During startup and operation of deice (mode 2), the water flow (> 10l/min) detected by the water flow switch is used to determine deice circulation error.

#### **Malfunction Caused:**

- 1 Water flow in air-to-water heatpump indoor unit circuitry.
- 2 Faulty indoor unit water flow switch.
- 3 Faulty indoor unit water pump.
- 4 Faulty indoor unit PCB.

### Abnormality Judgment:

Continue for 10 seconds.

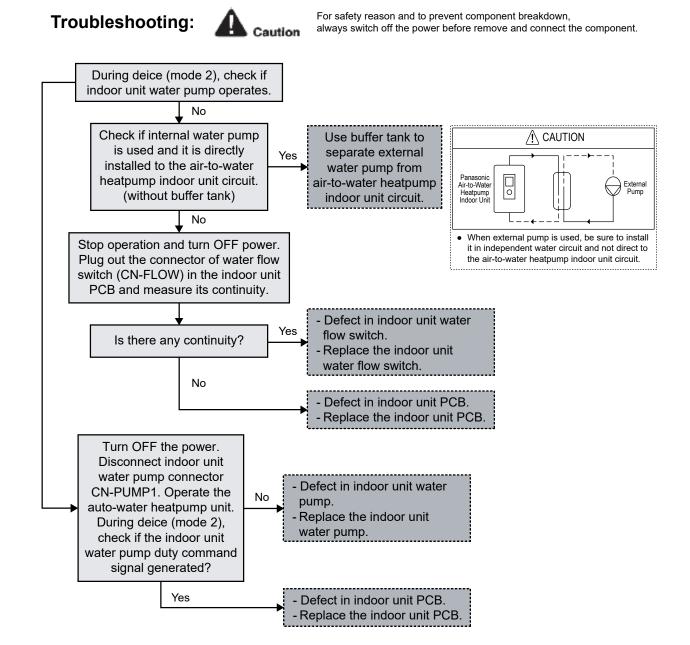

## 18.5.16 Abnormal External Thermistor 1 (H67)

## Malfunction Caused:

- 1 Faulty connector connection.
- 2 Faulty room temperature zone 1 sensor.
- 3 Faulty indoor sub PCB.

## Abnormality Judgment:

Continue for 5 seconds.

Abnormal external thermistor 1		Caution		For safety reason and to prevent component breakdown, always switch off the power before remove and
				connect the component.
Check CN205 connector on sub PCB normal?		NO	•	Correct connection
	YES			
Disconnect sensor from sub PCB measure resistance of sensor and compare against sensor characteristic same?		NO	•	Change external thermistor 1
	YES	_		
Change sub PCB				


## 18.5.17 Abnormal External Thermistor 2 (H68)

#### **Malfunction Caused:**

- 1 Faulty connector connection.
- 2 Faulty room temperature zone 2 sensor.
- 3 Faulty indoor sub PCB.

#### Abnormality Judgment:

Continue for 5 seconds.

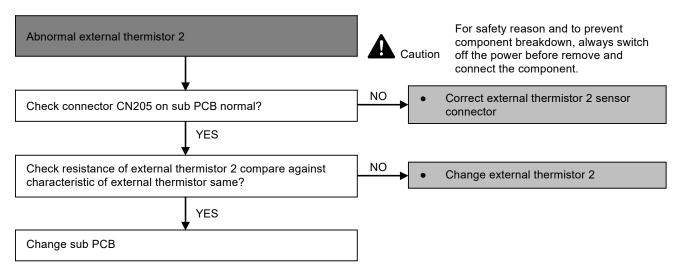

## 18.5.18 Indoor Backup Heater OLP Abnormality (H70)

## **Malfunction Decision Conditions:**


During operation of indoor backup heater, when no power supplies to indoor backup heater or OLP open circuit.

## Malfunction Caused:

- 1 Faulty power supply connector connection.
- 2 Faulty connector connection.
- 3 Faulty indoor backup heater overload protector (OLP).
- 4 Faulty indoor unit PCB (main).

## Abnormality Judgment:

Continue for 60 seconds.

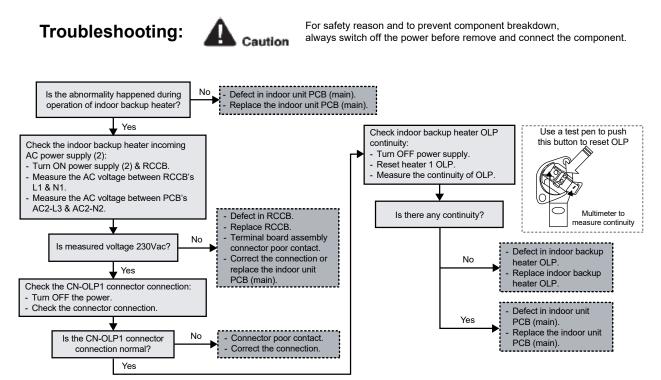

### 18.5.19 Tank Temperature Sensor Abnormality (H72)


#### **Malfunction Decision Conditions:**

When tank connection is set to ON, the temperatures detected by the tank temperature sensor are used to determine sensor error.

#### **Malfunction Caused:**

- 1 Faulty connector connection.
- 2 Faulty sensor.
- 3 Faulty indoor unit PCB (main).

#### Abnormality Judgment:

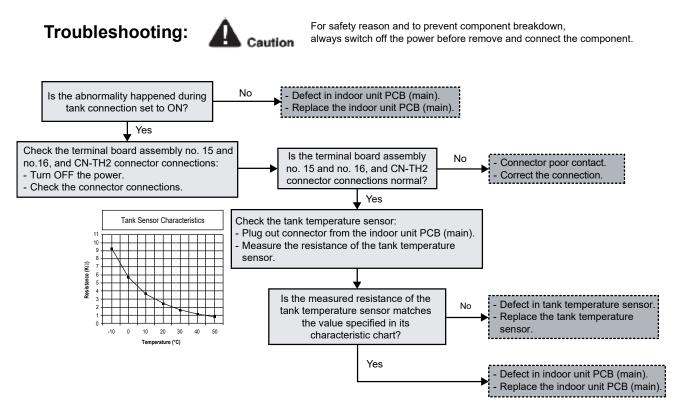

### 18.5.20 PCB Communication Error (H74)

### **Malfunction Decision Conditions:**

When External PCB connection is select "YES" and no communication with External PCB micon for 10 seconds and above.

### Malfunction Caused:

- 1 Faulty connector connection.
- 2 Faulty indoor PCB.
- 3 Faulty indoor sub PCB.

### Abnormality Judgment:

After 1 minute operation started.

PCB communication error	Caution	For safety reason and to prevent component breakdown, always switch off the power before remove and connect the component.
		connect the component.
H74 happens check connection at CN-PWR normal?	NO ●	Correct connection at CN-PWR
YES	-	
Check CN-PWR 230/240 V?	NO ●	Abnormal AC POWER supply
YES	-	
Check CN-COMM situation on terminal 1 & 2 and 3 & 1	NO •	Replace sub PCB
YES	-	
Replace indoor PCB	]	


### 18.5.21 Indoor-Control Panel Communication Abnormality (H76)

#### **Malfunction Decision Conditions:**

During standby and operation of cooling and heating, indoor-control panel error occur.

#### **Malfunction Caused:**

- 1 Faulty connector connection.
- 2 Faulty control panel.
- 3 Faulty indoor unit PCB (main).

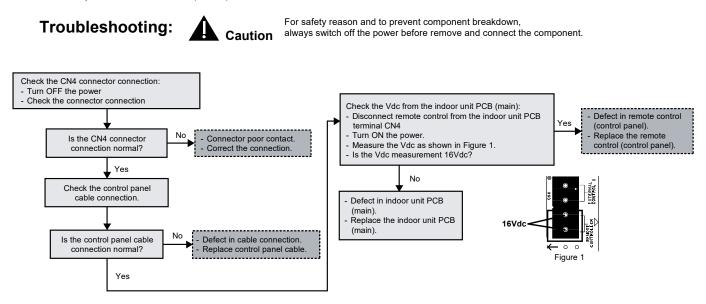

### 18.5.22 Indoor/Outdoor Abnormal Communication (H90)

#### **Malfunction Decision Conditions:**


During operation of cooling and heating, the data received from outdoor unit in indoor unit signal transmission is checked whether it is normal.

### Malfunction Caused:

- 1 Faulty outdoor unit PCB (main).
- 2 Faulty indoor unit PCB (main).
- 3 Indoor-outdoor signal transmission error due to wrong wiring.
- 4 Indoor-outdoor signal transmission error due to breaking of wire in the connection wires between the indoor and outdoor units.
- 5 Indoor-outdoor signal transmission error due to disturbed power supply waveform.

#### Abnormality Judgment:

Continue for 1 minute after operation.

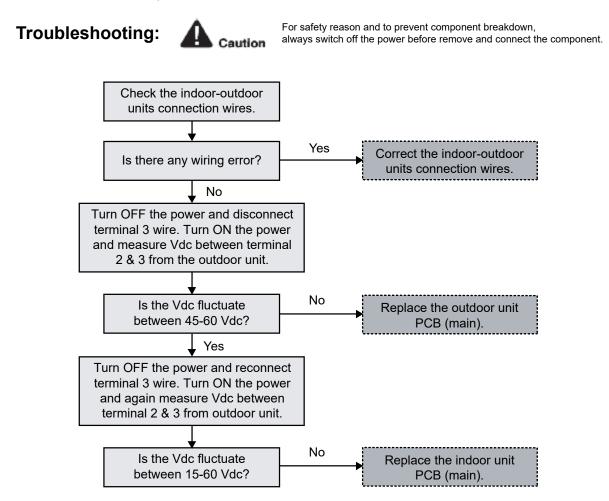

### 18.5.23 Tank Booster Heater OLP Abnormality (H91)


#### **Malfunction Decision Conditions:**

During operation of tank booster heater, and tank booster heater OLP open circuit.

#### **Malfunction Caused:**

- 1 Faulty connector connection.
- 2 Faulty tank booster heater overload protector (OLP).
- 3 Faulty indoor unit PCB (main).

### Abnormality Judgment:

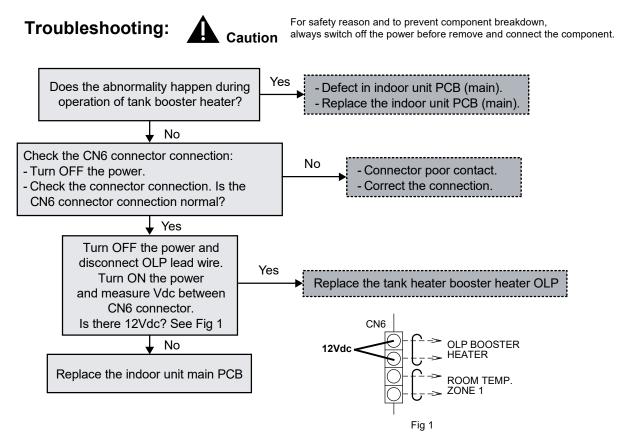

### 18.5.24 Unspecified Voltage between Indoor and Outdoor (H95)

### **Malfunction Decision Conditions:**

The supply power is detected for its requirement by the indoor/outdoor transmission.


### Malfunction Caused:

- 1 Insufficient power supply.
- 2 Faulty outdoor unit PCB (noise filter/main).

## Troubleshooting:



For safety reason and to prevent component breakdown, always switch off the power before remove and connect the component.

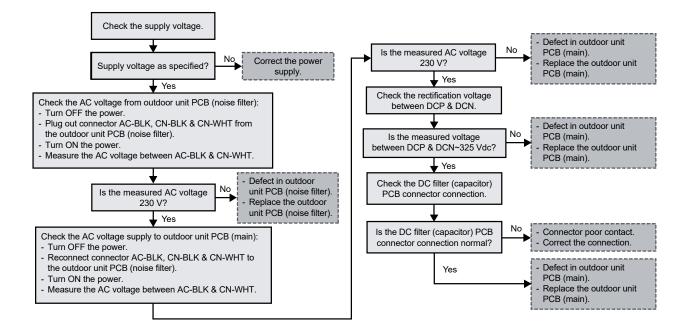

### 18.5.25 Outdoor High Pressure Protection (H98 / F95)

### **Malfunction Decision Conditions:**

During operation of cooling / heating, when pressure 4.2 MPa and above is detected by outdoor high pressure sensor.


### Malfunction Caused:

- 1 Faulty water pump.
- 2 Insufficient water flow rate in system.
- 3 Water leak in system.
- 4 Dust accumulation in the outdoor unit heat exchanger.
- 5 Air short circuit at outdoor.
- 6 Faulty outdoor unit fan motor.
- 7 2/3 way closed.
- 8 Clogged expansion valve or strainer.
- 9 Excessive refrigerant.

**Troubleshooting:** 

- 10 Faulty outdoor high pressure sensor.
- 11 Faulty outdoor unit PCB (main).


**Caution** For safety reason and to prevent component breakdown, always switch off the power before remove and connect the component.

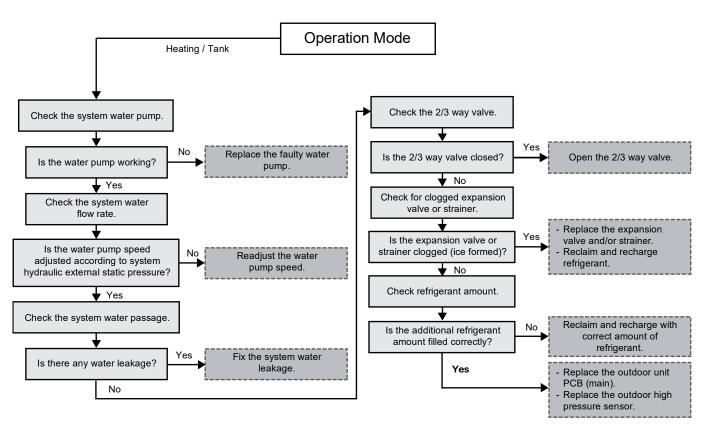

## **Troubleshooting:**



For safety reason and to prevent component breakdown, always switch off the power before remove and connect the component.

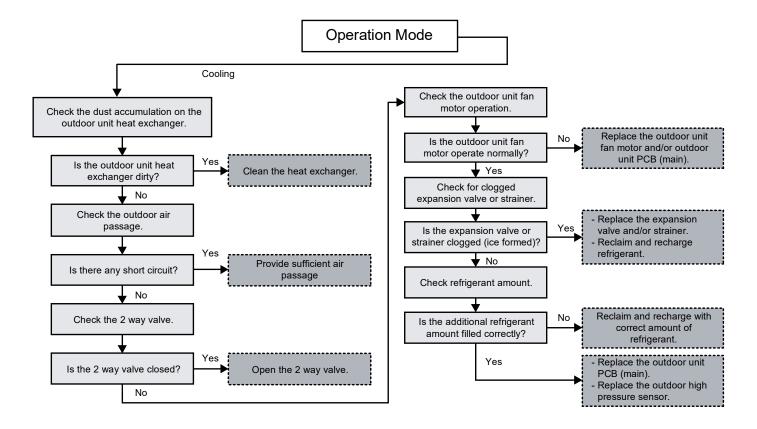


### 18.5.26 Indoor Freeze-up Protection (H99)

#### **Malfunction Decision Conditions:**

During anti-freezing control in cooling operation, when the indoor refrigerant liquid temperature < 0°C.

### **Malfunction Caused:**

- Faulty water pump. 1
- 2 Insufficient water flow rate in system.
- 3 Water leak in system.
- 4 2 way valve partially closed.
- 5 Clogged expansion valve or strainer.
- 6 Refrigerant shortage (refrigerant leakage).
- 7 Faulty indoor refrigerant liquid temperature sensor.
- 8 Faulty indoor unit PCB (main).

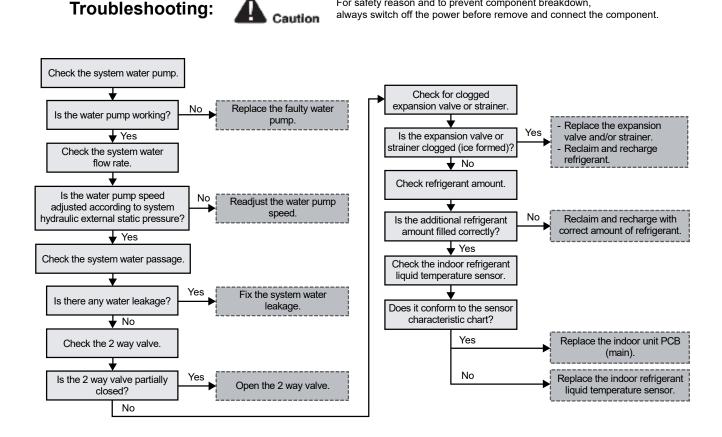

For safety reason and to prevent component breakdown,

### 18.5.27 Outdoor High Pressure Switch Activate (F12)

### **Malfunction Decision Conditions:**

During operation of cooling and heating, when pressure 4.5 MPa and above is detected by outdoor high pressure switch.

### Malfunction Caused:

- 1 Dust accumulation on the outdoor unit heat exchanger.
- 2 Air short circuit at outdoor unit.
- 3 Faulty water pump.
- 4 Insufficient water flow rate in system.
- 5 Water leak in system.
- 6 2/3 way valve closed.
- 7 Clogged expansion valve or strainer.
- 8 Excessive refrigerant.
- 9 Faulty outdoor high pressure sensor and switch.
- 10 Faulty outdoor unit PCB.


#### Abnormality Judgment:

Continue 4 times in 20 minutes.





For safety reason and to prevent component breakdown, always switch off the power before remove and connect the component.

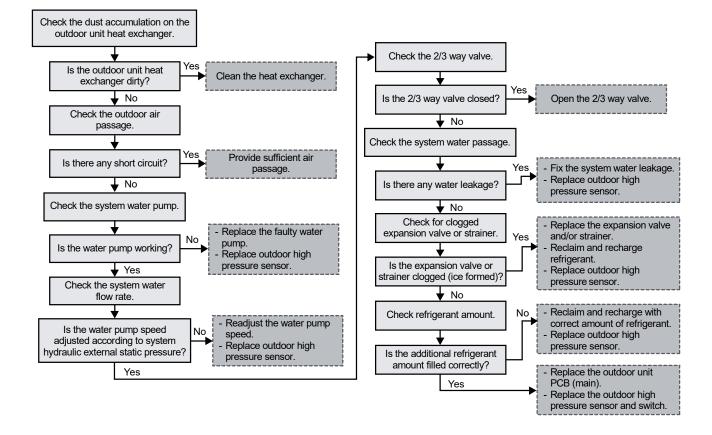

### 18.5.28 Compressor Rotation Failure (F14)

#### **Malfunction Decision Conditions:**


A compressor rotation failure is detected by checking the compressor running condition through the position detection circuit.

#### **Malfunction Caused:**

- 1 Compressor terminal disconnect.
- 2 Faulty outdoor unit PCB (main).
- 3 Faulty compressor.

#### Abnormality Judgment:

Continue 4 times in 20 minutes.

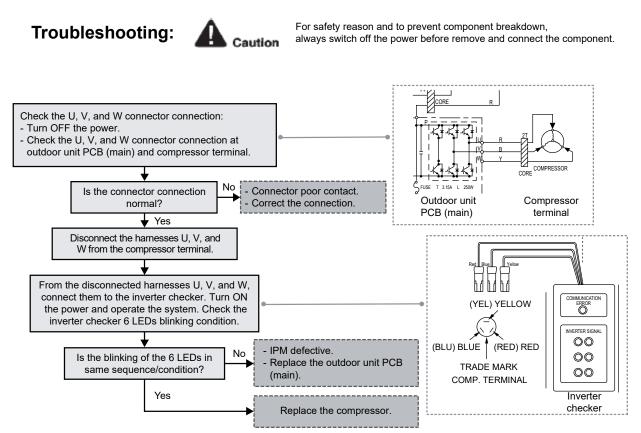

### 18.5.29 Outdoor Fan Motor (DC Motor) Mechanism Locked (F15)

### **Malfunction Decision Conditions:**


The rotation speed detected by the Hall IC of the fan motor during fan motor operation is used to determine abnormal fan motor (feedback of rotation > 2550 rpm or < 50 rpm).

### Malfunction Caused:

- 1 Operation stop due to short circuit inside the fan motor winding.
- 2 Operation stop due to breaking of wire inside the fan motor.
- 3 Operation stop due to breaking of fan motor lead wires.
- 4 Operation stop due to fan motor Hall IC malfunction.
- 5 Operation error due to faulty outdoor unit PCB.

### Abnormality Judgment:

Continue 2 times in 30 minutes.

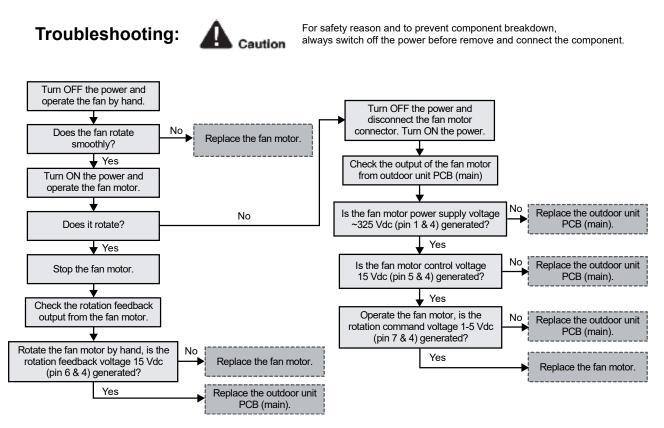

### 18.5.30 Input Over Current Detection (F16)

#### **Malfunction Decision Conditions:**


During operation of cooling and heating, when outdoor current above WXG09ME8 15.0A & WXG12 / 16ME8 18.0A is detected by the current transformer (CT) in the outdoor unit PCB.

#### **Malfunction Caused:**

- 1 Excessive refrigerant.
- 2 Faulty outdoor unit PCB (main).

#### Abnormality Judgment:

Continue 3 times in 20 minutes.

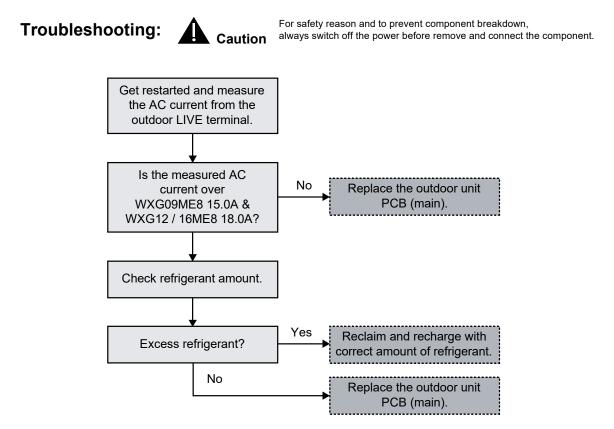

### 18.5.31 Compressor Overheating (F20)

### Malfunction Decision Conditions:


During operation of cooling and heating, when temperature above 112°C is detected by the compressor tank temperature sensor.

### Malfunction Caused:

- 1 Faulty compressor tank temperature sensor.
- 2 2/3 way valve closed.
- 3 Refrigerant shortage (refrigerant leakage).
- 4 Clogged expansion valve or strainer.
- 5 Faulty outdoor unit PCB (main).
- 6 Faulty compressor.

### Abnormality Judgment:

Continue 4 times in 30 minutes.

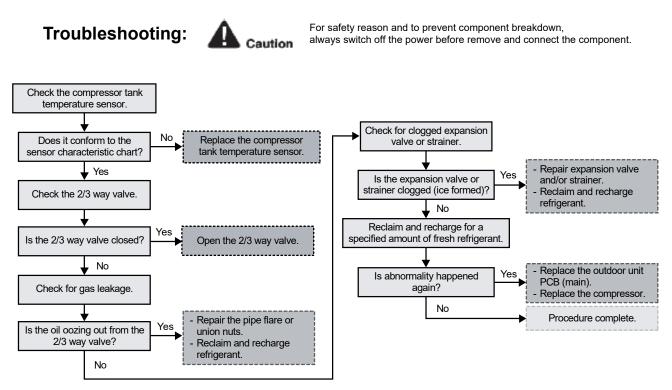

### 18.5.32 IPM Overheating (F22)

### Malfunction Decision Conditions:


During operation of cooling and heating, when temperature 95°C is detected by the outdoor IPM temperature sensor.

#### Malfunction Caused:

- 1 Faulty outdoor unit fan motor.
- 2 Faulty outdoor unit PCB (main).

### Abnormality Judgment:

Continue 3 times in 30 minutes.

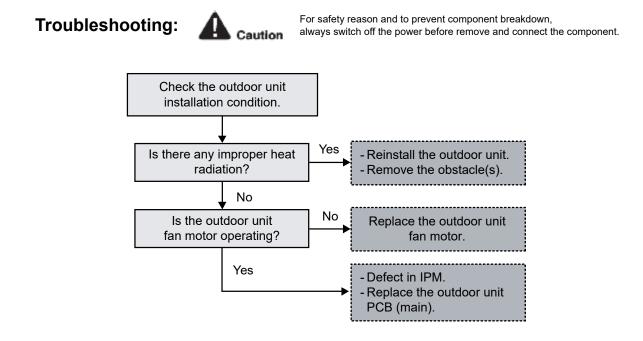

### 18.5.33 Output Over Current Detection (F23)

### **Malfunction Decision Conditions:**

During operation of cooling and heating, when outdoor DC current is above set value is detected by the IPM DC Peak sensing circuitry in the outdoor unit PCB (main).

#### Malfunction Caused:

- 1 Faulty outdoor unit PCB (main).
- 2 Faulty compressor.


### Abnormality Judgment:

Continue for 7 times.

**Troubleshooting:** 



For safety reason and to prevent component breakdown, always switch off the power before remove and connect the component.

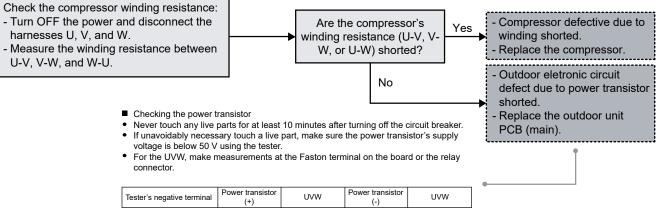

Tester's negative terminal	Power transistor (+)	UVW	Power transistor (-)	UVW
Tester's positive terminal	UVW	Power transistor (+)	UVW	Power transistor (-)
Normal resistance	Several kohms to several Mohms			
Abnormal resistance	0 or ∞			

### 18.5.34 Refrigeration Cycle Abnormality (F24)

#### **Malfunction Decision Conditions:**


- 1 During compressor running (heating / cooling) for more than 10 minutes except deice, pumpdown and test mode.
- 2 During heating / cooling, water outlet and water inlet difference is less than 1°C.
- 3 During heating / cooling, high pressure < 1MPa (143 Psi) for more than 10 minutes or < 0.2 MPa (28 Psi) for more than 5 minutes.
- 4 During heating / cooling, discharge temperature saturation temperature of high pressure  $\geq$  60°C.

#### **Malfunction Caused:**

- 1 Refrigerant shortage (refrigerant leakage).
- 2 Faulty indoor water inlet, indoor water outlet, compressor discharge temp sensor or high pressure sensor.
- 3 2/3 way valve closed.
- 4 Clogged expansion valve or strainer.
- 5 Faulty indoor or outdoor PCB (main).

#### Abnormality Judgment:

Continue 2 times in 30 minutes.

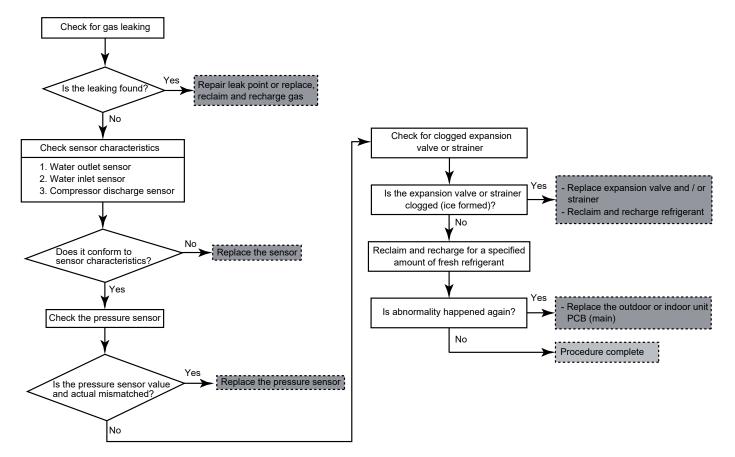

### 18.5.35 Four Way Valve Abnormality (F25)

### **Malfunction Decision Conditions:**


- 1 During heating operation, when the indoor pipe temperature of thermostat ON indoor unit < 0°C.
- 2 During cooling operation, when the indoor pipe temperature of thermostat ON indoor unit > 45°C.

### Malfunction Caused:

- 1 Faulty sensor.
- 2 Faulty connector connection.
- 3 Faulty outdoor unit PCB (noise filter/main).
- 4 Faulty four way valve.

### Abnormality Judgment:

Continue 4 times in 30 minutes.

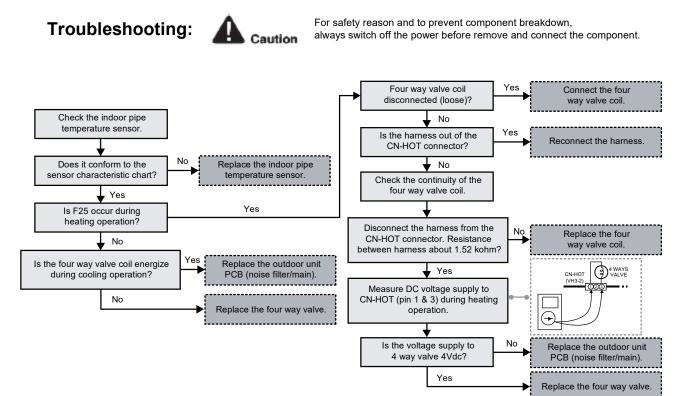

### 18.5.36 Outdoor High Pressure Switch Abnormal (F27)

#### **Malfunction Decision Conditions:**


During compressor stop, and outdoor high pressure switch is remain opened.

#### **Malfunction Caused:**

- 1 Faulty connector connection.
- 2 Faulty switch.
- 3 Faulty outdoor unit PCB (main).

#### Abnormality Judgment:

Continue for 1 minute.

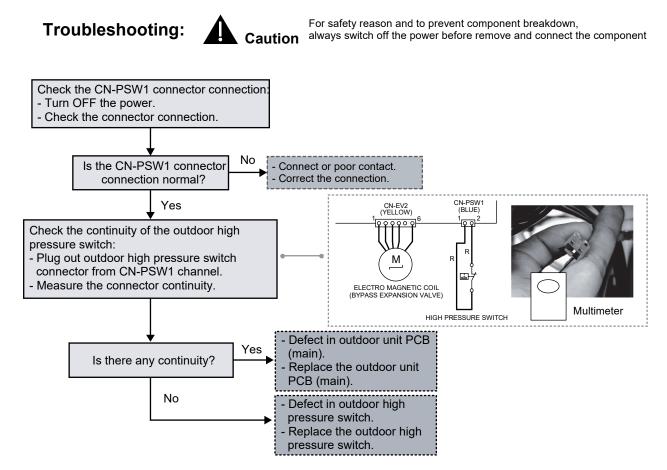

### 18.5.37 Low Discharge Superheat (F29)

### **Malfunction Decision Conditions:**


During startup and operation of cooling and heating, the temperatures detected by the outdoor pipe temperature sensor are used to determine sensor error.

### Malfunction Caused:

- 1 Faulty connector connection.
- 2 Faulty sensor.
- 3 Faulty outdoor unit PCB (main).
- 4 Faulty High Pressure Switch
- 5 Refrigerant shortage (refrigerant leakage).

### Abnormality Judgment:

1 times occurrence within 2550 minutes.

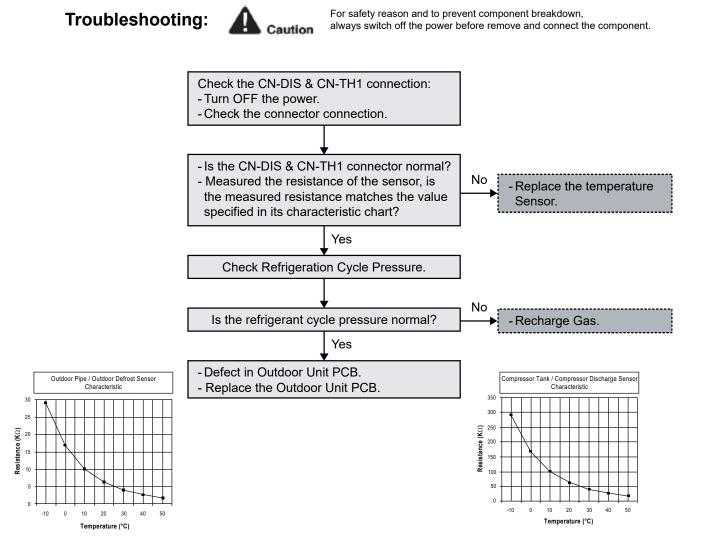

### 18.5.38 Indoor Water Outlet Temperature Sensor 2 Abnormality (F30)


#### **Malfunction Decision Conditions:**

During startup and operation of cooling and heating, the temperatures detected by the indoor water outlet temperature sensor 2 are used to determine sensor error.

#### **Malfunction Caused:**

- 1 Faulty connector connection.
- 2 Faulty sensor.
- 3 Faulty indoor unit PCB.

#### Abnormality Judgment:

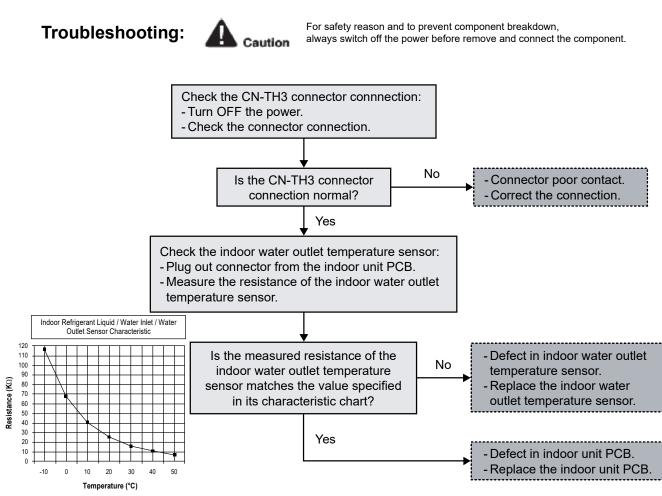

### 18.5.39 Outdoor Air Temperature Sensor Abnormality (F36)


#### **Malfunction Decision Conditions:**

During startup and operation of cooling and heating, the temperatures detected by the outdoor air temperature sensor are used to determine sensor error.

#### Malfunction Caused:

- 1 Faulty connector connection.
- 2 Faulty sensor.
- 3 Faulty outdoor unit PCB (main).

### Abnormality Judgment:

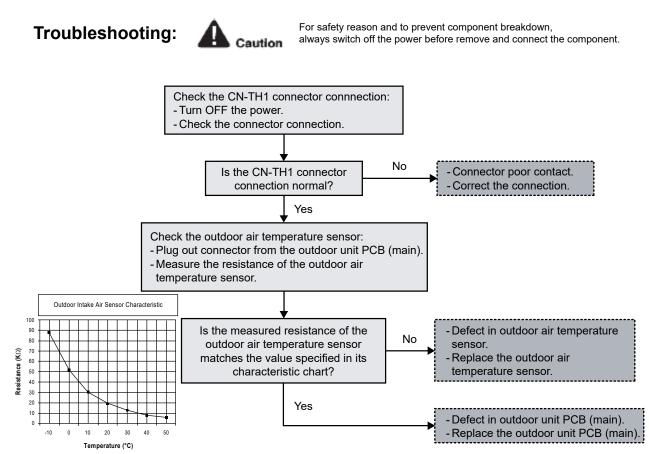

### 18.5.40 Indoor Water Inlet Temperature Sensor Abnormality (F37)


#### **Malfunction Decision Conditions:**

During startup and operation of cooling and heating, the temperatures detected by the indoor water inlet temperature sensor are used to determine sensor error.

#### **Malfunction Caused:**

- 1 Faulty connector connection.
- 2 Faulty sensor.
- 3 Faulty indoor unit PCB (main).

#### Abnormality Judgment:

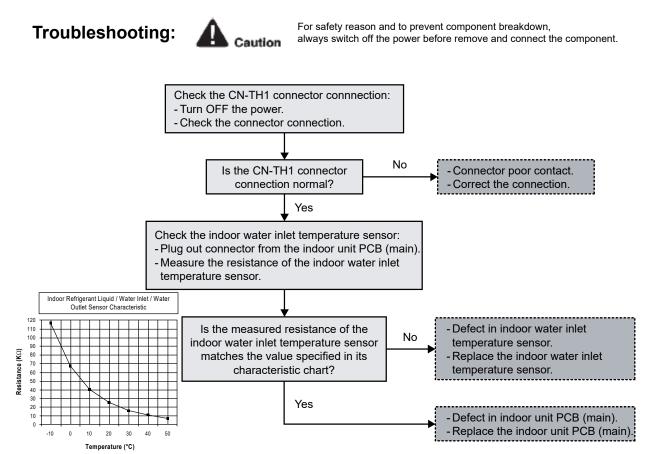

### 18.5.41 Outdoor Discharge Pipe Temperature Sensor Abnormality (F40)


#### **Malfunction Decision Conditions:**

During startup and operation of cooling and heating, the temperatures detected by the outdoor discharge pipe temperature sensor are used to determine sensor error.

#### **Malfunction Caused:**

- 1 Faulty connector connection.
- 2 Faulty sensor.
- 3 Faulty outdoor unit PCB (main).

### Abnormality Judgment:

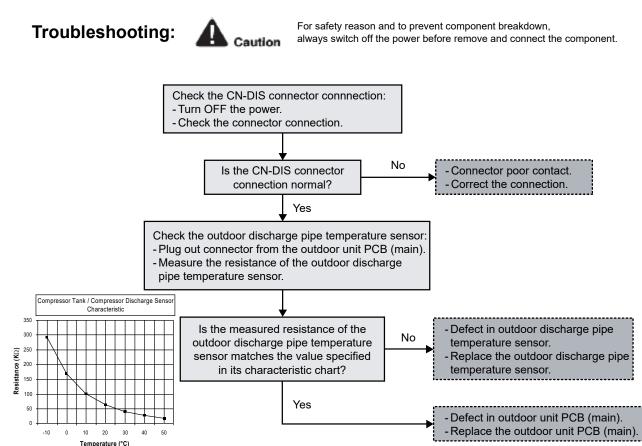

### 18.5.42 Power Factor Correction (PFC) Abnormality (F41)

### **Malfunction Decision Conditions:**


During operation of cooling and heating, when the PFC protection circuitry in the outdoor unit PCB (main) senses abnormal high DC voltage level.

#### **Malfunction Caused:**

- 1 Power supply surge.
- 2 Compressor windings not uniform.
- 3 Faulty outdoor unit PCB (main).

#### Abnormality Judgment:

Continue 4 times in 10 minutes.

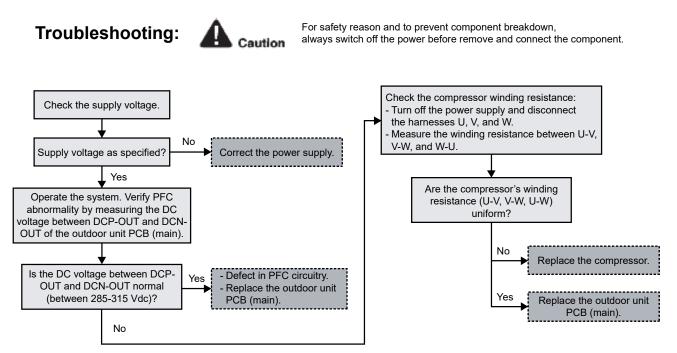

### 18.5.43 Outdoor Pipe Temperature Sensor Abnormality (F42)


### **Malfunction Decision Conditions:**

During startup and operation of cooling and heating, the temperatures detected by the outdoor pipe temperature sensor are used to determine sensor error.

### Malfunction Caused:

- 1 Faulty connector connection.
- 2 Faulty sensor.
- 3 Faulty outdoor unit PCB (main).

### Abnormality Judgment:

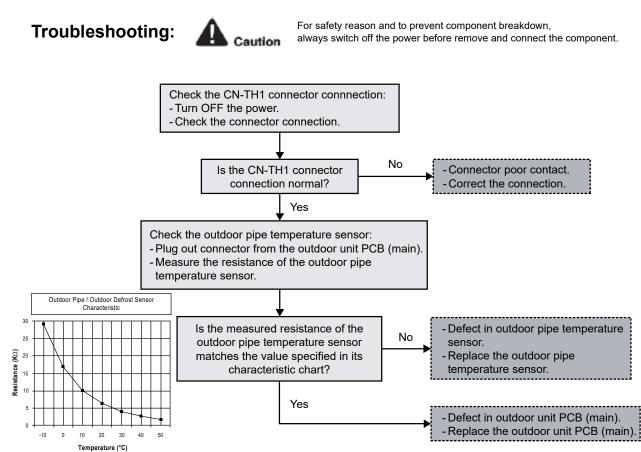

### 18.5.44 Outdoor Defrost Temperature Sensor Abnormality (F43)


### **Malfunction Decision Conditions:**

During startup and operation of cooling and heating, the temperatures detected by the outdoor defrost temperature sensor are used to determine sensor error.

#### **Malfunction Caused:**

- 1 Faulty connector connection.
- 2 Faulty sensor.
- 3 Faulty outdoor unit PCB (main).

#### Abnormality Judgment:

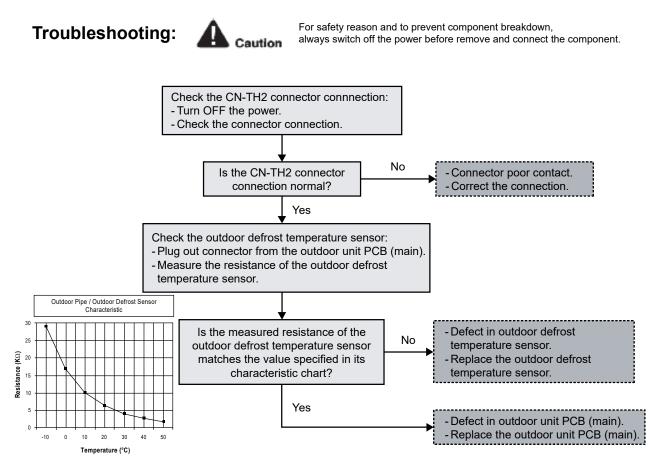

### 18.5.45 Indoor Water Outlet Temperature Sensor Abnormality (F45)


#### **Malfunction Decision Conditions:**

During startup and operation of cooling and heating, the temperatures detected by the indoor water outlet temperature sensor are used to determine sensor errors.

#### Malfunction Caused:

- 1 Faulty connector connection.
- 2 Faulty sensor.
- 3 Faulty indoor unit PCB (main).

### Abnormality Judgment:

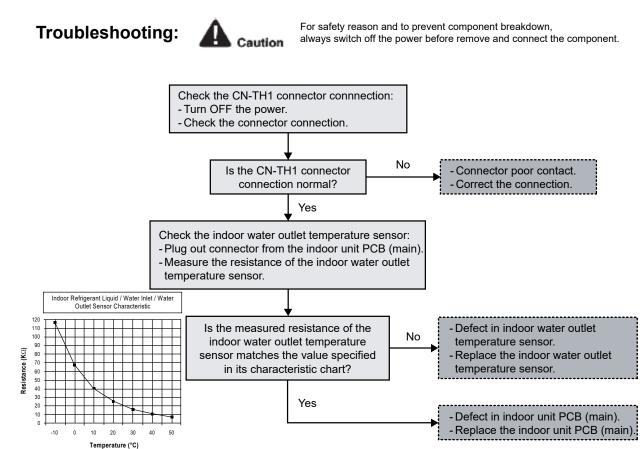

### 18.5.46 Outdoor Current Transformer Open Circuit (F46)

### **Malfunction Decision Conditions:**


A current transformer (CT) open circuit is detected by checking the compressor running frequency ( $\geq$  rated frequency) and CT detected input current (< 0.65 A) for continuously 20 seconds.

#### **Malfunction Caused:**

- 1 CT defective.
- 2 Faulty outdoor unit PCB (main).
- 3 Compressor defective (low compression).

#### Abnormality Judgment:

Continue 3 times in 20 minutes.

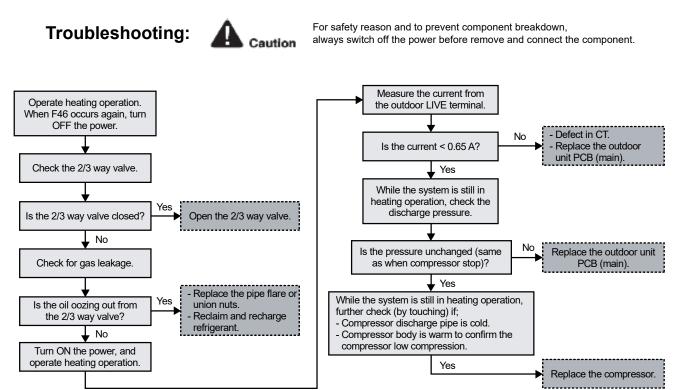

### 18.5.47 Outdoor Bypass Outlet Temperature Sensor (F49)

### **Malfunction Decision Conditions:**

During start up and operation of cooling and heating, the temperature detected by outdoor bypass sensor is used to determine sensor error.

### Malfunction Caused:

- 1 Faulty connector connection
- 2 Faulty sensor
- 3 Faulty outdoor unit PCB (main)


### Abnormality Judgment:

Continuous for 5 seconds

# Troubleshooting:



For safety reason and to prevent component breakdown, always switch off the power before remove and connect the component.

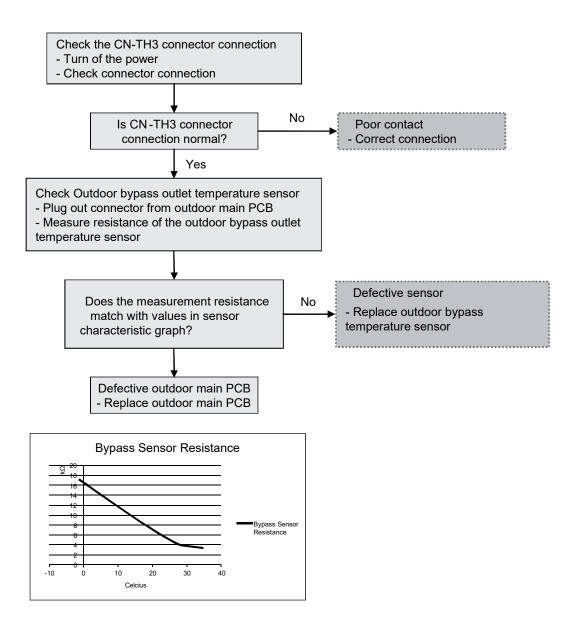


# 19. Disassembly and Assembly Instructions

### 

High Voltage are generated in the electrical parts area by the capacitor. Ensure that the capacitor has discharged sufficiently before proceeding with repair work. Failure to heed this caution may result in electric shocks.


### 19.1 Indoor Unit

### 19.1.1 To Remove Front Plate and Top Plate

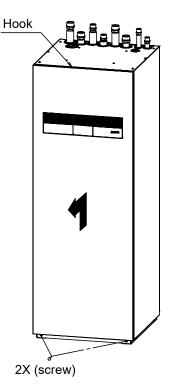

- 1 Remove 2 screw at the bottom to remove the Front Plate
- 2 Remove 12 screw at the top to remove the Top Plate

### 19.1.2 To Remove Remote Control

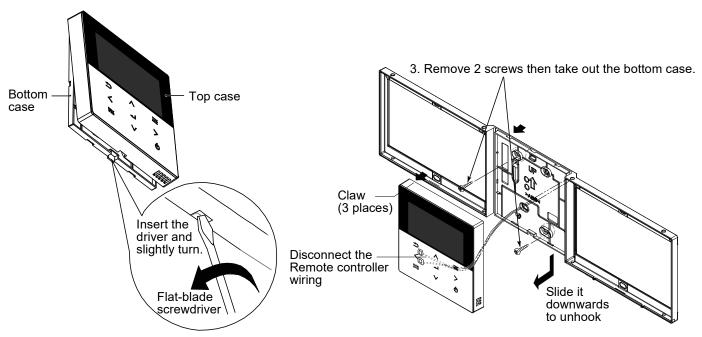


1. Remove the top case from the bottom case.


2. Disconnect the Remote Controller wiring.

### 19.1.3 To Remove RCCB


1. Remove 2 screws to open the Control Board Cover.

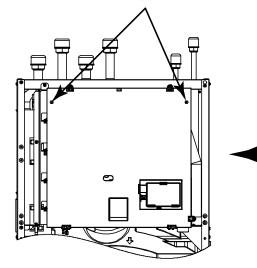

2. Disconnect lead wires (Brown, black, grey and blue) from RCCB.  $\hfill \label{eq:rescaled}$ 

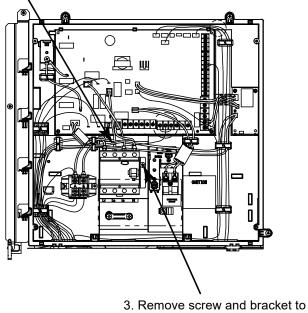


remove the RCCB.

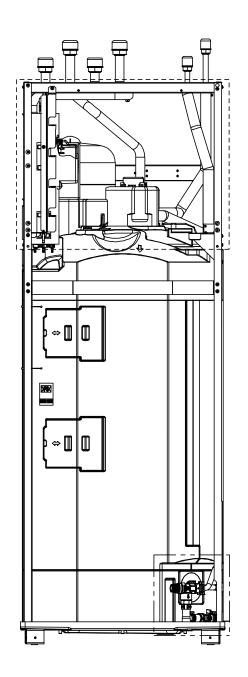


### 19.1.4 To Remove Electronic Controller

- 1. Disconnect all connectors from main PCB. (CN-FLWSEN, CN-PUMP1, CN-TH1, CN-TH2, CN-TH3, CN-OLP1, CN1, CN2, CN3, CN4, CN5, CN6, CN-CNT2, CN-DPS)
- 2. Detach remote controller, 3-way valve and all wires. (AC1-L3, AC1-N, G01, G05, DATA, G02, L2, L1, G03, AC2-L2, HT1-L2, HT1-L3, AC2-L3, AC2-N2, AC2-N3)

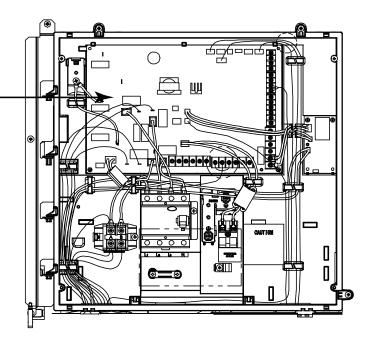


### 19.1.5 To Remove Flow Sensor

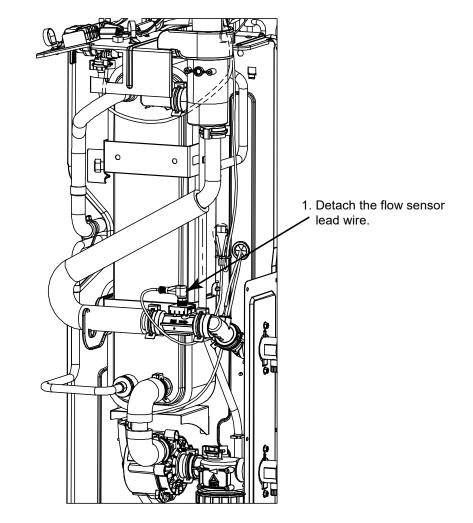


M When reinstall Flow sensor, ensure the arrow on the flow sensor is parallel with the pipe shaft and is facing in the direction of flow.

### 19.1.6 To Remove Valve Body

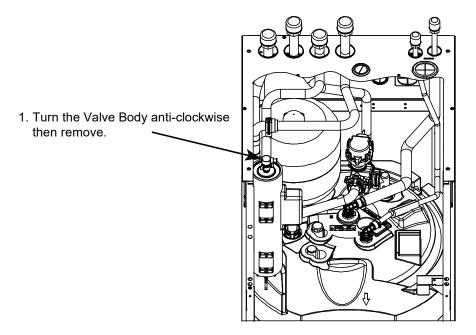


### 19.1.7 To Remove Water Pump

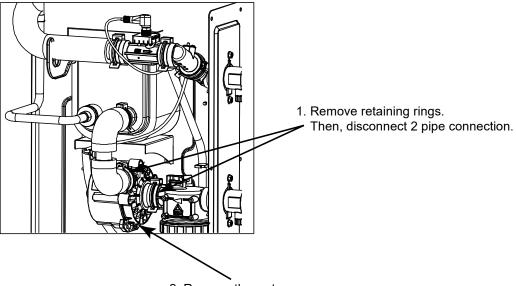

2. Remove the water pump screw.

### 19.1.8 To Remove Bottle Complete

2. Disconnect the connector CN-OLP1 from Electronic controller and detached lead wires AC-L1 (Brown), HT-L2 (Orange), HT-L3 (Red), lead wire (Brown) from terminal B, lead wire (Red) from heater 2 and lead wire (Orange) from heater 3.

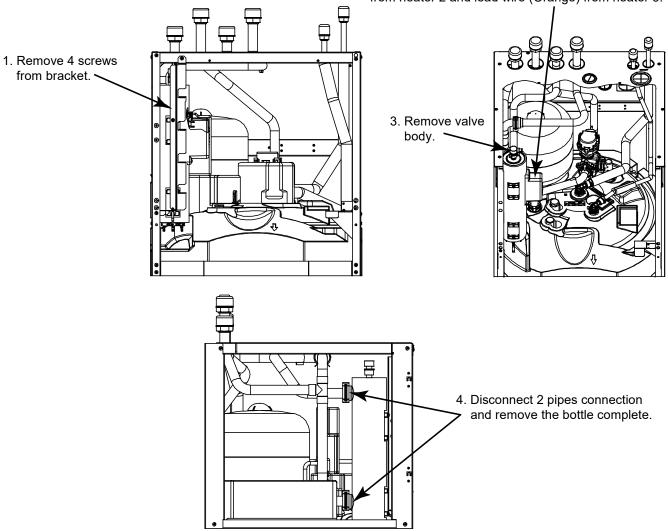





This symbol shows that this equipment uses a flammable refrigerant with safety A3 group per ISO 817. If the refrigerant is leaked, together with an external ignition source, there is a possibility of fire / explosion.


- If you are working on the R290 product, before starting work and when entering the service area, always turn ON the combustible gas leak detector to ensure there is no leakage.
- Keep all ignition sources away from the product. In particular, open flames, hot surfaces, electrical devices that are not free from electrical sources, static discharges.
- Ensure the servicing area is well ventilated.
- Ensure all the serving tools and equipment complied with ATEX (Atmosphere Explosible) standard.
- Ensure the product is service by certified and authorized serviceman.
- Ensure to always have the approved fire extinguisher during servicing.
- Use a warning placard to ensure that unauthorized personnel cannot enter the protective zone.

### 19.2 Outdoor Unit

### 19.2.1 Electronic Controller Removal Procedures

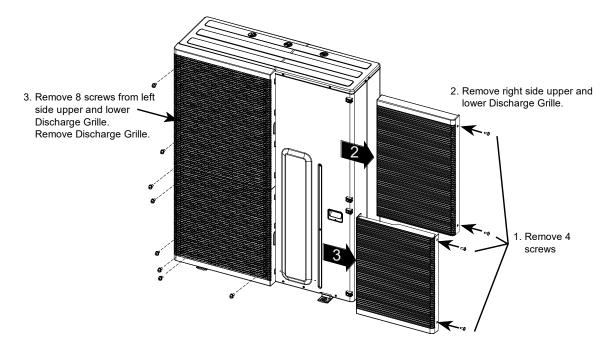

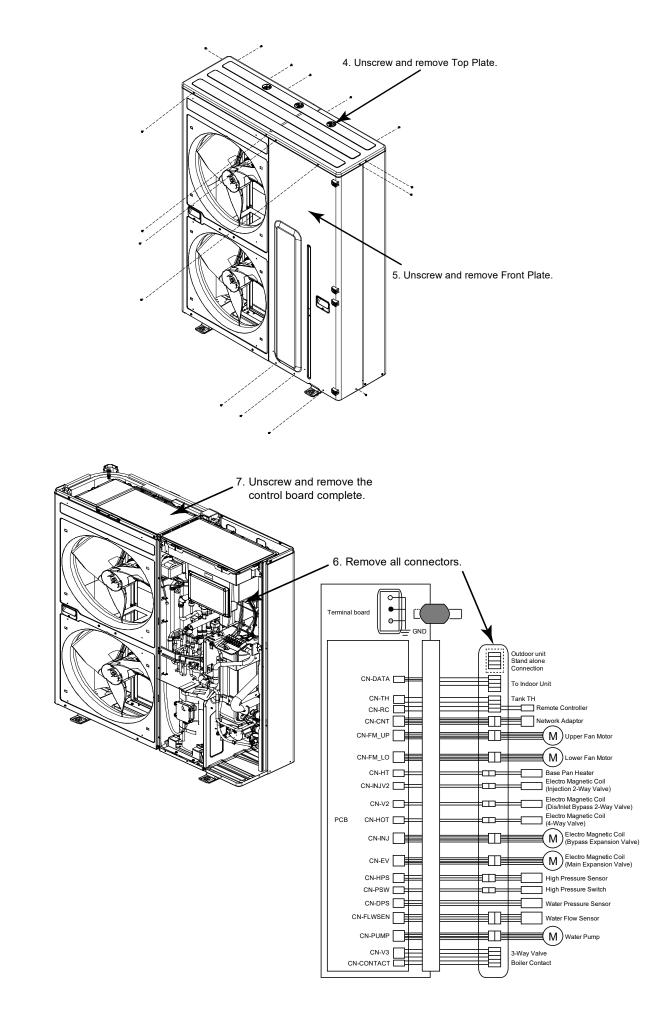

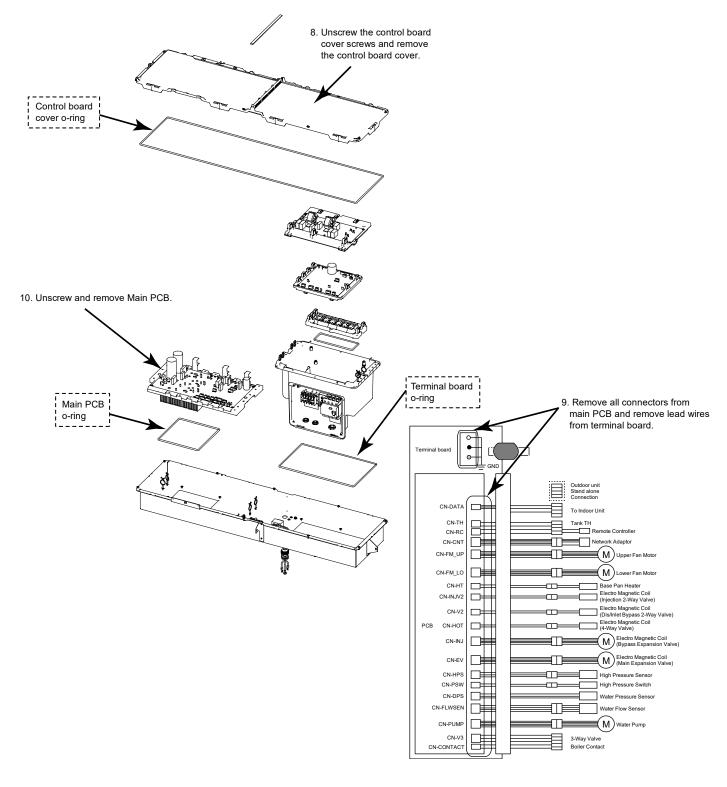

Note: During re-assemble the Main PCB, ensure to attach the O-ring properly to avoid gas leakage into the control board complete.

# 20. Technical Data


## 20.1 Operation Characteristics

## 20.1.1 WH-WXG09ME8

## Heating Characteristics at Different Outdoor Air Temperature


Condition

Outdoor air temperature : 7°C (DBT), 6°C (WBT) Indoor water inlet temperature : 30°C Indoor water outlet temperature : 35°C Water Piping length between outdoor unit and indoor unit : 5 m

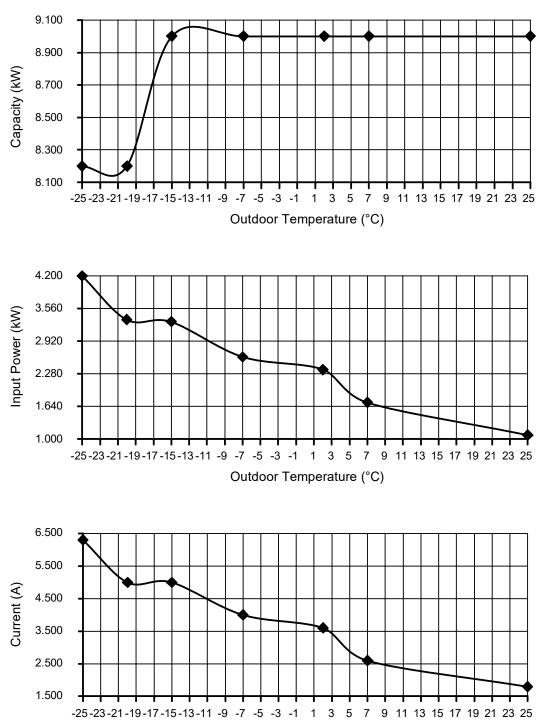


Outdoor Temperature (°C)


Condition Outdoor air temperature : 35°C (DBT), -°C (WBT) Indoor water inlet temperature : 12°C Indoor water outlet temperature : 7°C Water Piping length between outdoor unit and indoor unit : 5 m

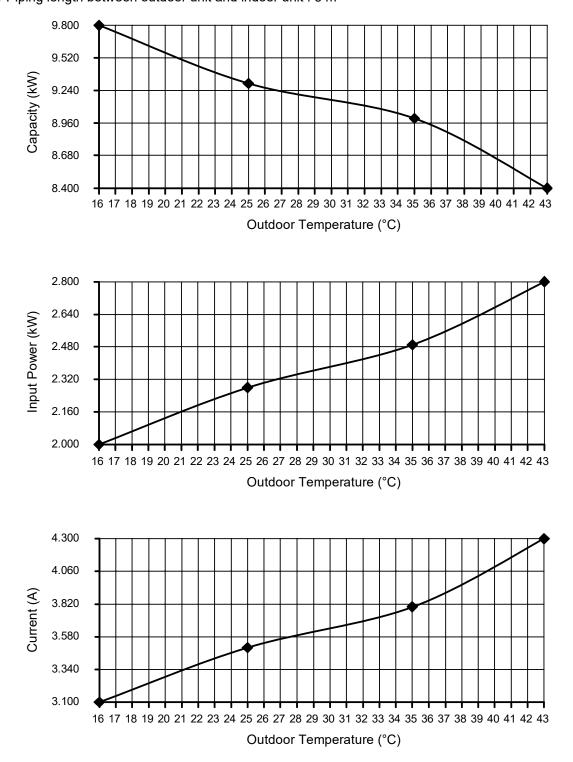

Condition Outdoor air temperature : 35°C (DBT), -°C (WBT) Indoor water inlet temperature : 19°C Indoor water outlet temperature : 14°C Water Piping length between outdoor unit and indoor unit : 5 m

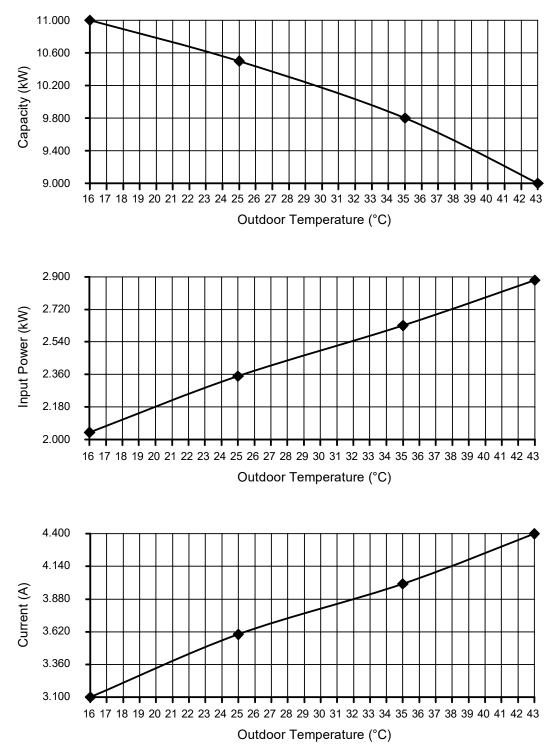

Condition Outdoor air temperature : 35°C (DBT), -°C (WBT) Indoor water inlet temperature : 23°C Indoor water outlet temperature : 18°C Water Piping length between outdoor unit and indoor unit : 5 m

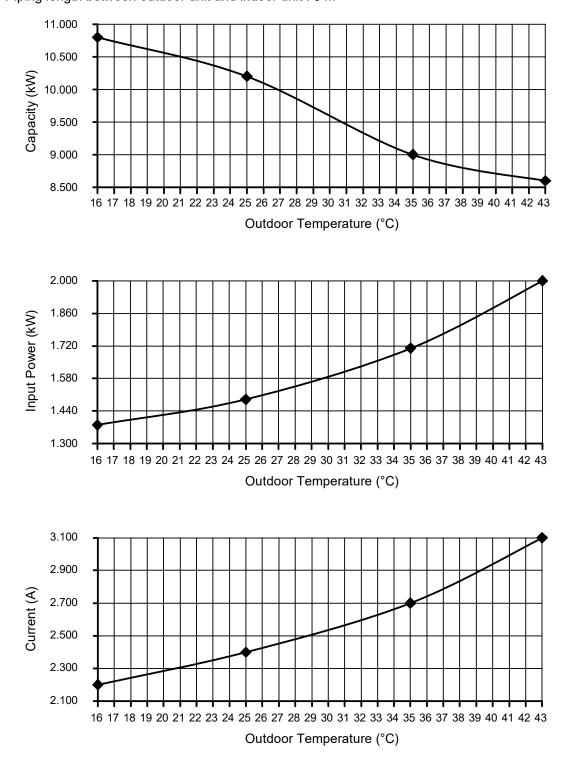

## 20.1.2 WH-WXG12ME8

## Heating Characteristics at Different Outdoor Air Temperature


Condition

Outdoor air temperature : 7°C (DBT), 6°C (WBT)


Indoor water inlet temperature : 30°C

Indoor water outlet temperature : 35°C


Water Piping length between outdoor unit and indoor unit : 5 m

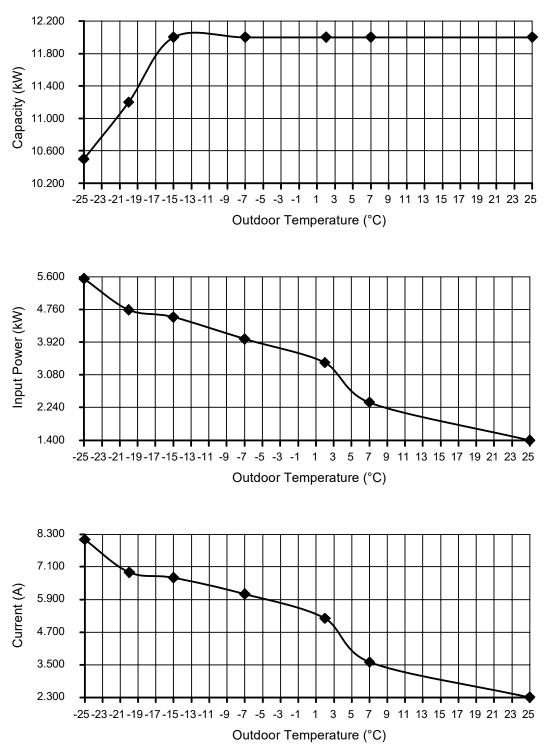


Condition Outdoor air temperature : 35°C (DBT), -°C (WBT) Indoor water inlet temperature : 12°C Indoor water outlet temperature : 7°C Water Piping length between outdoor unit and indoor unit : 5 m

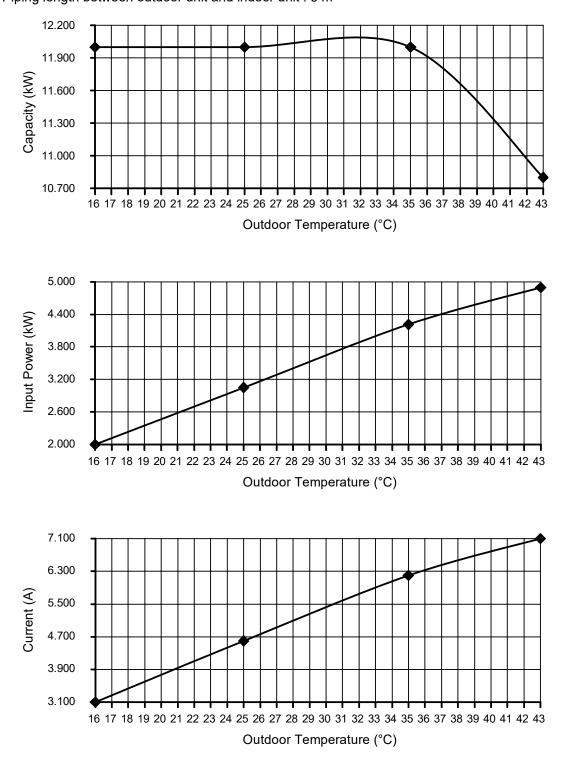

## Cooling Characteristics at Different Outdoor Air Temperature Condition Outdoor air temperature : 35°C (DBT), -°C (WBT) Indoor water inlet temperature : 19°C Indoor water outlet temperature : 14°C

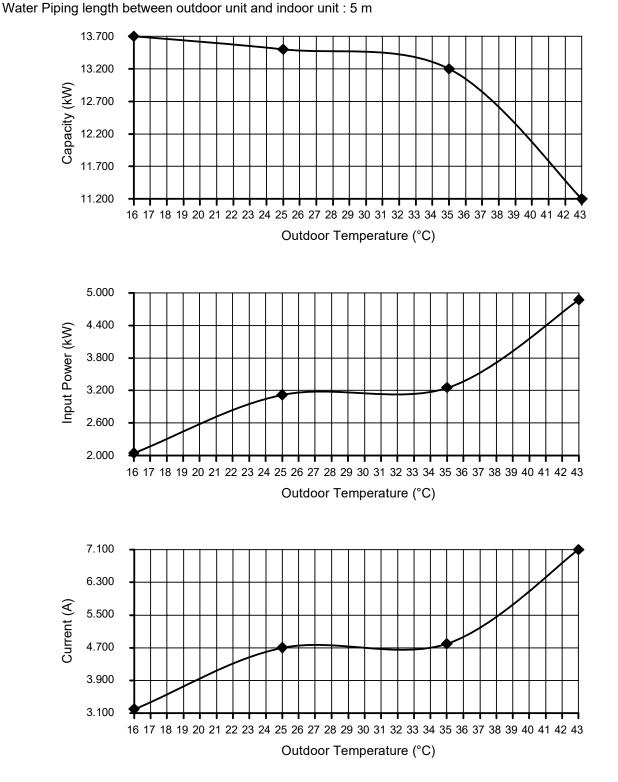

# **Cooling Characteristics at Different Outdoor Air Temperature** Condition Outdoor air temperature : 35°C (DBT), -°C (WBT) Indoor water inlet temperature : 23°C Indoor water outlet temperature : 18°C Water Piping length between outdoor unit and indoor unit : 5 m 12.500 12.300 Capacity (kW) 12.100 11.900 11.700 11.500 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37 38 39 40 41 42 43 Outdoor Temperature (°C) 3.600 3.080 Input Power (kW) 2.560 2.040 1.520 1.000 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37 38 39 40 41 42 43 Outdoor Temperature (°C) 5.300 4.580 3.860

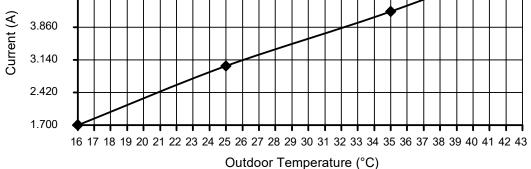

## 20.1.3 WH-WXG16ME8

## Heating Characteristics at Different Outdoor Air Temperature


Condition

Outdoor air temperature : 7°C (DBT), 6°C (WBT)


Indoor water inlet temperature : 30°C

Indoor water outlet temperature : 35°C


Water Piping length between outdoor unit and indoor unit : 5 m

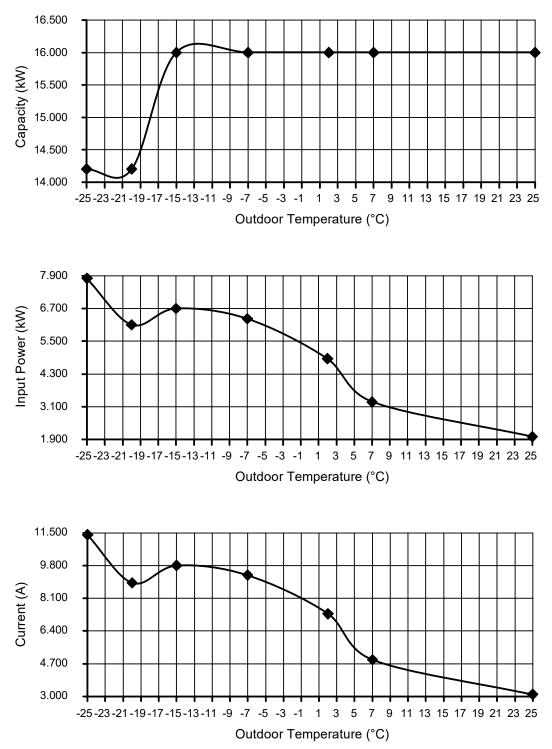

Condition Outdoor air temperature : 35°C (DBT), -°C (WBT) Indoor water inlet temperature : 12°C Indoor water outlet temperature : 7°C Water Piping length between outdoor unit and indoor unit : 5 m

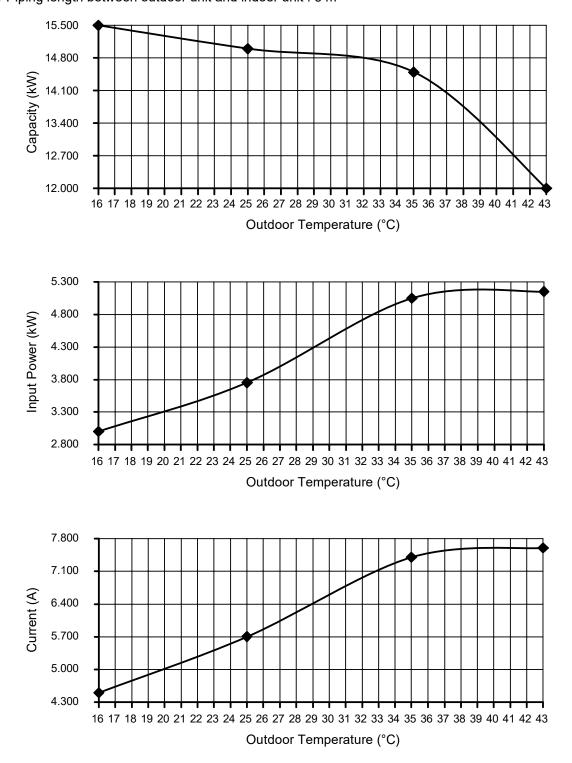

Condition Outdoor air temperature : 35°C (DBT), -°C (WBT) Indoor water inlet temperature : 19°C Indoor water outlet temperature : 14°C Water Piping length between outdoor unit and indoor unit : 5 m

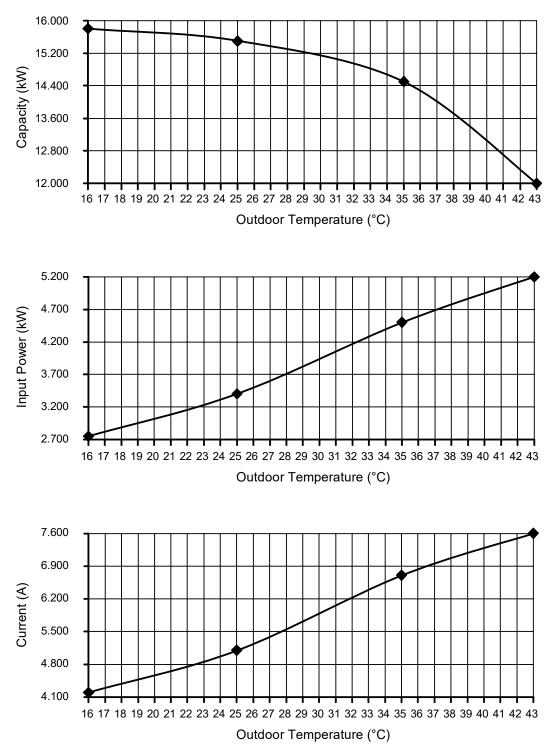

# **Cooling Characteristics at Different Outdoor Air Temperature** Condition Outdoor air temperature : 35°C (DBT), -°C (WBT) Indoor water inlet temperature : 23°C Indoor water outlet temperature : 18°C Water Piping length between outdoor unit and indoor unit : 5 m 16.500 16.100 Capacity (kW) 15.700 15.300 14.900 14.500 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37 38 39 40 41 42 43 Outdoor Temperature (°C) 5.500 4.900 Input Power (kW) 4.300 3.700 3.100 2.500 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37 38 39 40 41 42 43 Outdoor Temperature (°C) 8.000 7.100 Current (A) 6.200 5.300 4.400 3.500

16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37 38 39 40 41 42 43 Outdoor Temperature (°C)

# 20.2 Heating Capacity Table

## 20.2.1 WH-WXG09ME8

Water Out (°C)		25			35			45	
Outdoor Air (°C)	Capacity (W)	Input Power (W)	Current (A)	Capacity (W)	Input Power (W)	Current (A)	Capacity (W)	Input Power (W)	Current (A)
-25	7900	3500	5.3	8200	4200	6.3	7900	4800	7.0
-20	7900	2940	4.4	8200	3340	5.0	7900	3990	5.9
-15	9000	2740	4.1	9000	3300	5.0	9000	3970	5.9
-7	9000	2260	3.4	9000	2610	4.0	9000	3350	5.0
2	8800	1950	3.0	9000	2360	3.6	9000	2910	4.4
7	9000	1240	2.0	9000	1720	2.6	9000	2300	3.5
25	9000	610	1.2	9000	1080	1.8	9000	1550	2.4
Water Out (°C)		55			65			75	
Outdoor Air (°C)	Capacity (W)	Input Power (W)	Current (A)	Capacity (W)	Input Power (W)	Current (A)	Capacity (W)	Input Power (W)	Current (A)
-25	7600	5700	8.3	-	-	-	-	-	-
-20	7600	4760	7.0	7100	5300	7.8	-	-	-
-15	9000	4480	6.8	9000	5270	7.8	8200	6500	9.5
-7	9000	3830	5.8	9000	4680	6.8	9000	5900	8.6
	9000	3540	5.3	9000	4290	6.5	9000	5500	8.0
2	3000	0010							
2 7	9000	2780	4.2	9000	3460	5.2	8900	4980	7.3

## 20.2.2 WH-WXG12ME8

Water Out (°C)		25		35				45	
Outdoor Air (°C)	Capacity (W)	Input Power (W)	Current (A)	Capacity (W)	Input Power (W)	Current (A)	Capacity (W)	Input Power (W)	Current (A)
-25	10200	4900	7.2	10500	5550	8.1	9800	6700	9.9
-20	11000	4250	6.3	11200	4750	6.9	11000	5500	8.1
-15	12000	4270	6.3	12000	4560	6.7	12000	5670	8.3
-7	11500	3680	5.6	12000	4000	6.1	12000	5020	7.4
2	11500	2920	4.5	12000	3390	5.2	12000	4200	6.3
7	12000	1930	3.1	12000	2370	3.6	12000	3130	4.7
25	12000	1000	1.8	12000	1400	2.3	12000	2000	3.1

Water Out (°C)		55			65			75	
Outdoor Air (°C)	Capacity (W)	Input Power (W)	Current (A)	Capacity (W)	Input Power (W)	Current (A)	Capacity (W)	Input Power (W)	Current (A)
-25	9700	7400	10.8	-	-	-	-	-	-
-20	10800	6450	9.5	10300	7550	11.0	-	-	-
-15	12000	6000	8.8	12000	7060	10.4	11000	8450	12.4
-7	12000	5530	8.2	12000	6570	9.6	11600	7300	10.6
2	12000	4950	7.3	12000	5940	8.6	12000	7300	10.6
7	12000	3710	5.6	12000	4620	7.1	12000	6100	9.0
25	12000	2600	3.9	12000	3260	4.9	12000	3920	5.9

## 20.2.3 WH-WXG16ME8

Water Out (°C)		25		35				45	
Outdoor Air (°C)	Capacity (W)	Input Power (W)	Current (A)	Capacity (W)	Input Power (W)	Current (A)	Capacity (W)	Input Power (W)	Current (A)
-25	14200	6800	9.9	14200	7800	11.4	14200	8600	12.5
-20	14200	5400	7.9	14200	6100	8.9	14200	6900	10.1
-15	16000	5900	8.6	16000	6700	9.8	16000	7700	11.2
-7	16000	5400	7.9	16000	6320	9.3	16000	7100	10.4
2	16000	3630	5.5	16000	4850	7.3	16000	5880	8.6
7	16000	2700	4.1	16000	3270	4.9	16000	4190	6.3
25	16000	1450	2.4	16000	1990	3.1	16000	2850	4.3

Water Out (°C)		55			65			75	
Outdoor Air (°C)	Capacity (W)	Input Power (W)	Current (A)	Capacity (W)	Input Power (W)	Current (A)	Capacity (W)	Input Power (W)	Current (A)
-25	14000	10530	15.4	-	-	-	-	-	-
-20	14200	8100	11.8	14200	10160	14.8	-	-	-
-15	16000	8700	12.7	16000	10150	14.8	14200	10900	15.9
-7	16000	8120	11.9	16000	9400	13.7	16000	10300	15.0
2	16000	6750	9.9	16000	8150	11.9	16000	9990	14.6
7	16000	5000	7.4	16000	6300	9.3	16000	7600	11.1
25	16000	3650	5.5	16000	4750	7.1	16000	6300	9.3

# 20.3 Cooling Capacity Table

## 20.3.1 WH-WXG09ME8

Water Out (°C)		7			14			18		
Outdoor Air (°C)	Capacity (W)	Input Power (W)	Current (A)	Capacity (W)	Input Power (W)	Current (A)	Capacity (W)	Input Power (W)	Current (A)	
16	9800	2000	3.1	11000	2040	3.1	10800	1380	2.2	
25	9300	2280	3.5	10500	2350	3.6	10200	1490	2.4	
35	9000	2490	3.8	9800	2630	4.0	9000	1710	2.7	
43	8400	2800	4.3	9000	2880	4.4	8600	2000	3.1	

## 20.3.2 WH-WXG12ME8


Water Out (°C)		7			14			18	
Outdoor Air (°C)	Capacity (W)	Input Power (W)	Current (A)	Capacity (W)	Input Power (W)	Current (A)	Capacity (W)	Input Power (W)	Current (A)
16	12000	2000	3.1	13700	2050	3.2	12000	1030	1.7
25	12000	3050	4.6	13500	3120	4.7	12000	1880	3.0
35	12000	4210	6.2	13200	3250	4.8	12000	2800	4.2
43	10800	4890	7.1	11200	4870	7.1	12000	3600	5.3

## 20.3.3 WH-WXG16ME8


Water Out (°C)		7			14			18		
Outdoor Air (°C)	Capacity (W)	Input Power (W)	Current (A)	Capacity (W)	Input Power (W)	Current (A)	Capacity (W)	Input Power (W)	Current (A)	
16	15500	3000	4.5	15800	2750	4.2	16000	2500	3.8	
25	15000	3750	5.7	15500	3400	5.1	16000	3100	4.7	
35	14500	5050	7.4	14500	4500	6.7	15500	3950	5.9	
43	12000	5150	7.6	12000	5200	7.6	15000	5350	7.9	


# 21. Exploded View and Replacement Parts List


## 21.1 Indoor Unit

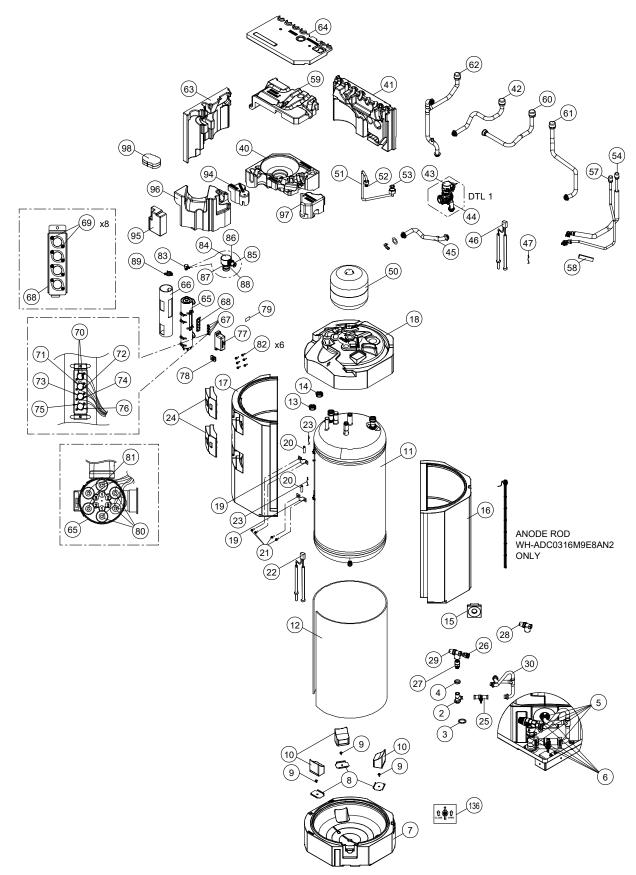


#### Note:

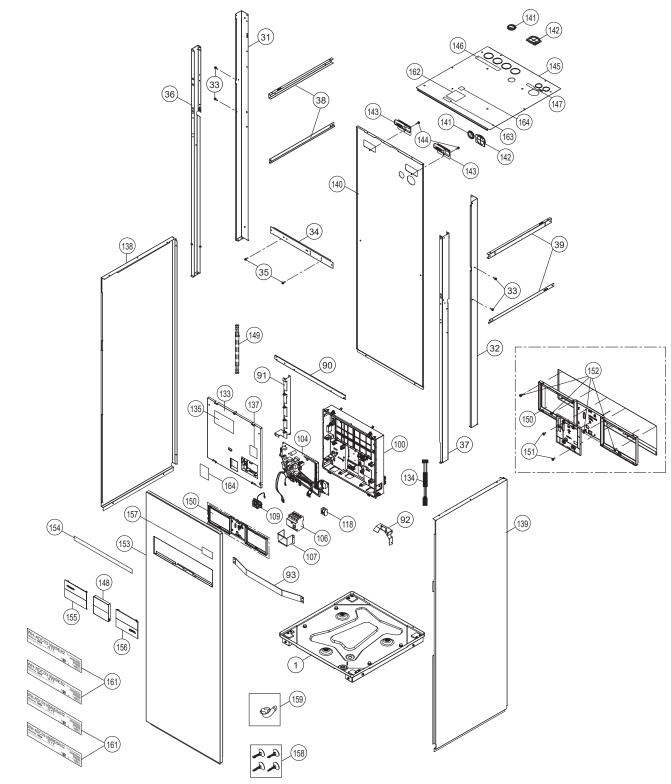

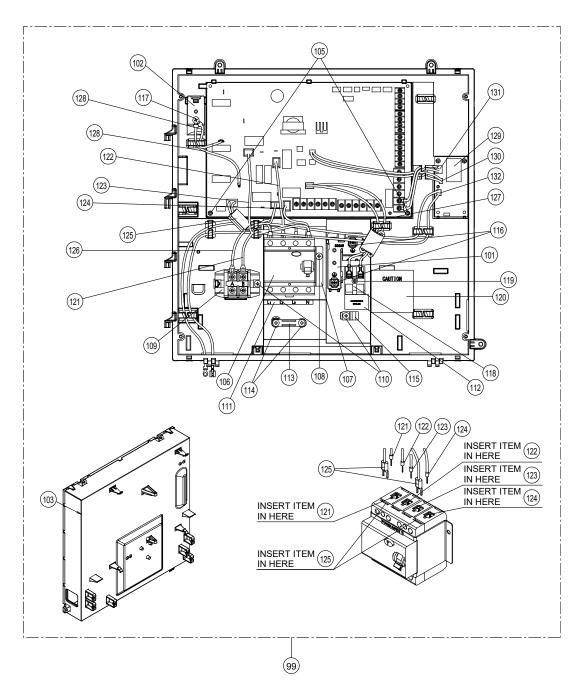

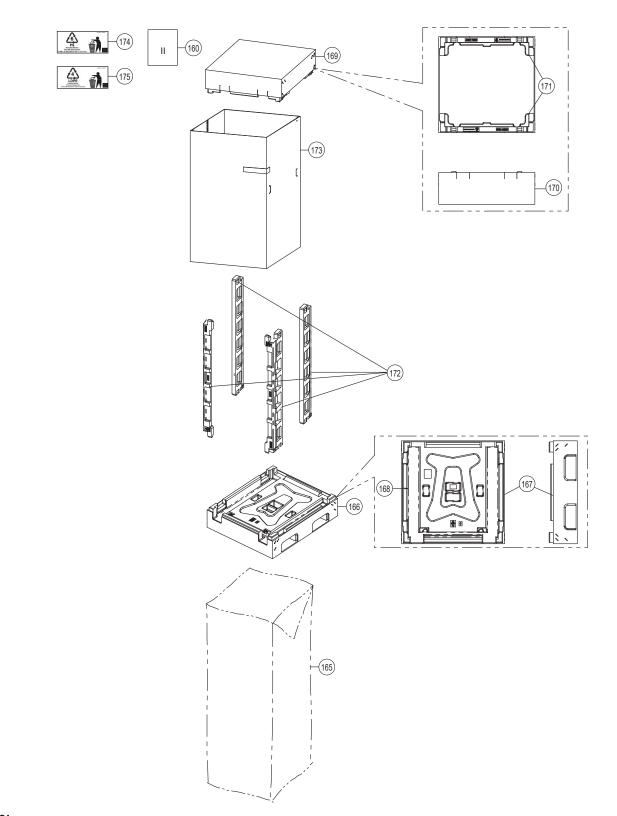

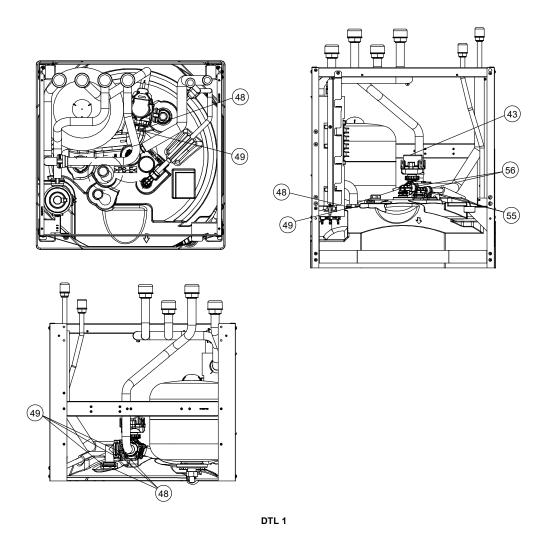

SAFETY	REF. NO.	DESCRIPTION & NAME	QTY.	WH- ADC0316M9E82	WH- ADC0316M9E8AN2	REMARK
	1	CHASSIS - COMPLETE	1	ACXD50C04840	←	
	2	TUBE CONNECTOR	1	ACXT29-02570	←	
	3	PACKING	1	ACXB81-07070	←	
	4	NUT	1	ACXH56-01370	←	
$\mathbb{V}$	5	PACKING	5	ACXB81-00010	←	
	6	RETAINING RING	5	H581007	←	
	7	FOAMED POLYSTYRENE	1	ACXG07-07690	←	
	8	U-SHAPED PLATE	3	ACXD62-02690	←	
	9	SCREW	3	H551029J	←	
	10	FOAMED POLYSTYRENE	3	ACXG07-07750	<i>←</i>	
$\wedge$	11	TANK COMPLETE	1	ACXB56C01210	<i>←</i>	
	12	NON - COMBUSTIBLE FOAM	1	ACXG05-00540	<i>←</i>	
	13	САР	1	H521306	←	
	14	САР	1	ACXH52-04200	ACXH66-00190	
	15	FOAMED POLYSTYRENE	1	ACXG07-07700	←	
	16	FOAMED POLYSTYRENE	1	ACXG07-07710	←	
	17	FOAMED POLYSTYRENE	1	ACXG07-07720	←	
	18	FOAMED POLYSTYRENE	1	ACXG07-08350	←	
	19	PARTICULAR PIECE	2	D934023	←	
	20	STRAIGHT TUBE	2	T102044	←	
	21	NUT	4	H561116	←	
Ŵ	22	SENSOR - COMPLETE (CN-TH2)	1	ACXA50C20700		0
	23	PLATE SPRING	2	H711010	←	
	24	FOAMED POLYSTYRENE	2	ACXG07-07740		
Ŵ	25	COCK - COMPLETE (DRAIN)	1	ACXB65C00111	←	
	26	SOCKET	1	ACXT27-00090	←	
	27	SOCKET	1	ACXT27-00020		
	28	VALVE BODY (SAFETY RELIEF VALVE)	1	ACXB62-00111		0
$\wedge$	29	VALVE BODY (RBM SAFETY VALVE)	1	ACXB62-00920		0
	30	TUBE ASSY	1	ACXT00-77551		
	31	L-SHAPED PLATE	1	ACXD60-04771		
	32	L-SHAPED PLATE	1	ACXD60-04781		
	33	SCREW	4	H551040J		
	34	CONNECTING BAR	1	ACXE26-02841		
	35	SCREW	2	H551217		
	36	U-SHAPED PLATE	1	ACXD62-02920		
	37	U-SHAPED PLATE	1	ACXD62-02712		
	38	L-SHAPED PLATE	2	ACXD60-04532	←	
	39	U-SHAPED PLATE	2	ACXD62-02720	←	
	40	FOAMED POLYSTYRENE	1	ACXG07-08360		
	41	FOAMED POLYSTYRENE	1	ACXG07-08400		
	42	TUBE ASSY	1	ACXT00-84190	` ←	
$\wedge$	43	VALVE BODY (3-WAY VALVE)	1	ACXB62-00092	← ←	0

SAFETY	REF. NO.	DESCRIPTION & NAME	QTY.	WH- ADC0316M9E82	WH- ADC0316M9E8AN2	REMARK
	44	L-SHAPED TUBE	1	ACXT20-15030	←	
	45	TUBE ASSY	1	ACXT00-84170	←	
$\mathbf{V}$	46	SENSOR - COMPLETE (CN-TH1)	1	ACXA50C21100	←	0
	47	PLATE SPRING	1	H711019	←	
$\triangle$	48	PACKING	5	ACXB81-06910	←	
	49	RETAINING RING	5	ACXH58-00370	←	
	50	RECEIVER	1	ACXB14-00840	←	
	51	TUBE ASSY	1	ACXT00-84400	←	
	52	PACKING	1	B811179	←	
	53	PACKING	1	ACXB81-07700	←	
	54	TUBE ASSY - COMPLETE	1	ACXT00C46860	←	
	55	SOCKET WITH FLANGE	1	T281049	←	
	56	RETAINING RING	1	ACXH58-00080	←	
	57	TUBE ASSY - COMPLETE	1	ACXT00C46990	←	
	58	POLY - E. FOAM	1	ACXE6A40-100	←	
	59	FOAMED POLYSTYRENE	1	ACXG07-08390	←	
	60	TUBE ASSY	1	ACXT00-84150	←	
	61	TUBE ASSY	1	ACXT00-84140	←	
	62	TUBE ASSY	1	ACXT00-84100	←	
	63	FOAMED POLYSTYRENE	1	ACXG07-08370	←	
	64	FOAMED POLYSTYRENE	1	ACXG07-08560	←	
$\Lambda$	65	HEATER ASSY	1	ACXA34K00620	←	0
	66	SOUND PROOF MATERIAL	1	ACXG30-10530CZ	←	
$\Lambda$	67	THERMOSTAT	4	ACXA15-00260	←	0
	68	U-SHAPED PIECE	1	D721031	←	
	69	MACHINE SCREW & WASHER ASSY	8	XYN3+C5FJ	←	
$\Lambda$	70	LEAD WIRE - COMPLETE (FROM CN-OLP1)	1	ACXA61C00990	←	0
	71	LEAD WIRE - COMPLETE (AC-L1 PCB)	1	ACXA61C01000	←	0
$\underline{\mathbb{N}}$	72	LEAD WIRE - COMPLETE (FROM TERMINAL B)	1	ACXA61C01010	←	0
$\overline{\mathbb{A}}$	73	LEAD WIRE - COMPLETE (FROM HT-L2 PCB)	1	ACXA61C01020	←	0
$\overline{\mathbb{A}}$	74	LEAD WIRE - COMPLETE (FROM HEATER 3)	1	ACXA60C58550	←	0
$\overline{\mathbb{A}}$	75	LEAD WIRE - COMPLETE (FROM HT-L3 PCB)	1	ACXA61C01040	←	0
$\overline{\mathbb{A}}$	76	LEAD WIRE - COMPLETE (FROM HEATER 2)	1	ACXA61C05340	←	0
	77	TERMINAL COVER	1	H171051	←	
	78	PACKING	1	B811177	←	
	79	POLY - E. FOAM (FLAME PROOF - TERMINAL COVER)	1	EN5A15-40	←	
$\wedge$	80	LEAD WIRE - COMPLETE	3	ACXA61C01200	←	0
$\triangle$	81	LEAD WIRE - COMPLETE	1	ACXA61C01230	←	0
-	82	MACHINE SCREW & WASHER ASSY	6	XYN4DC8FJ	←	
	83	VALVE BODY - COMPLETE	1	ACXB62C01130	←	0
$\wedge$	84	VALVE BODY (DRAIN PLUG)	1	ACXB62-01220	←	0
	85	PLUG (AIR PURGE)	1	ACXB82-00860	←	


SAFETY	REF. NO.	DESCRIPTION & NAME	QTY.	WH- ADC0316M9E82	WH- ADC0316M9E8AN2	REMARK
$\wedge$	86	PACKING	1	ACXB81-00020	←	
$\triangle$	87	PACKING	1	ACXB81-06810	←	
	88	PACKING	1	ACXB81-00110	←	
	89	RETAINING RING	1	H581038	←	
	90	CONNECTING BAR	1	ACXE26-03180	←	
	91	CONNECTING BAR	1	ACXE26-03170	←	
	92	PARTICULAR PLATE	1	ACXD90-30560	←	
	93	CONNECTING BAR	1	ACXE26-02880	←	
	94	FOAMED POLYSTYRENE	1	ACXG07-08610	←	
	95	FOAMED POLYSTYRENE	1	ACXG07-08620	←	
	96	FOAMED POLYSTYRENE	1	ACXG07-08380	←	
	97	FOAMED POLYSTYRENE	1	ACXG07-08600	←	
	98	ADH. POLY - E. FOAM	1	ACXG12-40850	←	
$\square$	99	CONTROL BOARD - COMPLETE	1	ACXH11C17160	ACXH11C17180	
$\square$	100	CONTROL BOARD	1	ACXH10-10390	←	
	101	PARTICULAR PLATE	1	ACXD90-30350	←	
	102	U-SHAPED PLATE	1	ACXD62-02950	←	
	103	BOX SHAPED PLATE	1	ACXD66-04340	←	
	104	ELECTRONIC CONTROLLER	1	ACXA74C06410	ACXA74C06420	0
	105	MACHINE SCREW & WASHER ASSY	2	XTB3+8CFJ	←	
$\wedge$	106	CIRCUIT BREAKER	1	ACXA18-00021	←	0
	107	U-SHAPED PIECE	1	ACXD72-00940	←	
	108	SELF TAPPING SCREW	1	XTT4+8CFJ	←	
$\wedge$	109	TERMINAL BOARD ASSY	1	A28K1238	←	0
	110	SELF TAPPING SCREW (TERMINAL BOARD)	1	XTT4+12CFJ	←	
	111	INDICATION LABEL (L1, L2, L3, N)	1	ACXF71-35080	←	
	112	INDICATION LABEL (CONNECTING CABLE)	1	ACXF71-31170	←	
	113	HOLDER - P.S. CORD	1	H31103	←	
	114	SELF TAPPING SCREW	2	XTT4+16GFJ	←	
	115	HOLDER - P.S. CORD	1	H31042	←	
	116	WASHER	2	H57094	←	
	117	SELF TAPPING SCREW	1	XTT4+8FFJ	←	
	118	TERMINAL BOARD ASSY	1	A28K1064J	←	
	119	SELF TAPPING SCREW	1	XTN4+20CFJ	←	
$\wedge$	120	CAUTION LABEL	1	ACXF75-14410	<i>←</i>	0
$\triangle$	121	LEAD WIRE - COMPLETE	1	ACXA61C01090	←	0
$\wedge$	122	LEAD WIRE - COMPLETE	1	ACXA61C01100	←	0
$\wedge$	123	LEAD WIRE - COMPLETE	1	ACXA61C01780	←	0
	124	LEAD WIRE - COMPLETE	1	ACXA61C01120	←	0
$\overline{\mathbb{A}}$	125	LEAD WIRE - COMPLETE	1	ACXA61C03550	←	0
$\overline{\mathbb{A}}$	126	LEAD WIRE - COMPLETE	1	ACXA61C01130	←	0
$\overline{\mathbb{A}}$	127	LEAD WIRE - COMPLETE	1	ACXA61C01140	←	0

SAFETY	REF. NO.	DESCRIPTION & NAME	QTY.	WH- ADC0316M9E82	WH- ADC0316M9E8AN2	REMARK
$\wedge$	128	LEAD WIRE - COMPLETE	2	ACXA61C01150	←	0
$\wedge$	129	ELECTRONIC CONTROLLER (ANODE)	1	-	ACXA73-48210-W	0
$\mathbb{V}$	130	LEAD WIRE - COMPLETE	1	-	ACXA61C01030	0
$\wedge$	131	LEAD WIRE - COMPLETE	1	-	ACXA61C01240	0
$\mathbf{v}$	132	LEAD WIRE - COMPLETE	1	-	ACXA60C96020	0
	133	CONTROL BOARD COVER	1	ACXH13-09660	←	
$\land$	134	LEAD WIRE - COMPLETE (NETWORK ADAPTOR CN-CNT2)	1	ACXA61C01190	←	0
$\triangle$	135	WIRING DIAGRAM	1	ACXF29-01020	ACXF29-01030	
	136	INDICATION LABEL	1	ACXF71-35090	←	
$\wedge$	137	CAUTION LABEL	1	ACXF75-15040	←	
	138	CABINET SIDE PLATE - LEFT	1	ACXE04-13290A	←	
	139	CABINET SIDE PLATE - RIGHT	1	ACXE04-13300A	←	
	140	CABINET REAR PLATE	1	ACXE02-03610	←	
	141	PACKING	2	ACXB81-00030	←	
	142	PACKING	2	ACXB81-00040	←	
	143	HANDLE	2	ACXE16-00300	←	
	144	SCREW	2	ACXH55-07220	←	
	145	CABINET TOP PLATE	1	ACXE03-05040	←	
	146	INDICATION LABEL (CIRCUIT CONNECTION LABEL)	1	ACXF71-34610	←	
	147	INDICATION LABEL (SHOWER CONNECTION LABEL)	1	ACXF71-34620	←	
$\wedge$	148	REMOTE CONTROL SWITCH - COMPLETE	1	ACXA75C26380	←	0
	149	LEAD WIRE - COMPLETE (CONTROL PANEL)	1	ACXA60C99510	←	0
	150	BOX SHAPED PLATE	1	ACXD66-03970	←	
	151	SELF TAPPING SCREW	2	XTB4+8CFJ	←	
	152	SELF TAPPING SCREW	4	XTB4+8FFJ	←	
	153	CABINET FRONT PLATE	1	ACXE06-05161A	←	
	154	PACKING	1	ACXB81-07400	←	
	155	DECORATION BASE ASSY	1	ACXE35K03630	←	
	156	DECORATION BASE ASSY	1	ACXE35K03640	←	
	157	INDICATION LABEL (AQUARE SMART CLOUD)	1	ACXF71-03400	←	
	158	ACCESSORY - ADJUSTABLE FEET	1	H82C2112	←	
	159	ACCESSORY - DRAIN ELBOW	1	G87C900	←	
	160	INSTALLATION INSTRUCTION COMPLETE	1	ACXF60C20290	ACXF60C20860	0
	161	MODEL LABEL	2	ACXF87-14890	ACXF87-14940	0
	162	NAME PLATE	1	ACXF09-09390	ACXF09-09400	0
	163	INDICATION LABEL (PRODUCTION DATE)	1	ACXF70-70060	←	
$\square$	164	INDICATION LABEL (FIRE CAUTION)	1	F746943	←	
	165	BAG	1	ACXG86-04782	←	0
	166	BASE BOARD - COMPLETE	1	ACXG62C02790	←	
	167	CORRUGATED CARDBOARD	1	ACXG57-09490	←	
	168	SHOCK ABSORBER	1	ACXG70-15200	←	
	169	TOP BOARD COMPLETE	1	ACXG60C00300	←	


SAFETY	REF. NO.	DESCRIPTION & NAME	QTY.	WH- ADC0316M9E82	WH- ADC0316M9E8AN2	REMARK
	170	CORRUGATED CARDBOARD	1	ACXG57-12320	←	
	171	SHOCK ABSORBER	2	ACXG70-15210	←	
	172	SHOCK ABSORBER	4	G713134	←	
	173	C.C. CASE	1	ACXG50-61792	←	0
	174	INDICATION LABEL	4	ACXF71-09051	←	
	175	INDICATION LABEL	1	ACXF71-09061	←	


- All parts are supplied from PHVACCZ, Czech (Vendor Code: 00029407).
- "O" marked parts are recommended to be kept in stock.


## 21.2 Outdoor Unit

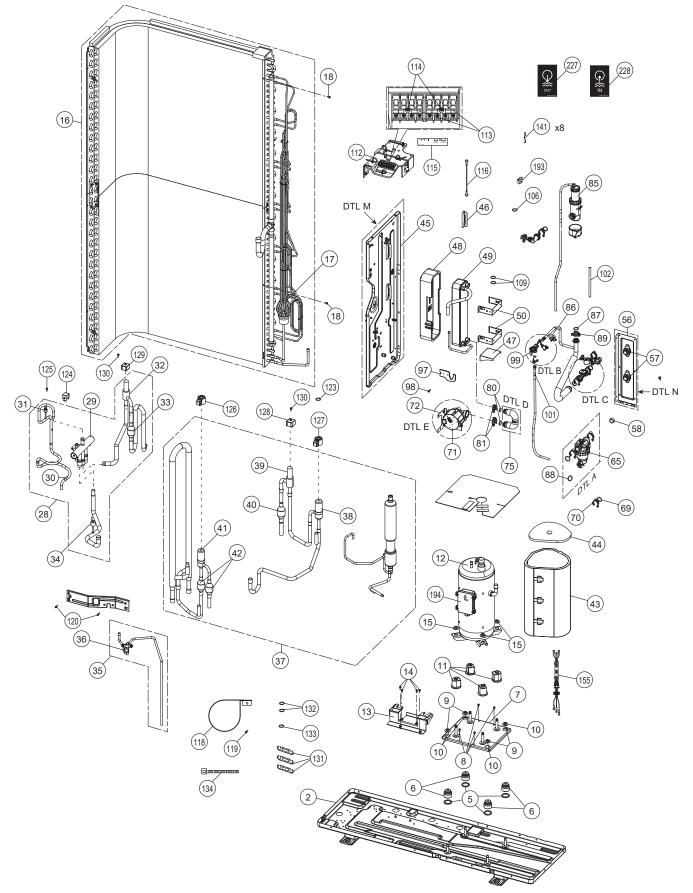


## Note:

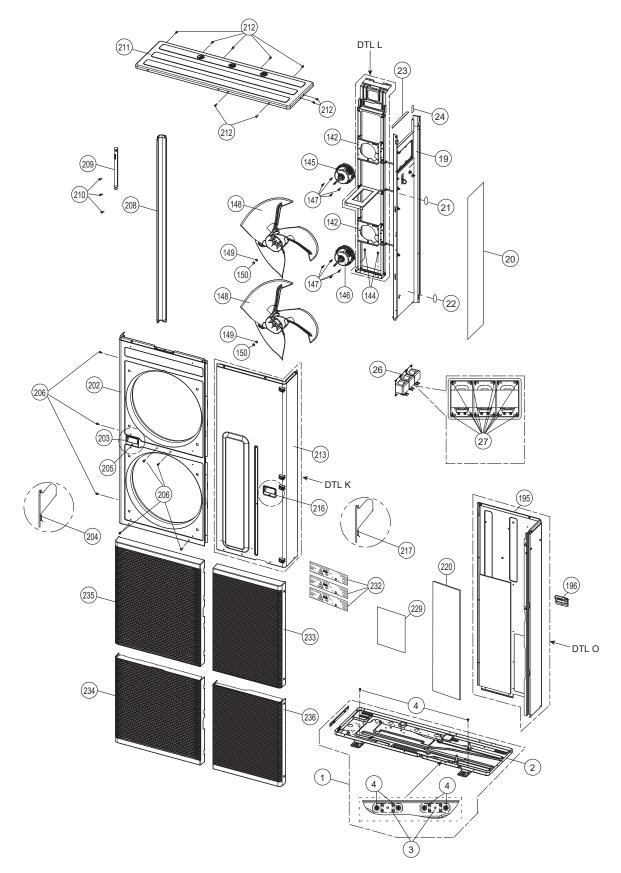

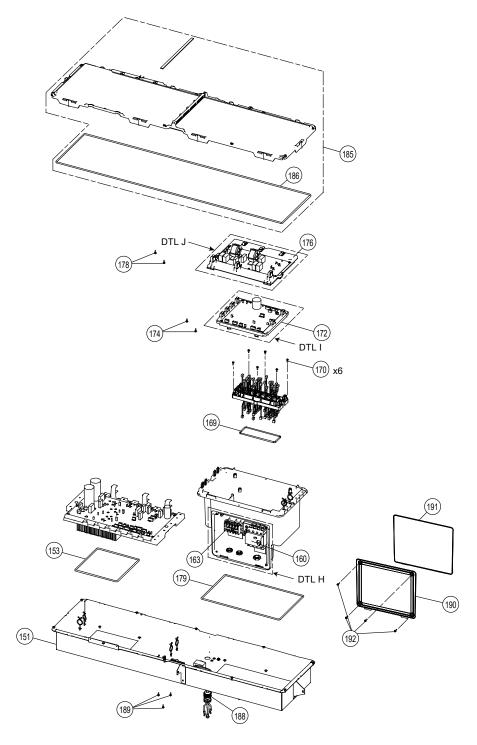

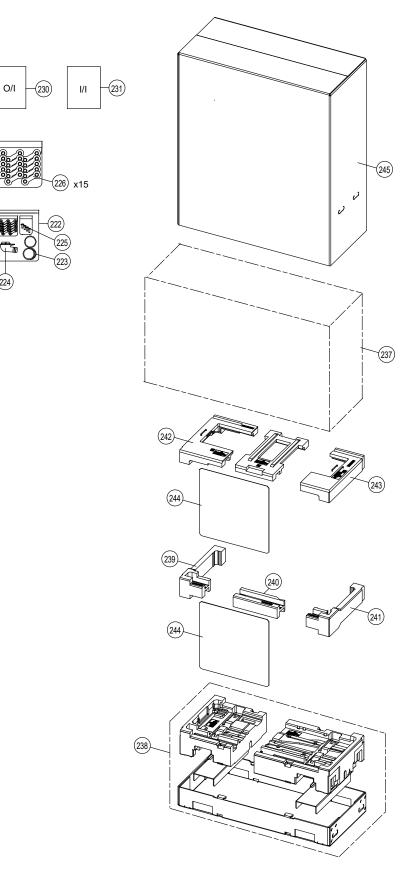


The above exploded view is for the purpose of parts disassembly and replacement. The non-numbered parts are not kept as standard service parts.

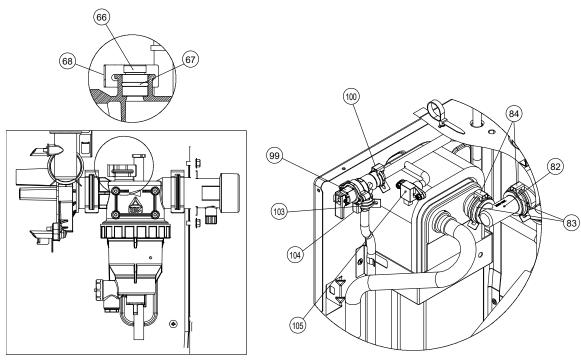



DTL A


DTL B

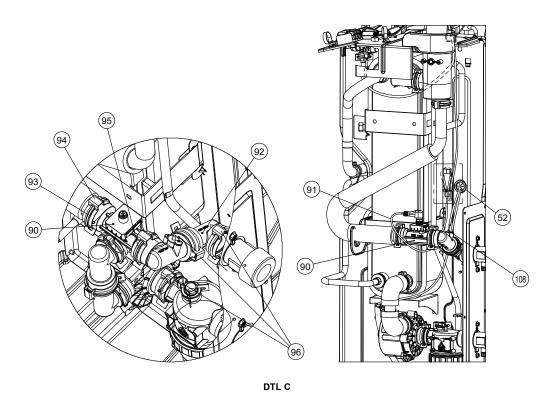



Note:

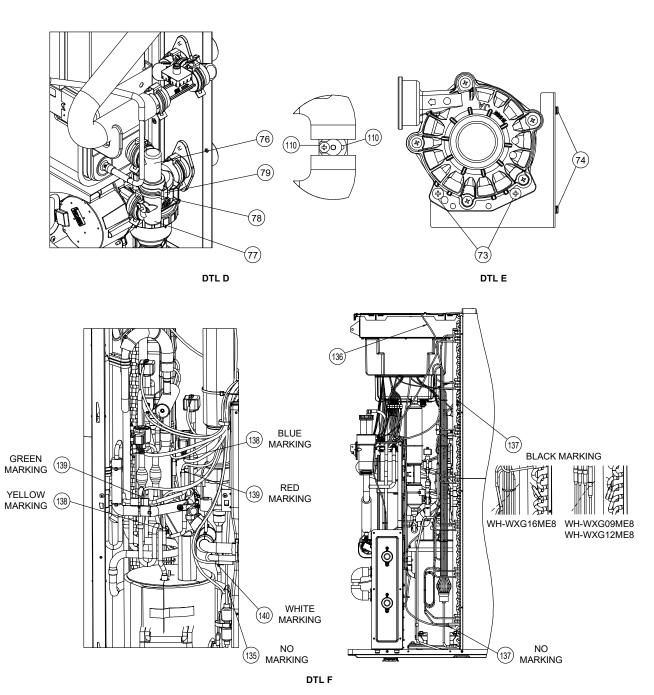

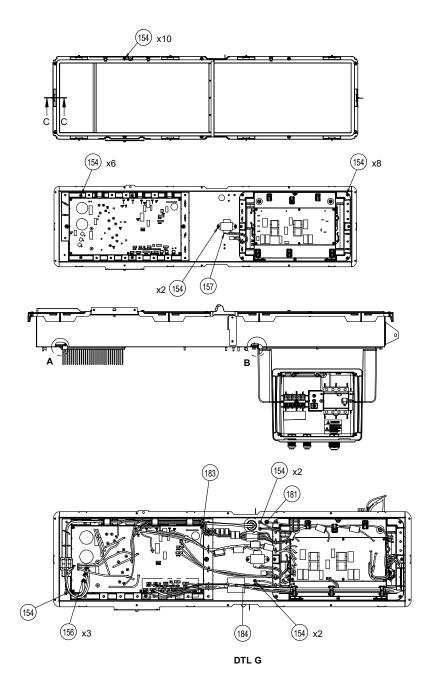


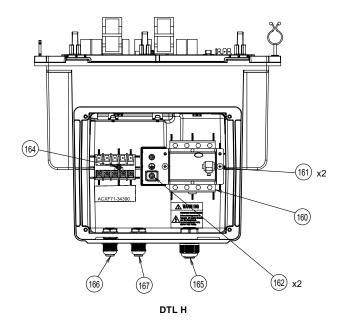

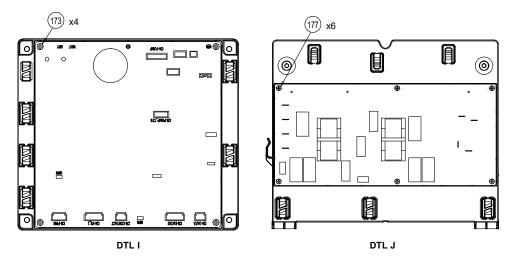


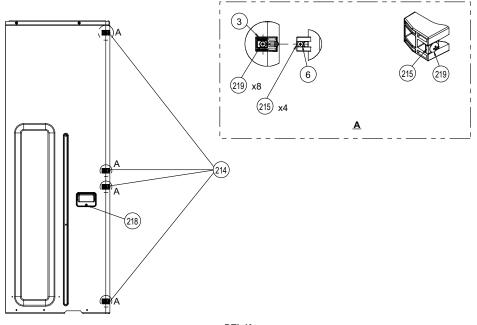


DTL K

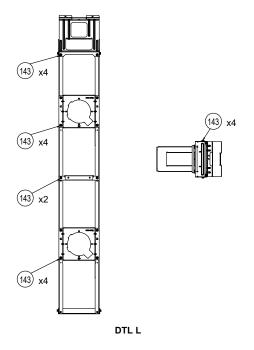


## Note:

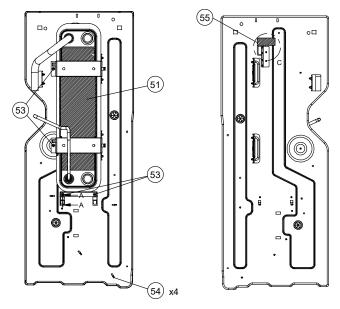


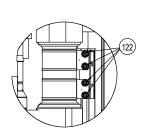

DTL M

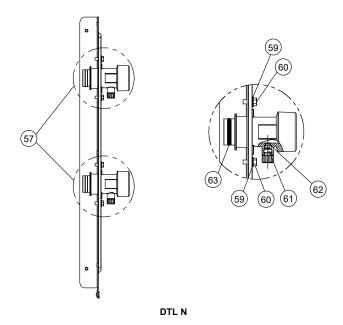


#### Note:

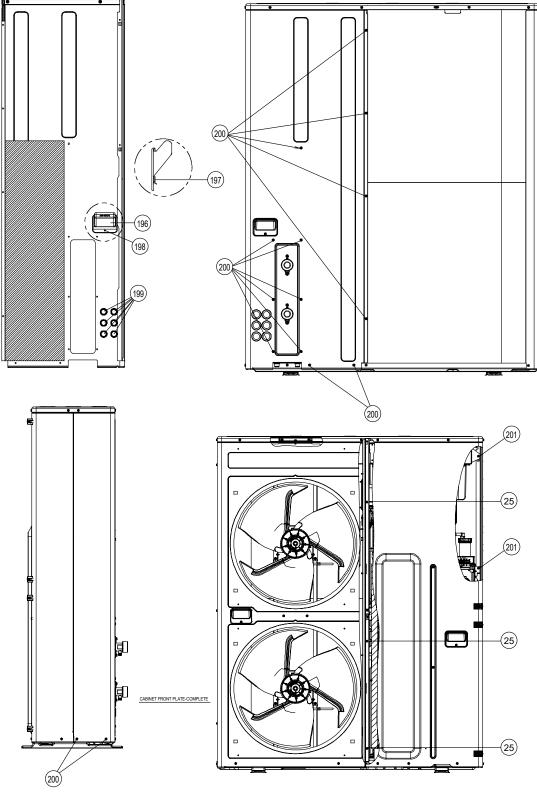


DTL O

Note:

The above exploded view is for the purpose of parts disassembly and replacement. The non-numbered parts are not kept as standard service parts.

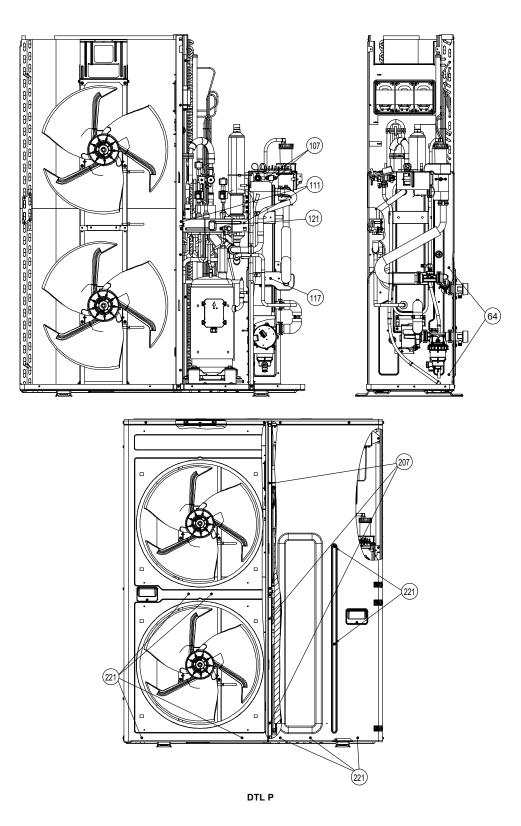

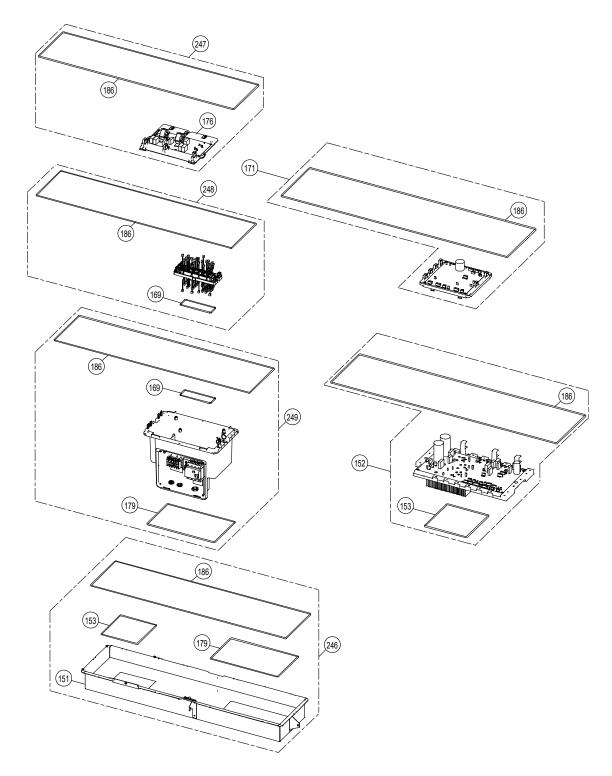

SAFETY	REF. NO.	DESCRIPTION & NAME	QTY.	WH-WXG09ME8	WH-WXG12ME8	WH-WXG16ME8	REMARK
	1	BASE PAN - COMPLETE	1	ACXD52C01870	←	←	
	2	BASE PAN ASSY	1	ACXD52K05580	$\leftarrow$	$\leftarrow$	
	3	CONVEX PIECE	2	ACXD75-00710	$\leftarrow$	$\rightarrow$	
	4	SCREW	6	H551040J	<i>←</i>	←	
	5	PACKING	4	B811017	<i>~</i>	<i>~</i>	
	6	ANTI - VIBRATION BUSHING	4	ACXH50-00480	<del>~</del>	<del>~</del>	
	7	FLAT PLATE	1	ACXD64-01770	<i>←</i>	←	
	8	SCREW	4	ACXH55-08360	<i>←</i>	←	
	9	NUT	4	H561049	<i>~</i>	<i>~</i>	
	10	PACKING	4	ACXB81-07660	<del>~</del>	←	
	11	ANTI - VIBRATION BUSHING	4	H501113	<del>~</del>	←	
Ŵ	12	COMPRESSOR	1	ACXB09-09930	←	←	0
	13	CONNECTING BAR ASSY	1	ACXE26K00011A	<del>~</del>	←	
	14	SCREW	4	H551040J	←	←	
	15	NUT	4	H561049	←	←	
	16	FIN & TUBE CONDENSER COMPLETE (U & L)	1	ACXB32C29731	←	ACXB32C28551	0
	17	MANIFOLD TUBE ASSY	1	ACXT07K11430	<del>~</del>	ACXT07K11420	
	18	SCREW	2	ACXH55-07140	<i>~</i>	<i>~</i>	
	19	SOUND - PROOF BOARD	1	ACXH15-04300	<del>~</del>	<i>←</i>	
	20	SOUND PROOF MATERIAL	1	ACXG30-14870	<del>~</del>	<i>←</i>	
	21	PACKING	1	ACXB81-00030	<del>~</del>	←	
	22	CAP	1	H521180	<del>~</del>	<del>~</del>	
	23	EPT SEAL	1	ACXD3A15-440	←	←	
	24	POLY - E. FOAM	1	ACXE5A45-80	←	←	
	25	SCREW	3	ACXH55-07140	←	←	
	26	FIXED INDUCTORS	3	G0C392J00060	←	←	
	27	SCREW	12	ACXH55-07140	←	$\leftarrow$	
Ŵ	28	4-WAYS VALVE COMPLETE	1	ACXB00C03631	←	←	0
	29	4-WAYS VALVE	1	ACXB00-01530	←	←	0
	30	STRAIGHT TUBE	1	T102044	←	←	
Ŵ	31	PRESSURE SWITCH	1	ACXA10-00710	←	←	0
	32	2-WAYS VALVE	1	ACXB02-04110	←	$\leftarrow$	0
	33	STRAINER	1	B111032	←	←	
	34	HIGH PRESSURE SENSOR	1	ACXA50-06870	←	←	0
	35	TUBE ASSY	1	ACXT00-87530	←	←	
	36	2-WAYS VALVE	1	ACXB02-03960	←	←	0
	37	TUBE ASSY	1	ACXT00-87710	<i>←</i>	ACXT00-87540	
	38	EXPANSION VALVE (SUB EXP. VALVE)	1	ACXB05-01580	←	←	0
	39	2-WAYS VALVE	1	ACXB02-04110	←	←	0
	40	STRAINER	1	B111032	<i>←</i>	←	

SAFETY	REF. NO.	DESCRIPTION & NAME	QTY.	WH-WXG09ME8	WH-WXG12ME8	WH-WXG16ME8	REMARK
	41	EXPANSION VALVE (MAIN EXP. VALVE)	1	ACXB05-01570	←	<i>←</i>	0
	42	STRAINER	2	B111032	←	<i>←</i>	
	43	SOUND PROOF MATERIAL - COMP. BODY	1	ACXG30-14830	←	<i>←</i>	
	44	SOUND PROOF MATERIAL - COMP. TOP	1	ACXG30-14840	←	<i>←</i>	
	45	SOUND - PROOF BOARD	1	ACXH15-04310	←	<i>←</i>	
	46	L-PIECE	1	ACXD70-02530	←	←	
	47	PARTICULAR PLATE	1	ACXD90-30940	←	←	
	48	FOAMED POLYSTYRENE	1	ACXG07-08650	←	ACXG07-08660	
$\Lambda$	49	HOT WATER COIL - COMPLETE	1	ACXB90C02140	←	ACXB90C02130	
	50	PARTICULAR PLATE	2	ACXD90-30950	←	←	
	51	ADH. POLY - E. FOAM	1	ACXG12-42390	←	ACXE2A40-140	
	52	BUSHING	2	ACXH51-01760	←	←	
	53	SCREW	4	ACXH55-07140	←	←	
	54	BAND	4	4605008	←	←	
	55	POLY - E. FOAM	1	ACXE15A25-60	←	←	
	56	HOLDER - COUPLING	1	ACXH35-02360	←	←	
	57	TUBE CONNECTER	2	ACXT29-01030	←	←	
	58	CAP	1	ACXH52-03610	←	←	
	59	TOOTHED LOCK WASHER	4	XWC5BV	←	←	
	60	SCREW	4	H551049J	←	←	
	61	PLUG	2	B821027	←	←	
$\mathbf{v}$	62	PACKING	2	ACXB81-06770	←	←	
	63	PACKING	2	ACXB81-06910	←	←	
	64	SCREW	2	ACXH55-07140	←	←	
	65	FILTER COMPLETE	1	ACXB51C00110	←	←	0
	66	PLUG	1	ACXB82-00840	←	←	
$\mathbf{V}$	67	PACKING	1	ACXB81-06810	←	←	
	68	RETAINING RING (14-23)	1	H581038	←	←	
	69	PACKING	1	ACXB81-06910	←	<i>←</i>	
	70	RETAINING RING (25.4)	1	ACXH58-00370	←	<i>←</i>	
$\wedge$	71	PUMP	1	ACXB53-01000	←	←	0
	72	PARTICULAR PLATE	1	ACXD90-30970	←	←	
	73	SELF TAPPING SCREW	2	XTT4+16CFJ	←	←	
	74	SCREW	2	ACXH55-07140	←	<i>←</i>	
	75	U-SHAPED TUBE - COMPLETE	1	ACXT23C00180	←	ACXT00C49270	
	76	L-SHAPED TUBE	1	ACXT20-13860	←	-	
	77	L-SHAPED TUBE	1	ACXT20-14150	←	-	
	78	PACKING	1	ACXB81-06910	←	-	
	79	RETAINING RING (25.4)	1	ACXH58-00370	←	-	
	80	PACKING	2	ACXB81-06910	←	←	

SAFETY	REF. NO.	DESCRIPTION & NAME	QTY.	WH-WXG09ME8	WH-WXG12ME8	WH-WXG16ME8	REMARK
	81	RETAINING RING (25.4)	2	ACXH58-00370	$\leftarrow$	$\leftarrow$	
	82	L-SHAPED TUBE	1	ACXT20-15030	←	ACXT20-15330	
	83	PACKING	2	ACXB81-06910	<i>←</i>	←	
	84	RETAINING RING (25.4)	2	ACXH58-00370	<i>←</i>	←	
	85	FILTER COMPLETE	1	ACXB51C00160	←	$\leftarrow$	0
	86	TUBE ASSY COMPLETE INHOUSE	1	ACXT00C49260	←	ACXT00C49250	
	87	PACKING	2	ACXB81-06910	←	ACXB81-06900	
$\mathbf{V}$	88	PACKING	1	ACXB81-06820	←	$\leftarrow$	
	89	RETAINING RING (25.4)	2	ACXH58-00370	←	$\leftarrow$	
$\mathbb{V}$	90	FLOW SENSOR (VALVE BODY)	1	ACXB62-00912	←	$\leftarrow$	0
$\triangle$	91	LEAD WIRE - COMPLETE (FLOW SENSOR)	1	ACXA61C04000	←	←	0
	92	U-SHAPED TUBE - COMPLETE	1	ACXT23C00170	←	←	
	93	PACKING	1	ACXB81-06910	←	$\rightarrow$	
	94	RETAINING RING (25.4)	1	ACXH58-00370	←	$\rightarrow$	
	95	PACKING	1	ACXB81-06910	<i>←</i>	←	
	96	RETAINING RING (25.4)	3	ACXH58-00370	←	←	
	97	PARTICULAR PLATE	1	ACXD90-31030	←	←	
	98	SCREW	1	ACXH55-07140	←	←	
$\land$	99	VALVE BODY (PRESSURE RELIEF VALVE)	1	ACXB62-01320	←	←	0
	100	RETAINING RING (14-23)	1	H581038	←	$\leftarrow$	
	101	TUBE ASSY	1	ACXT00-85820	←	$\rightarrow$	
	102	STRAIGHT TUBE	1	ACXT10-21230	←	$\rightarrow$	
$\mathbf{v}$	103	PACKING	1	ACXB81-06820	←	$\rightarrow$	
	104	RETAINING RING (14-23)	1	H581038	←	$\rightarrow$	
$\wedge$	105	SENSOR - COMPLETE (WATER PRESSURE SENSOR CN-DPS)	1	ACXA50C20090	←	←	0
$\Lambda$	106	PACKING	1	ACXB81-06790	<i>←</i>	←	
	107	SCREW	2	H55406J	<i>←</i>	←	
$\square$	108	SENSOR - COMPLETE (WATER OUTLET SENSOR 2 & WATER INLET TEMP. SENSOR CN-TH3)	1	ACXA50C20630	←	←	0
$\Lambda$	109	PACKING	2	ACXB81-06780	←	←	
	110	SELF TAPPING SCREW	2	XTT4+8CFJ	<i>←</i>	←	
	111	SCREW	2	ACXH55-07140	<i>←</i>	←	
	112	PARTICULAR PLATE	1	ACXD90-30930	<i>←</i>	←	
$\wedge$	113	TERMINAL BOARD ASSY	2	ACXA28K02540	←	←	0
	114	SELF TAPPING SCREW	2	XTN4+16CFJ	<i>←</i>	←	
	115	INDICATION LABEL (TERMINAL)	1	ACXF71-34380	<i>←</i>	←	
	116	LEAD WIRE - COMPLETE (OUTDOOR UNIT STAND ALONE CONNECTION)	1	ACXA61C00650	←	←	0
	117	SCREW	2	ACXH55-07140	←	←	
	118	PARTICULAR PLATE	1	ACXD90-30960	<i>←</i>	<i>←</i>	

SAFETY	REF. NO.	DESCRIPTION & NAME	QTY.	WH-WXG09ME8	WH-WXG12ME8	WH-WXG16ME8	REMARK
	119	SCREW	1	ACXH55-07140	$\leftarrow$	←	
	120	SCREW	2	ACXH55-07140	$\leftarrow$	←	
	121	SCREW	2	H55440J	$\leftarrow$	←	
	122	SCREW	4	H55406J	$\leftarrow$	←	
	123	RUBBER	1	G251015	$\leftarrow$	←	
$\triangle$	124	V-COIL COMPLETE (4-WAY VALVE)	1	ACXA43C08090	<del>~</del>	←	0
	125	SCREW	1	H55082J	$\leftarrow$	←	
$\triangle$	126	V-COIL COMPLETE (MAIN EXP. VALVE CN-EV)	1	ACXA43C08100	←	←	0
$\wedge$	127	V-COIL COMPLETE (BYPASS EXP. VALVE CN-INJ)	1	ACXA43C08110	←	$\leftarrow$	0
$\Lambda$	128	V-COIL COMPLETE (DIS/INLET BYPASS 2-WAY VALVE)	1	ACXA43C08120	←	←	0
$\triangle$	129	V-COIL COMPLETE (INJECTION 2-WAY VALVE)	1	ACXA43C08130	<del>~</del>	←	0
	130	SCREW	2	H55082J	$\leftarrow$	$\leftarrow$	
	131	RUBBER	3	ACXG25-02300	$\leftarrow$	$\rightarrow$	
	132	RUBBER	2	G251015	<del>~</del>	←	
	133	RUBBER	1	G251021	$\leftarrow$	$\rightarrow$	
	134	HOSE BAND	1	4090023	$\leftarrow$	$\leftarrow$	
$\Lambda$	135	SENSOR - COMPLETE (OUTDOOR DISCHARGE TEMP SENSOR CN-TH1)	1	ACXA50C20620	←	←	0
$\wedge$	136	SENSOR - COMPLETE (OUTDOOR AMBIENT TEMP. SENSOR CN-TH1)	1	ACXA50C19550	<del>~</del>	←	0
$\wedge$	137	SENSOR - COMPLETE (OUTDOOR HEAT EXCHANGER MIDDLE TEMP. SENSOR CN-TH1)	1	ACXA50C19710	←	$\leftarrow$	0
$\wedge$	138	SENSOR - COMPLETE (BYPASS OUTLET TEMP. SENSOR & EVAP. OUTLET TEMP. SENSOR CN-TH2)	1	ACXA50C19570	<del>~</del>	←	0
$\wedge$	139	SENSOR - COMPLETE (ECONOMIZER OUTLET TEMP. SENSOR CN-TH2)	1	ACXA50C19560	←	←	0
$\wedge$	140	SENSOR - COMPLETE (REFRIGERANT TEMP. SENSOR (CN-TH3)	1	ACXA50C19720	←	←	0
	141	PLATE SPRING	8	H711010	<del>~</del>	←	
	142	FAN MOTOR BRACKET	2	ACXD54-05180	←	←	0
	143	SCREW	18	H551040J	<i>~</i>	←	
	144	SCREW	2	H551040J	<i>←</i>	←	
$\wedge$	145	DC MOTORS (UPPER)	1	L6CBYYYL0475	<del>~</del>	←	0
$\overline{\mathbb{A}}$	146	DC MOTORS (LOWER)	1	L6CBYYYL0476	<i>~</i>	←	0
	147	SCREW	8	H551455	<i>~</i>	←	
	148	FAN ASSY	2	ACXH03K01200	<i>~</i>	←	
	149	WASHER	2	H571075A	<i>~</i>	←	
	150	NUT	2	H561112A	<i>~</i>	←	
	151	CONTROL BOARD ASSY	1	ACXH10K03210A	<b>↓</b>	←	
$\wedge$	152	ELECTRONIC CONTROLLER - COMPLETE	1	ACXA74C07610	ACXA74C07620	ACXA74C07630	0
	153	PACKING	1	ACXB81-07211	←	←	

SAFETY	REF. NO.	DESCRIPTION & NAME	QTY.	WH-WXG09ME8	WH-WXG12ME8	WH-WXG16ME8	REMARK
	154	SCREW	31	H551198	$\leftarrow$	$\rightarrow$	
$\triangle$	155	LEAD WIRE - COMPLETE (COMPRESSOR)	1	ACXA61C00660	←	←	0
	156	MACHINE SCREW & WASHER ASSY	3	XYN4+F10FJ	<del>~</del>	←	
	157	FIXED INDUCTORS	1	G0C103Z00006	<del>~</del>	←	
$\wedge$	160	CIRCUIT BREAKER	1	ACXA18-00021	<del>~</del>	←	0
	161	SELF TAPPING SCREW	2	XTT4+10CFJ	<i>←</i>	←	
	162	MACHINE SCREW & WASHER ASSY	2	XYN5DC10FJ	<del>~</del>	←	
$\wedge$	163	TERMINAL BOARD ASSY	1	A28K1294	<i>←</i>	←	0
	164	SELF TAPPING SCREW	1	XTN4+20CFJ	<del>~</del>	←	
	165	HOLDER - P.S. CORD	1	ACXH31-01640	<i>←</i>	ACXH31-01480	
	166	HOLDER - P.S. CORD	1	ACXH31-01620	<del>~</del>	←	
	167	HOLDER - P.S. CORD	1	ACXH31-01630	←	$\leftarrow$	
	169	PACKING BOX SHAPE PLATE	1	ACXB81-07670	←	←	
	170	SELF TAPPING SCREW	6	XTT4+12CFJ	←	$\leftarrow$	
$\triangle$	171	ELECTRONIC CONTROLLER (SUB)	1	ACXA74C07640	←	$\leftarrow$	0
	172	CONTROL BOARD/SUB	1	ACXH10-10570	←	$\leftarrow$	
	173	SCREW	4	XTB3+8CFJ	←	$\leftarrow$	
	174	SELF TAPPING SCREW	2	XTT4+10CFJ	←	←	
	176	CONTROL BOARD/NF	1	ACXH10-10560	←	←	
	177	SCREW	6	XTB3+8CFJ	←	←	
	178	SELF TAPPING SCREW	2	XTT4+10CFJ	←	←	
	179	PACKING	1	ACXB81-07680	<i>←</i>	←	
	181	SCREW	1	H551040J	<i>←</i>	←	
$\triangle$	183	LEAD WIRE - COMPLETE (L1-IN, L2-IN, L3-IN, N-IN)	1	ACXA61C00670	←	←	0
	184	HOSE BAND	1	4090023	$\leftarrow$	$\leftarrow$	
	185	CONTROL BOARD COVER - COMPLETE	1	ACXH13C06720	←	$\rightarrow$	
	186	PACKING	1	ACXB81-07690	<del>~</del>	←	
	188	HOLDER - P.S. CORD	1	ACXH31-01650	←	←	
	189	SCREW	3	ACXH55-00120	←	$\leftarrow$	
	190	CONTROL BOARD COVER - COMPLETE	1	ACXH13C06650	←	←	
	191	PACKING	1	ACXB81-07650	<i>←</i>	←	
	192	MACHINE SCREW & WASHER ASSY	4	XYN4+F10FJ	<i>←</i>	←	
	193	HOLDER - SENSOR	1	ACXH32-01480	←	←	
	194	SOUND PROOF MATERIAL	1	ACXG30-14880	←	←	
	195	CABINET SIDE PLATE - COMPLETE (R)	1	ACXE04C09050	←	←	
	196	HANDLE	1	ACXE16-00230G	←	←	
	197	EPT SEAL	1	ACXD3A10-92	<i>←</i>	←	
	198	SCREW	1	ACXH55-07980	<i>←</i>	←	
	199	CAP (CABINET SIDE PLATE)	6	ACXH52-04230G	<i>←</i>	←	

SAFETY	REF. NO.	<b>DESCRIPTION &amp; NAME</b>	QTY.	WH-WXG09ME8	WH-WXG12ME8	WH-WXG16ME8	REMARK
	200	SCREW	15	ACXH55-07980	<i>~</i>	$\leftarrow$	
	201	SCREW	2	ACXH55-07140	←	←	
	202	CABINET FRONT PLATE (L)	1	ACXE06-05620	<del>~</del>	←	
	203	HANDLE	1	ACXE16-00230G	<del>~</del>	←	
	204	EPT SEAL	1	ACXD3A10-92	←	←	
	205	SCREW	1	ACXH55-07980	<del>~</del>	←	
	206	SCREW	7	ACXH55-07980	<i>~</i>	←	
	207	SCREW	5	ACXH55-07140	<del>~</del>	←	
	208	CABINET SIDE PLATE (L)	1	ACXE04-13910	<del>~</del>	←	
	209	PARTICULAR PLATE	1	ACXD90-29140	<del>~</del>	←	
	210	SCREW	3	ACXH55-07740	←	←	
	211	CABINET TOP PLATE - COMPLETE	1	ACXE03C02510	←	$\leftarrow$	
	212	SCREW	9	ACXH55-07980	←	$\leftarrow$	
	213	CABINET FRONT PLATE (R)	1	ACXE06-05630	←	$\leftarrow$	
	214	PARTICULAR PIECE	4	ACXD93-25230	←	←	
	215	NUT	4	ACXH56-00120	←	←	
	216	HANDLE	1	ACXE16-00230G	←	←	
	217	EPT SEAL	1	ACXD3A10-92	←	←	
	218	SCREW	1	ACXH55-07980	←	←	
	219	SCREW	8	ACXH55-07740	←	←	
	220	SOUND PROOF MATERIAL	1	ACXG30-14860	←	←	
	221	SCREW	9	ACXH55-07980	←	←	
	222	ACCESSORY - COMPLETE	1	ACXH82C29860	←	←	
	223	CAP (OR PART ACXH52-01980)	3	ACXH52-04310	←	←	
	224	DRAIN NOZZLE	1	ACXH41-00700	<i>←</i>	←	
	225	SCREW	8	H551198	<i>←</i>	←	
	226	CAP (ACCESSORY - COMPLETE CAP)	15	ACXH52-04470	←	←	
	227	INDICATION LABEL (OUT)	1	ACXF71-25700	<i>~</i>	←	
	228	INDICATION LABEL (IN)	1	ACXF71-25710	<del>~</del>	←	
	229	CAUTION LABEL (CONTROL BOARD COVER)	1	ACXF71-34831	←	←	
	230	OPERATING INSTRUCTION - COMPLETE	1	ACXF55C30530	←	←	0
	231	INSTALLATION INSTRUCTION COMPLETE	1	ACXF60C20620	<i>←</i>	<i>~</i>	0
	232	MODEL LABEL	1	ACXF87-30900	ACXF87-30910	ACXF87-30920	
	233	DISCHARGE GRILLE - COMPLETE (R TOP)	1	ACXE20C09371	<i>←</i>	←	
	234	DISCHARGE GRILLE - COMPLETE (L BOTTOM)	1	ACXE20C09380	<i>←</i>	<i>←</i>	
	235	DISCHARGE GRILLE - COMPLETE (L TOP)	1	ACXE20C09390	<i>←</i>	<i>←</i>	
	236	DISCHARGE GRILLE - COMPLETE (R BOTTOM)	1	ACXE20C09400	<i>←</i>	←	
	237	BAG	1	ACXG86-06800	←	←	

SAFETY	REF. NO.	DESCRIPTION & NAME	QTY.	WH-WXG09ME8	WH-WXG12ME8	WH-WXG16ME8	REMARK
	238	BASE - BOARD COMPLETE	1	ACXG62C03020	←	$\downarrow$	
	239	SHOCK ABSORBER (MIDDLE LEFT)	1	ACXG70-16300	<i>←</i>	←	
	240	SHOCK ABSORBER (MIDDLE)	1	ACXG70-16310	←	$\rightarrow$	
	241	SHOCK ABSORBER (MIDDLE RIGHT)	1	ACXG70-16320	<i>←</i>	←	
	242	SHOCK ABSORBER (UPPER LEFT)	1	ACXG70-15320	<i>←</i>	←	
	243	SHOCK ABSORBER (UPPER RIGHT)	1	ACXG70-15330	<i>←</i>	Ļ	
	244	CORRUGATED CARDBOARD	2	ACXG57-13710	←	$\rightarrow$	
	245	C.C. CASE	1	ACXG50-64400	←	$\downarrow$	0
	246	CONTROL BOARD ASSY	1	ACXH10K03540	<i>←</i>	←	
$\wedge$	247	ELECTRONIC CONTROLLER - COMPLETE	1	ACXA74C10550	←	$\rightarrow$	0
	248	BOX SHAPED PLATE - COMPLETE	1	ACXD66C00840	←	$\leftarrow$	
	249	CONTROL BOARD ASSY	1	ACXH10K03560	←	$\leftarrow$	

- All parts are supplied from PHVACCZ, Czech (Vendor Code: 00029407).
- "O" marked parts are recommended to be kept in stock.